 


Link do produktu: <https://www.specdiag.pl/hitachi-zaxis-170w-koparka-warsztatowe-instrukcje-napraw-dtr-dokumentacja-serwisowa-schematy-hitachi-170-w-p-1841.html>

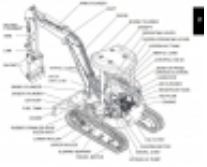

## Hitachi Zaxis 170W koparka - warsztatowe instrukcje napraw / DTR / dokumentacja serwisowa + schematy - Hitachi 170 W

Cena

 
**400,00 zł**

Opis produktu


### Koparka Hitachi Zaxis 170W

Warsztatowe instrukcje napraw wraz ze  
schematami instalacji.

Instrukcje serwisowe, DTR dla Hitachi Zaxis 170  
W.

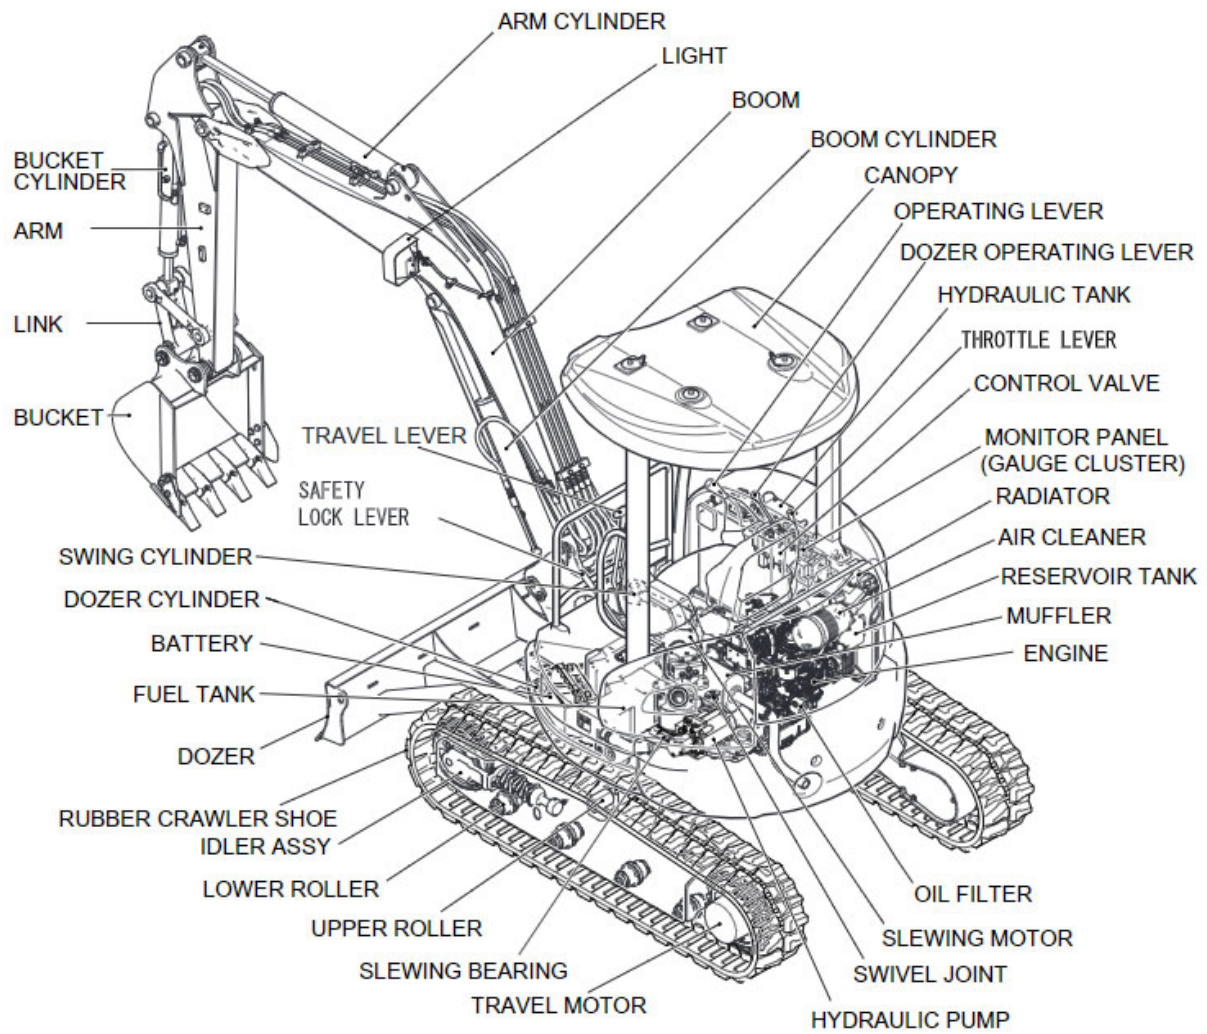

 
- 1) Disengage the water rubber hose from the EGR cooler.

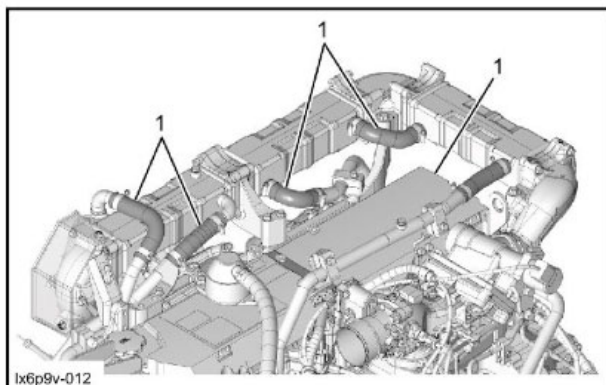

lx6p9v-012

|   |                   |
|---|-------------------|
| 1 | Water rubber hose |
|---|-------------------|

 
- 2) Remove the EGR pipe B from the EGR valve and the EGR cooler C.

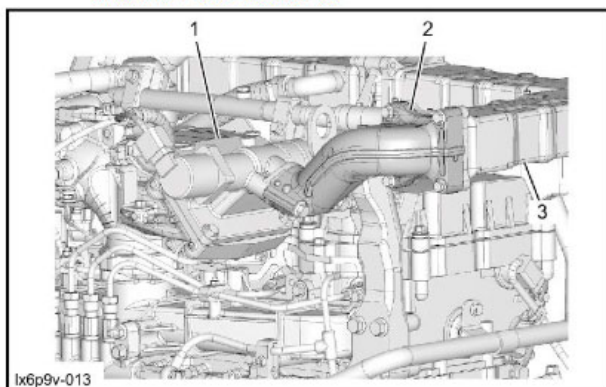

lx6p9v-013

|   |              |
|---|--------------|
| 1 | EGR valve    |
| 2 | EGR pipe B   |
| 3 | EGR cooler C |

 
- 5) Remove the EGR cooler B from the EGR cooler bracket A.
- 6) Remove the EGR cooler bracket A from the EGR cooler A.

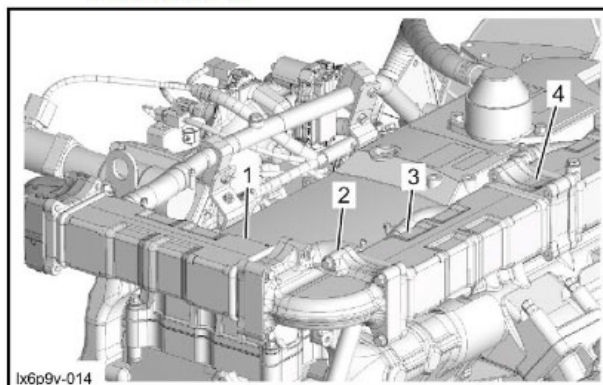

lx6p9v-014


|   |                      |
|---|----------------------|
| 1 | EGR cooler C         |
| 2 | EGR bracket C        |
| 3 | EGR cooler B         |
| 4 | EGR cooler bracket A |

 - 7) Remove the EGR heat protector from the EGR pipe A.

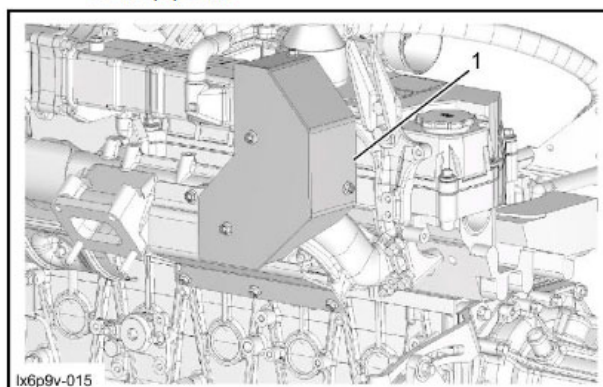


lx6p9v-015

## PRIMARY HYDRAULIC POWER SYSTEM - Exploded view

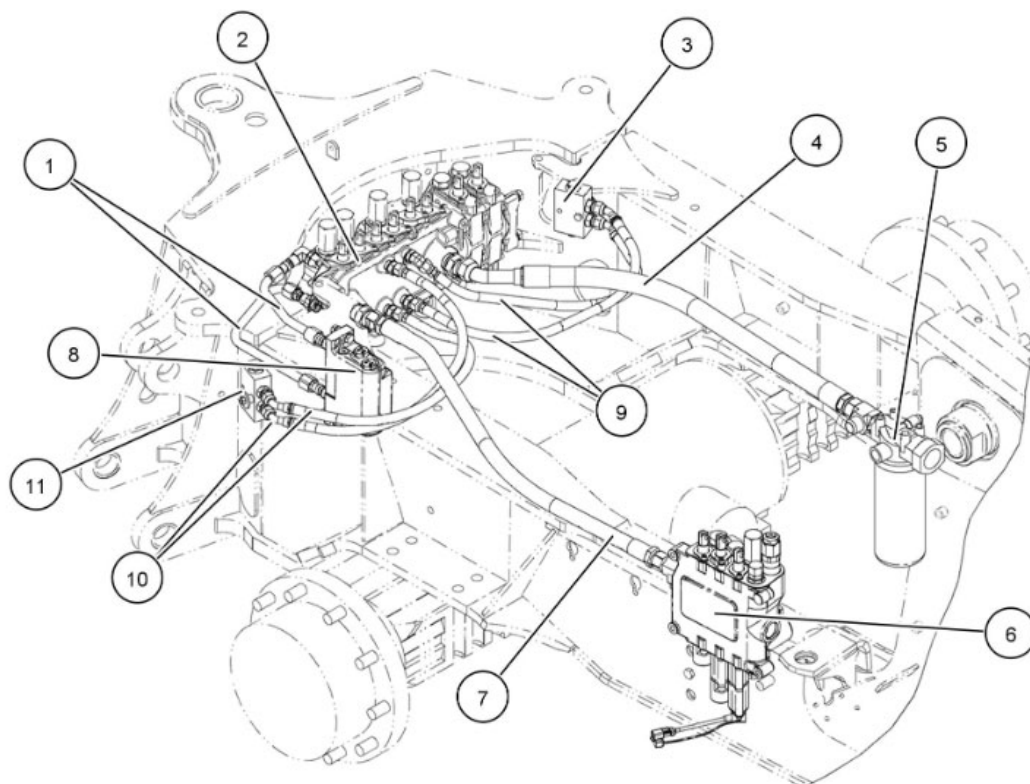 


RCPH10TLB005GAM 1

- |                                     |                              |                                       |
|-------------------------------------|------------------------------|---------------------------------------|
| 1. Hoses swing control              | 5. Hydraulic filter          | 9. Left stabilizer hoses              |
| 2. Backhoe valve                    | 6. Loader valve              | 10. Right stabilizer hoses            |
| 3. Left stabilizer load check valve | 7. Pressure to backhoe valve | 11. Right stabilizer load check valve |
| 4. Return to filter                 | 8. Swing cushion valve       |                                       |

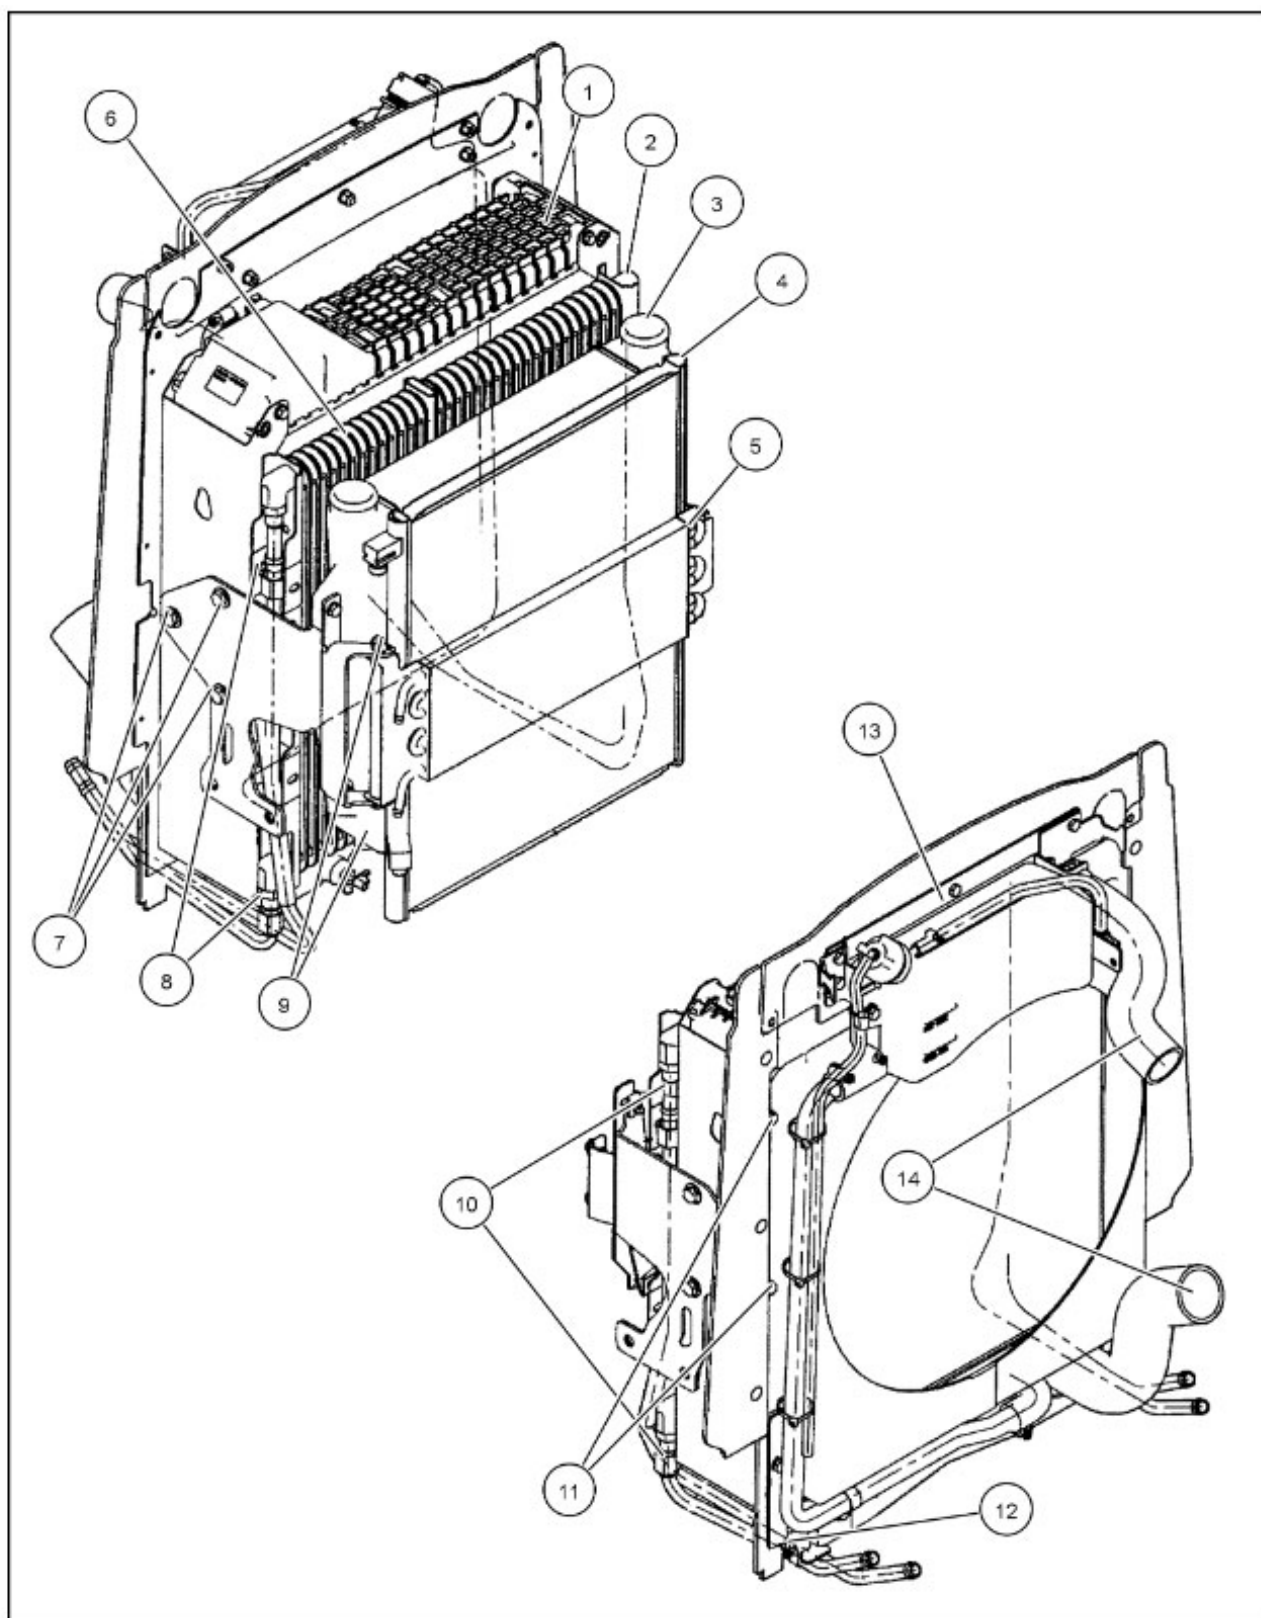 


 7. Remove the charge air cooler hoses and pipes.

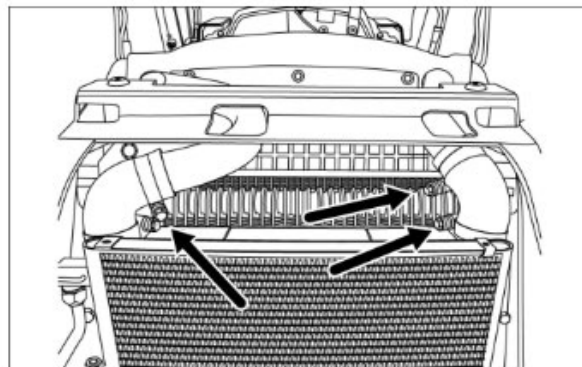


RCPH11TLB015AAM 8

 8. Cap (seal) all open ports to keep contaminants from entering the system.

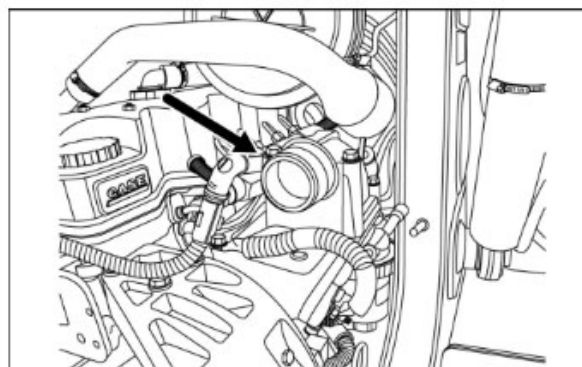


RCPH11TLB015AAM 9

  
9. Remove the lower radiator hose.

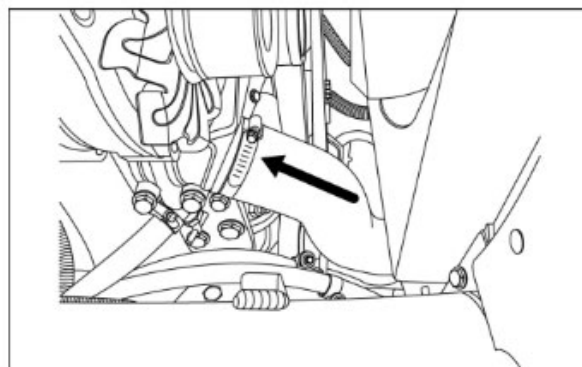



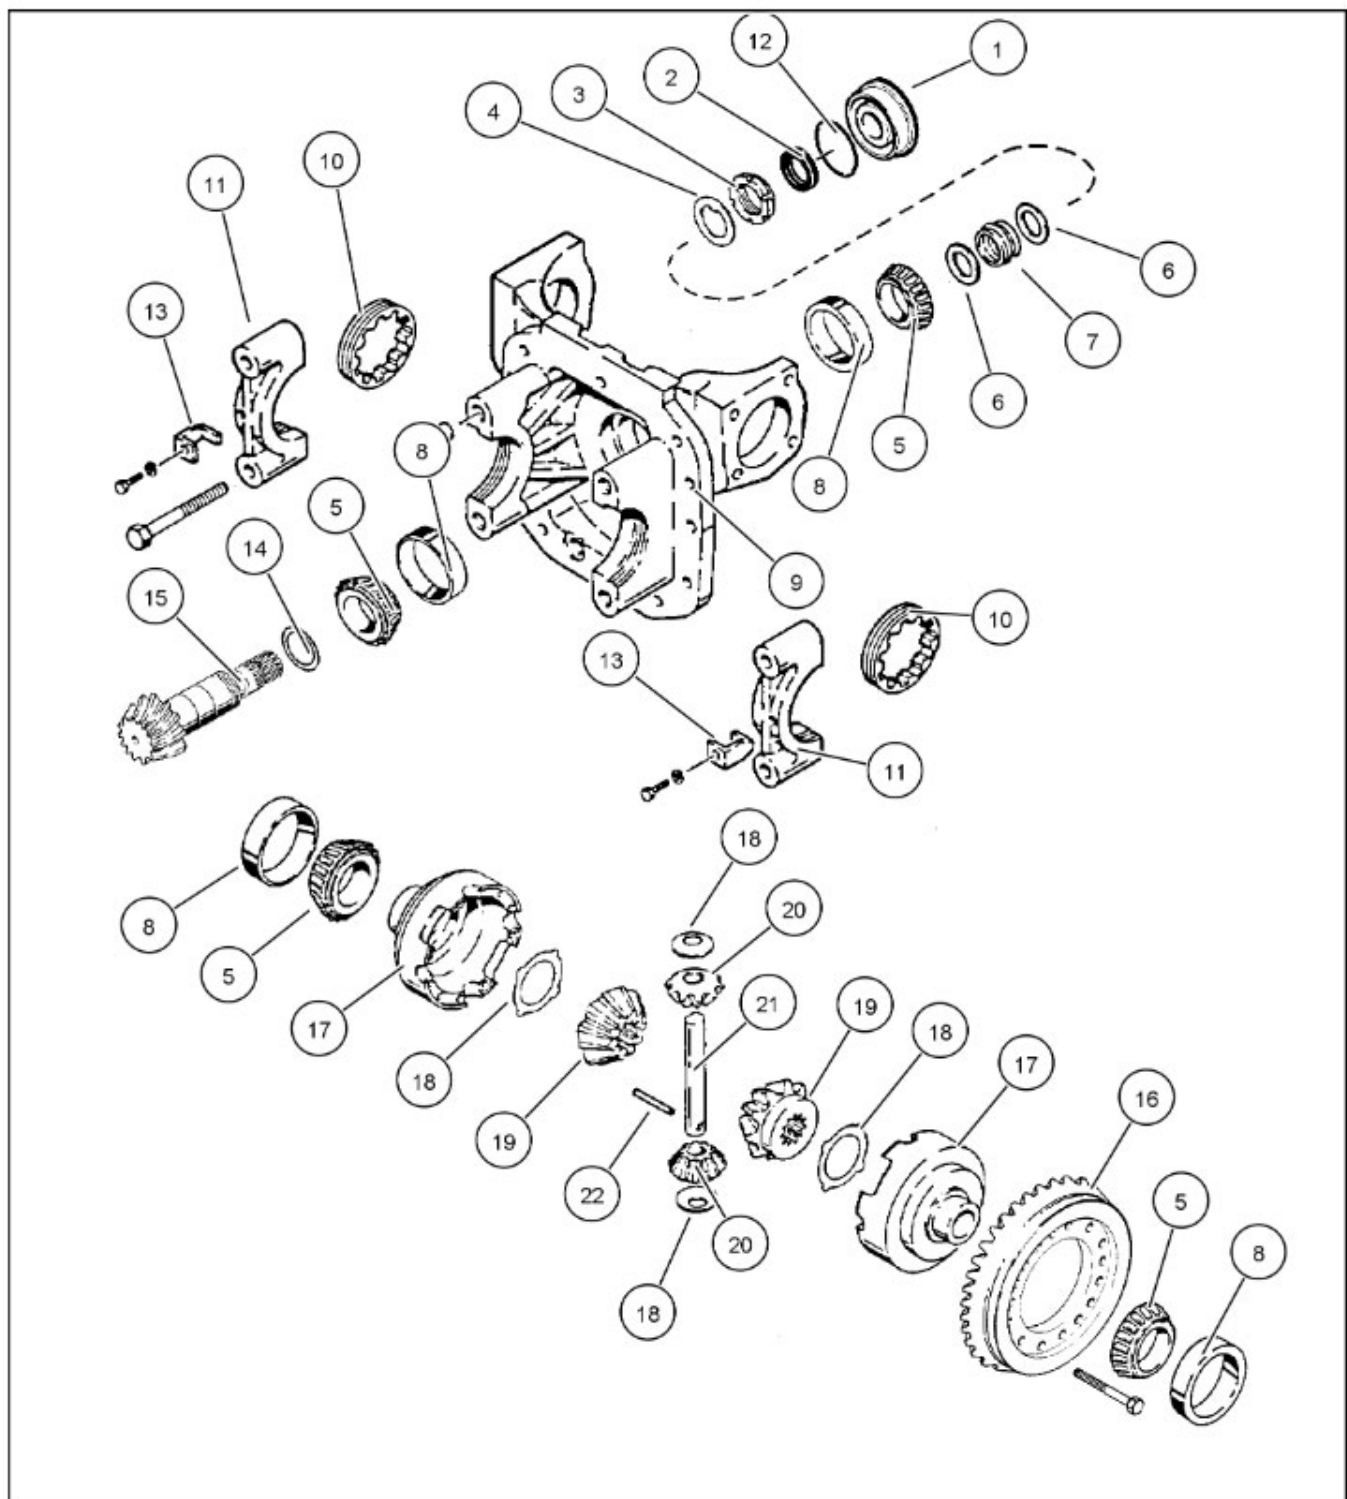


 5. Make sure the bevelled washers are in place, install the upper and lower king pins. Torque the bolts to **120 N·m (88.5 lb ft)**

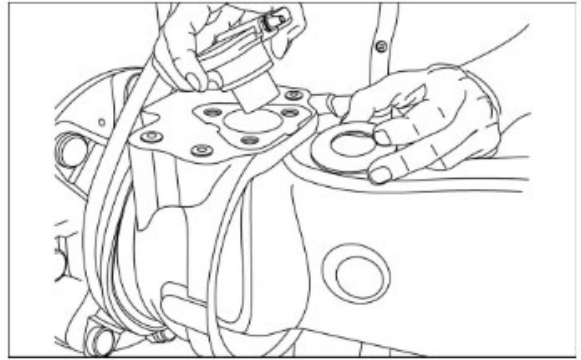


RCPH10TLB002ACL 5

 6. Grease the bearing cone and install it onto the swivel housing.

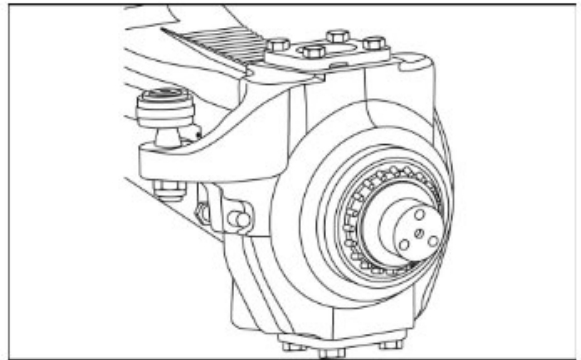


RCPH10TLB007ABL 6

 7. Use suitable drivers and install new bearing cups and seal into wheel hub.

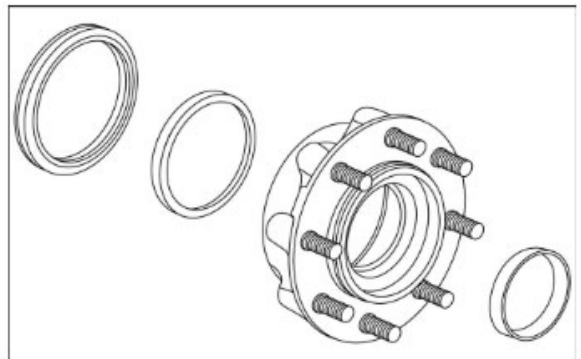

## REMOVING THE TORQUE CONVERTER HOUSING AND TORQUE CONVERTER
 
### STEP 1

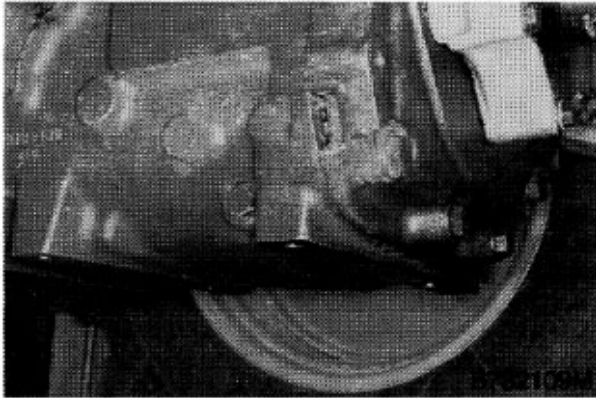

Drain the oil from the transaxle. The transaxle holds approximately 40 U.S. quarts (38 litres). If equipped with a PTO, drain the oil from the torque converter housing.

### STEP 2

 
If the machine has four wheel drive, do steps 3 through 7.

### STEP 3




Loosen and remove the self-locking nuts from the bolts that hold the guard. Do not remove the bolts now.

### STEP 4

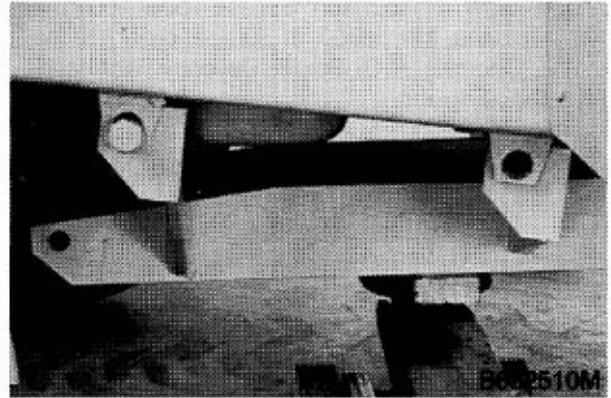

Use a floor jack to hold and lower the guard.


### STEP 5

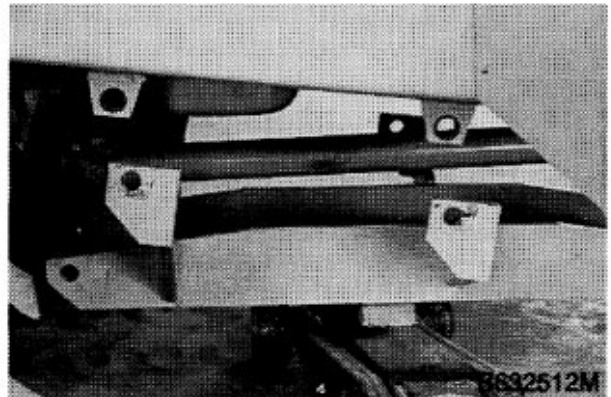 


Remove the bolts and carefully lower the guard.


### STEP 6

  Carefully tilt the guard and remove the guard from under the machine.

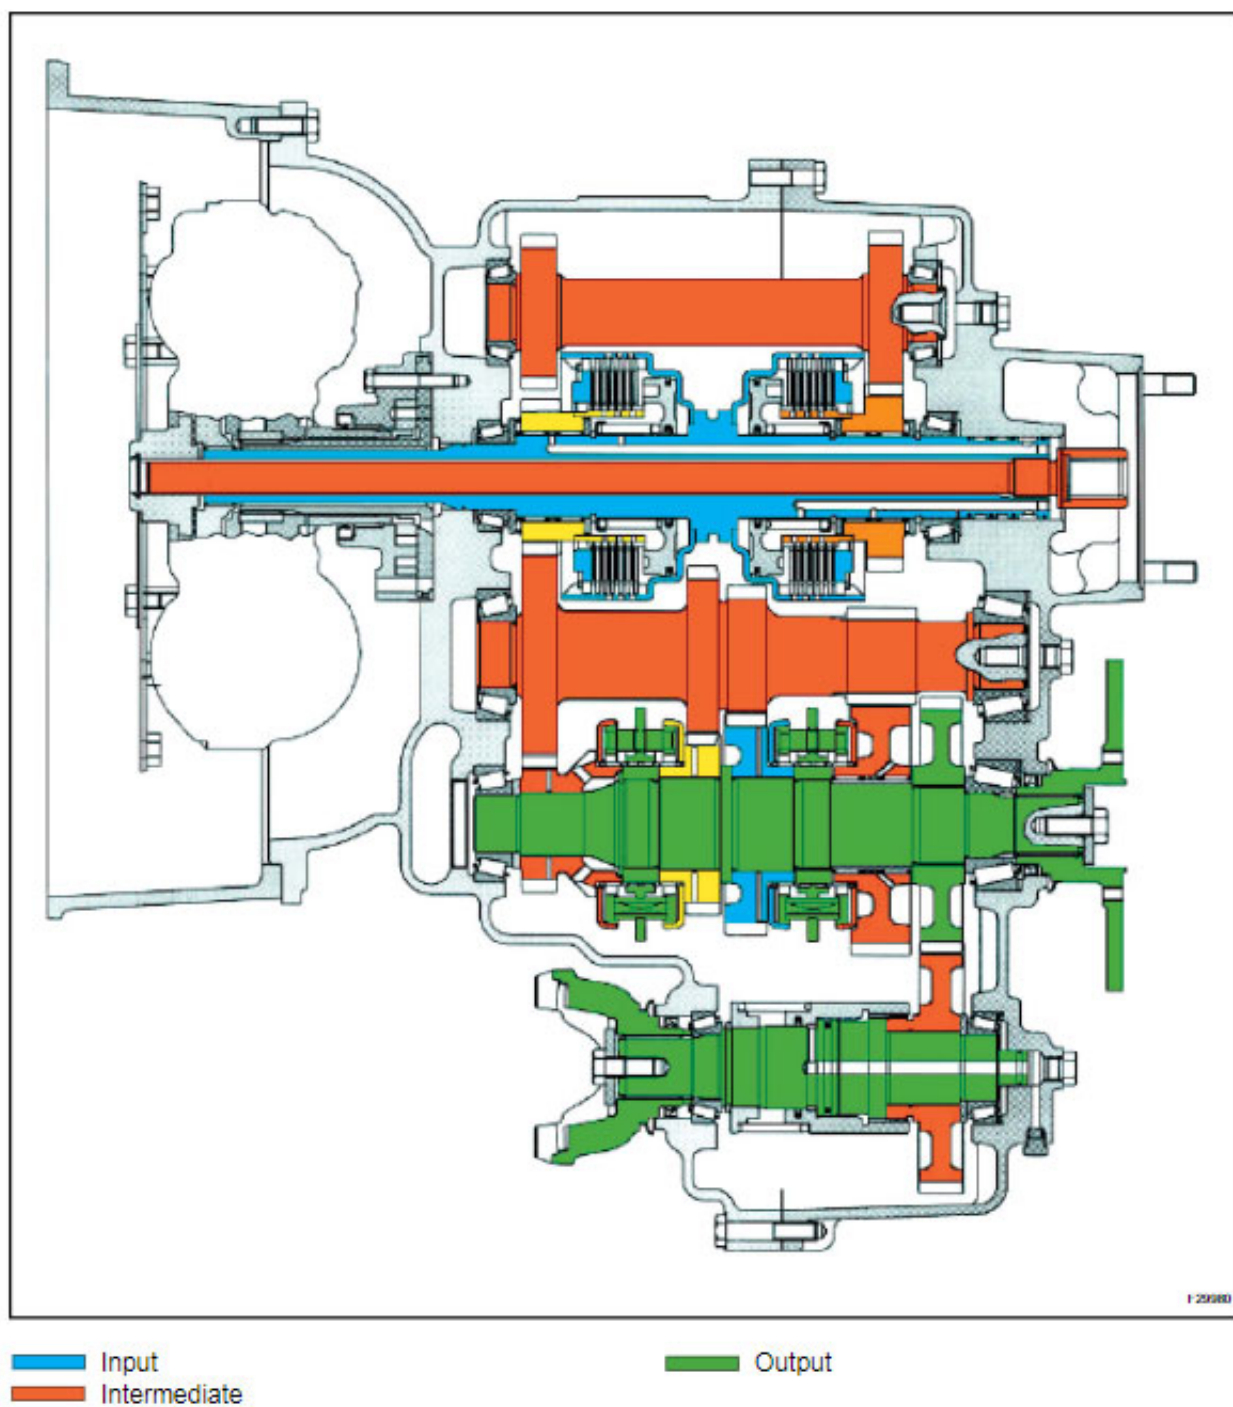

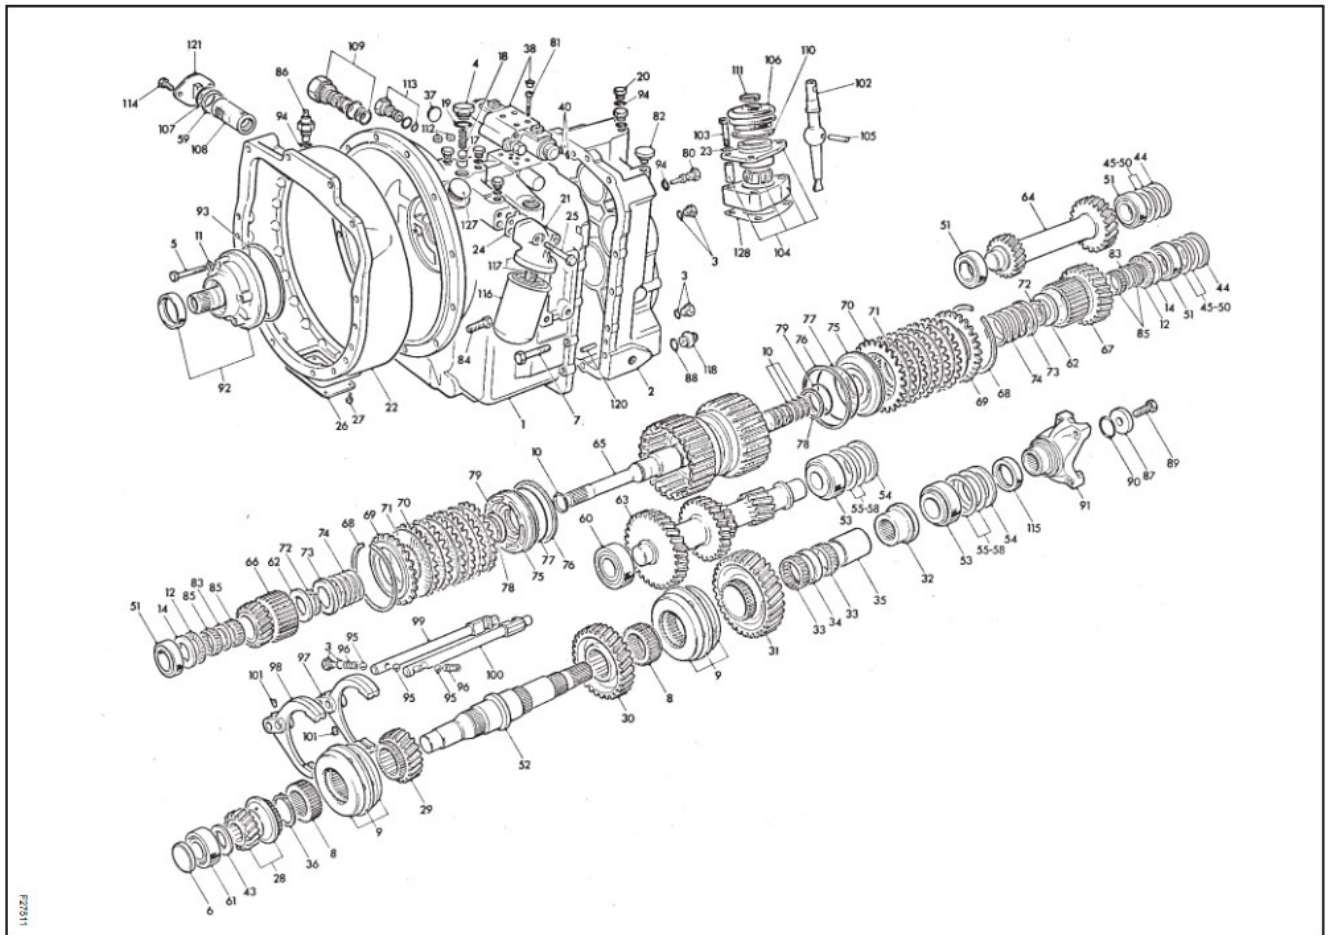

 Remove the reverse idler shaft assembly.

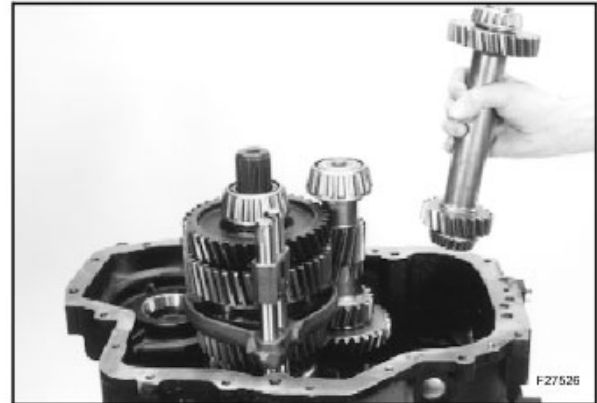

Remove the by-pass plug, the spring and the ball.




Ensure both synchronizers are in the neutral position then remove the 1st/2nd shift fork screw.



Park the machine on a hard, level surface and apply the parking brake.

### STEP 2

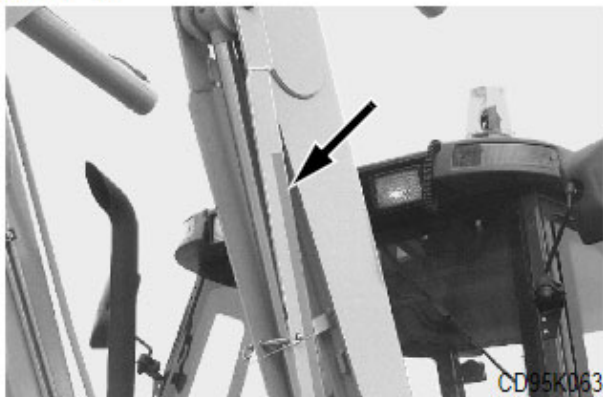 

Raise the loader frame, stop the engine and install the support strut.

### STEP 3



Release the engine hood and tilt it forwards.

### STEP 4



Insert a key in the tension pulley orifice.

 
Powyższe zdjęcia i rysunki, pochodzą z różnych losowych instrukcji. Klient po zakupie otrzymuje dokumentację zgodną z opisem przedmiotu.

Exert just enough pressure on the key to release the tension on the drive belt.

### STEP 6

Remove the belt from the water pump pulley and then from the other pulleys.

### STEP 7

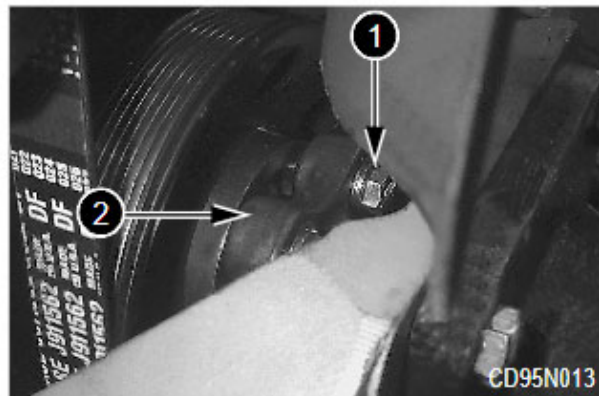


Remove the four screws and washers (1) and push the coupling (2) towards the pump. Remove the belt.

### STEP 8

 Install a new belt on the water pump pulley and the crankshaft pulley.

### STEP 9

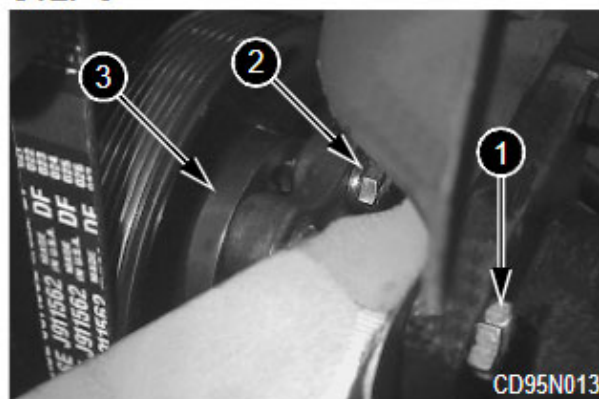

Align the coupling (2) with the crankshaft pulley (3) and install the four screws and washers (1). Tighten the four screws to a torque between 95 and 114 Nm.

## Szukasz instrukcji napraw do maszyny której nie ma na naszym sklepie?

---

Zadzwoń lub napisz do nas tel. [696 915 311](tel:696915311) lub  
dtrpdf@gmail.com

Podaj markę i model maszyny do jakiej  
instrukcji poszukujesz.