 


Link do produktu: <https://www.specdiag.pl/instrukcje-napraw-schematy-dtr-jcb-skidsteer-loader-135-t4f-150t-t4f-155-t4f-175-t4f-190t-t4f-205t-t4f-210-t4f-215-t4f-p-1085.html>

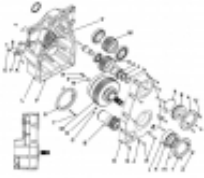

Instrukcje napraw, schematy, DTR - JCB SKIDSTEER LOADER 135 [T4F], 150T [T4F], 155 [T4F], 175 [T4F], 190T [T4F], 205T [T4F], 210 [T4F], 215 [T4F]

Cena

300,00 zł

Opis produktu

JCB SKIDSTEER LOADER 135 [T4F], 150T [T4F],
155 [T4F], 175 [T4F], 190T [T4F], 205T [T4F],
210 [T4F], 215 [T4F] - instrukcje napraw +
schematy instalacji + DTR

JCB SKID STEER LOADER

JCB 135 [T4F]

JCB 150T [T4F]

JCB 155 [T4F]

JCB 175 [T4F]

JCB 190T [T4F]

JCB 205T [T4F]

JCB 210 [T4F]

 
JCB 215 [T4F]

Hydraulic Pump

Description

The pump is a variable displacement, axial piston pump with swashplate design. The flow is proportional to the

input drive speed and displacement. By adjusting the swashplate, it is possible to infinitely vary the flow.

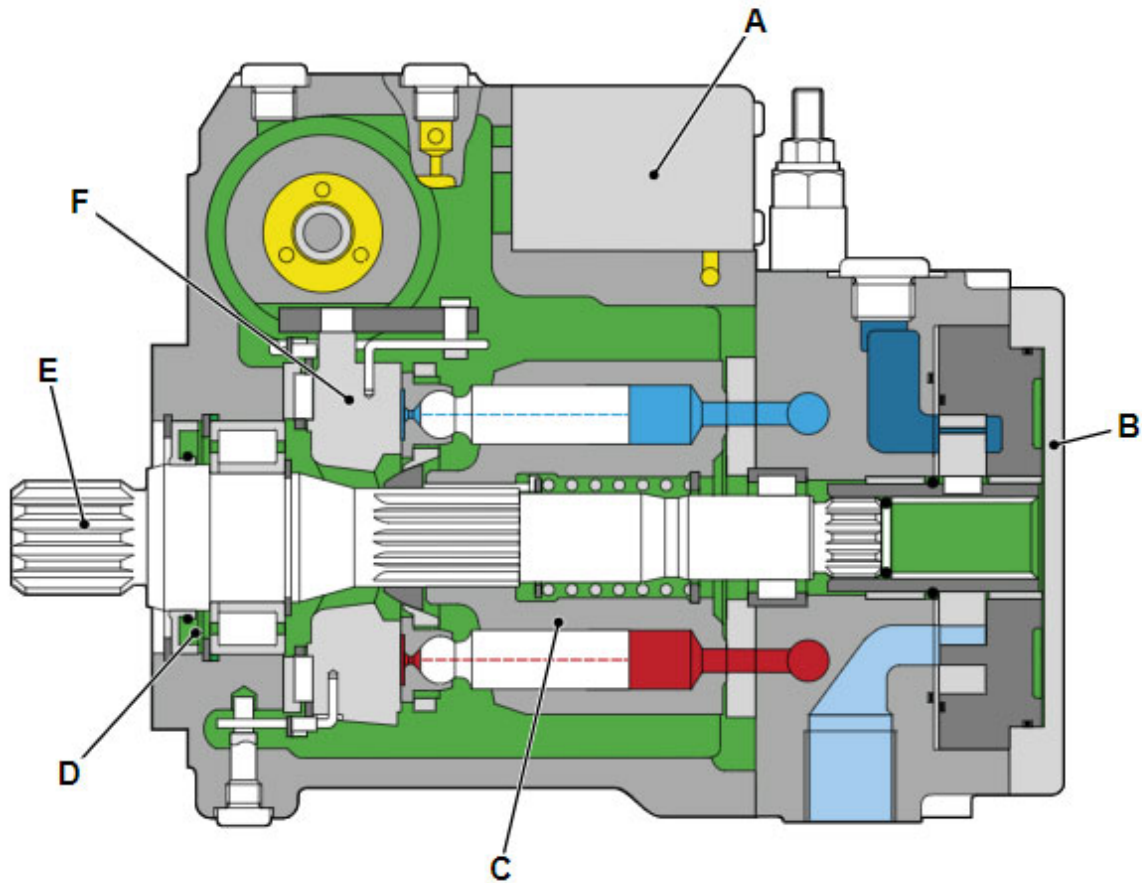

Replacement

Replacement is the opposite of the removal procedure.


2 Stage Booms (P2)

Removal

- 1 Position the boom so that the fork carriage A can be safely supported when it is disconnected from the boom assembly.
- 2 Park the machine and make it safe. Vent the hydraulic pressure. Obey the care and safety procedures.
⇒ [Related Topics](#) (□ B-5)
- 3 Support the fork carriage A.
- 4 Remove the securing bolt and remove the pivot pin B from the tipping link C.
- 5 Remove the securing bolt D and remove the pivot pin E.
- 6 Remove the fork carriage A.

Replacement

Replacement is the opposite of the removal procedure.

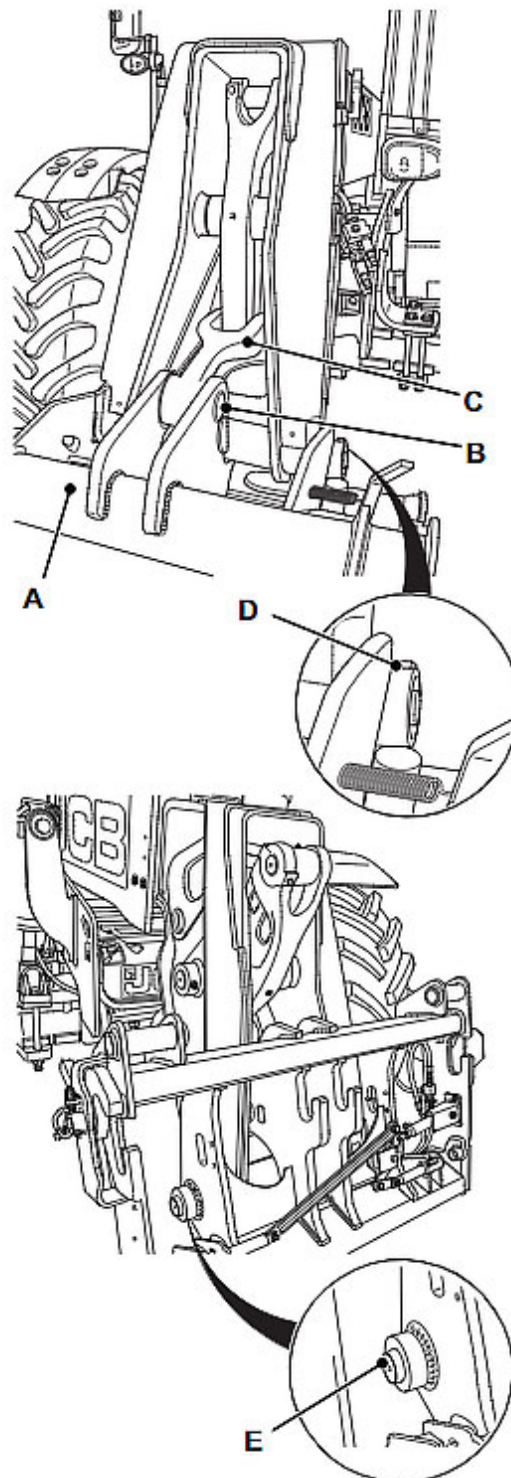 

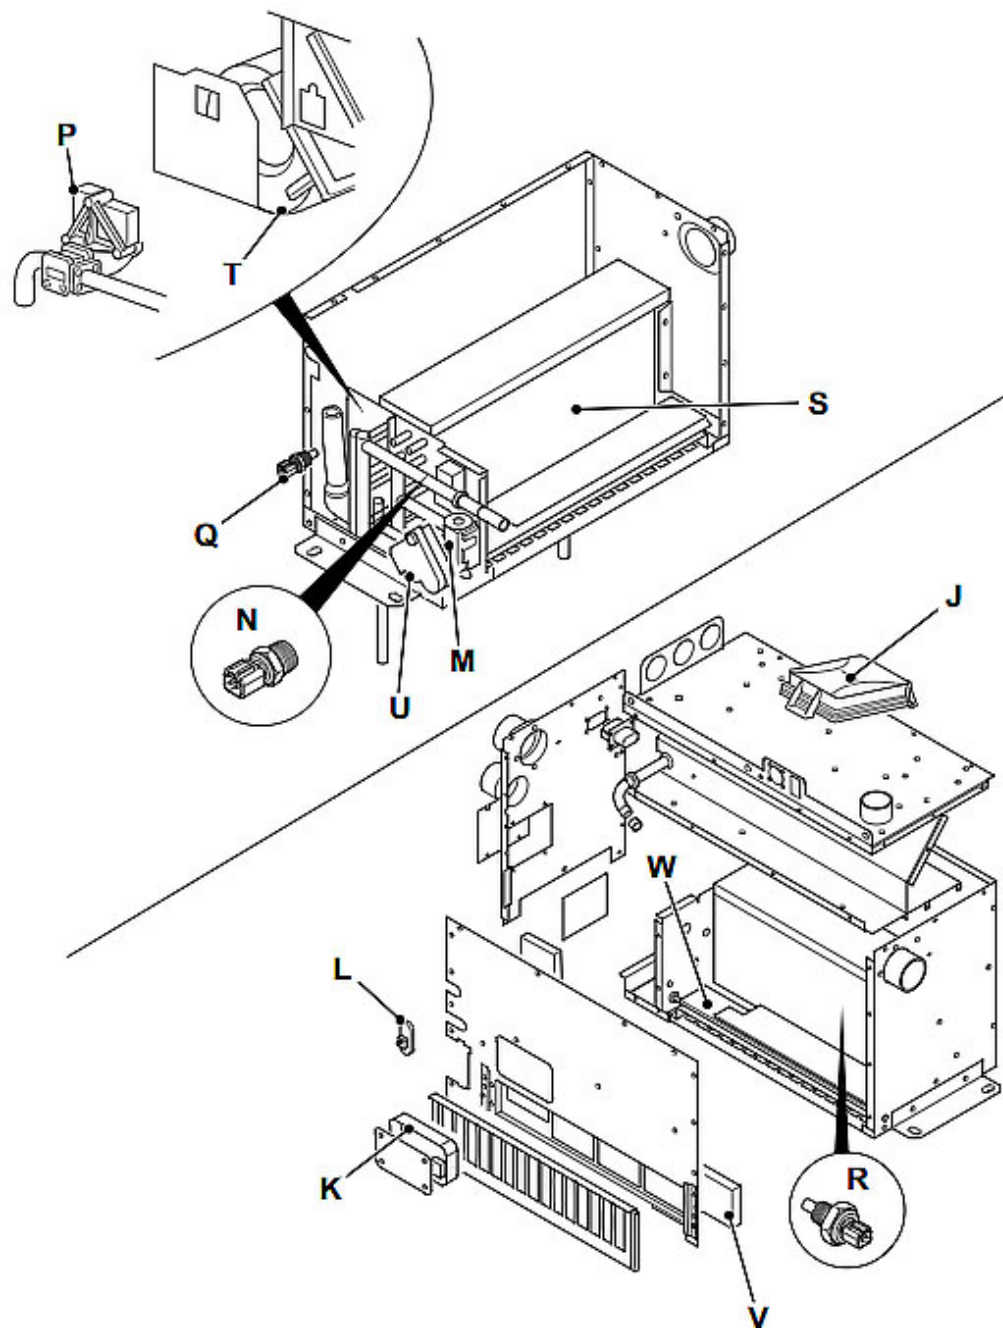 


Fig 2. ATC HVAC unit components

T014050-C1

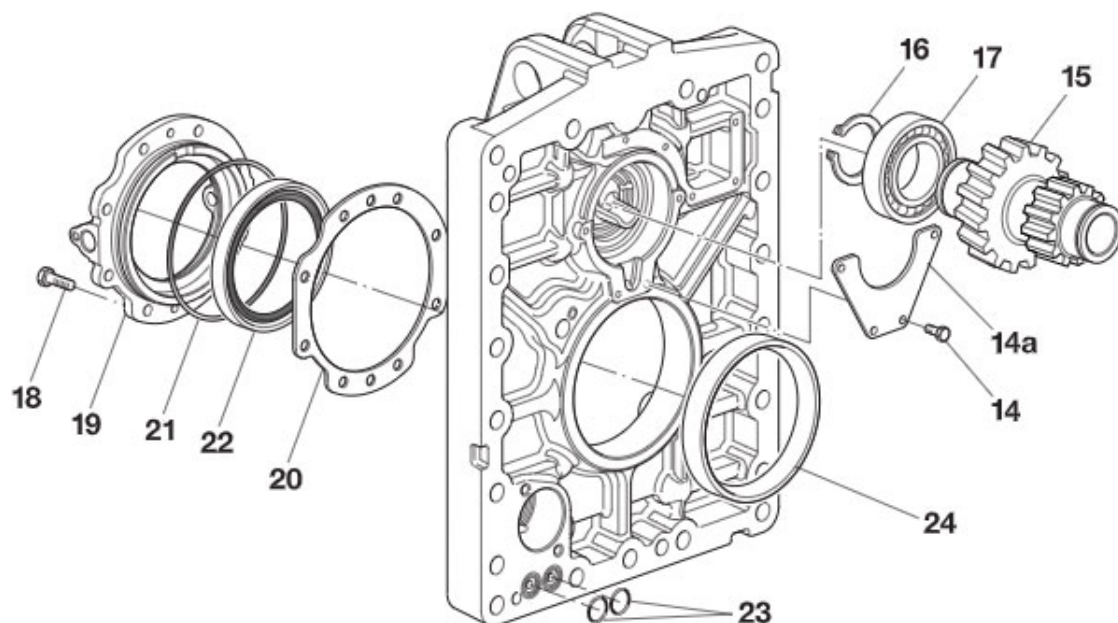 


Fig 151.

- 12 Remove screws 14 and guard 14a.
- 13 Extract driving gear 15.
- 14 Remove circlip 16 and remove bearing 17 from driving gear 15.
- 15 Remove screws 18 and extract flange 19, collecting the adjustment spacer(s) 20.
- 16 Remove 'O' ring 21 and seal 22 from the flange.
- 17 Remove 'O' rings 23.
- 18 Drive bearing race 24 out of the cover.



Section F - Transmission CVT Cartridge

Removal and Replacement

- 20 Unclip the circlip from the pinion shaft. Slide the circlip, washer and the coupling sleeve onto the pinion shaft in the direction of the arrow.

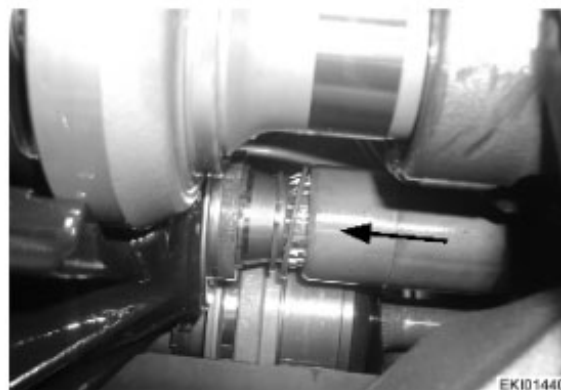 


Fig 38.

- 21 Pivot the hydraulic motors inwards using a tyre lever.
22 Unscrew the two M20 hex nuts on each side of the housing.



Fig 39.

- 23 Loosen the two M12 clamping screws at the top. Unscrew two drain plugs on the underside of the gearbox. Collect any draining oil. Loosen the two M12 clamping screws.






 
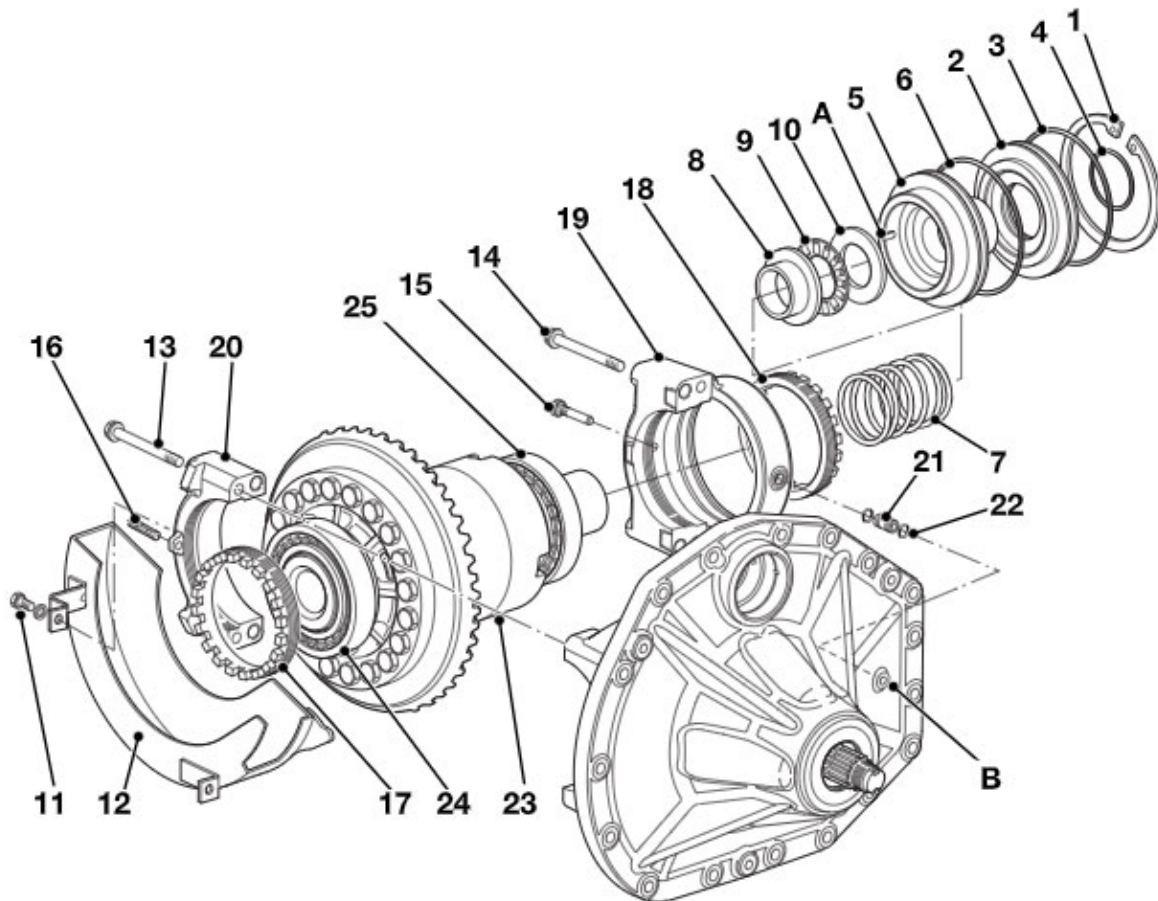 


Fig 140.

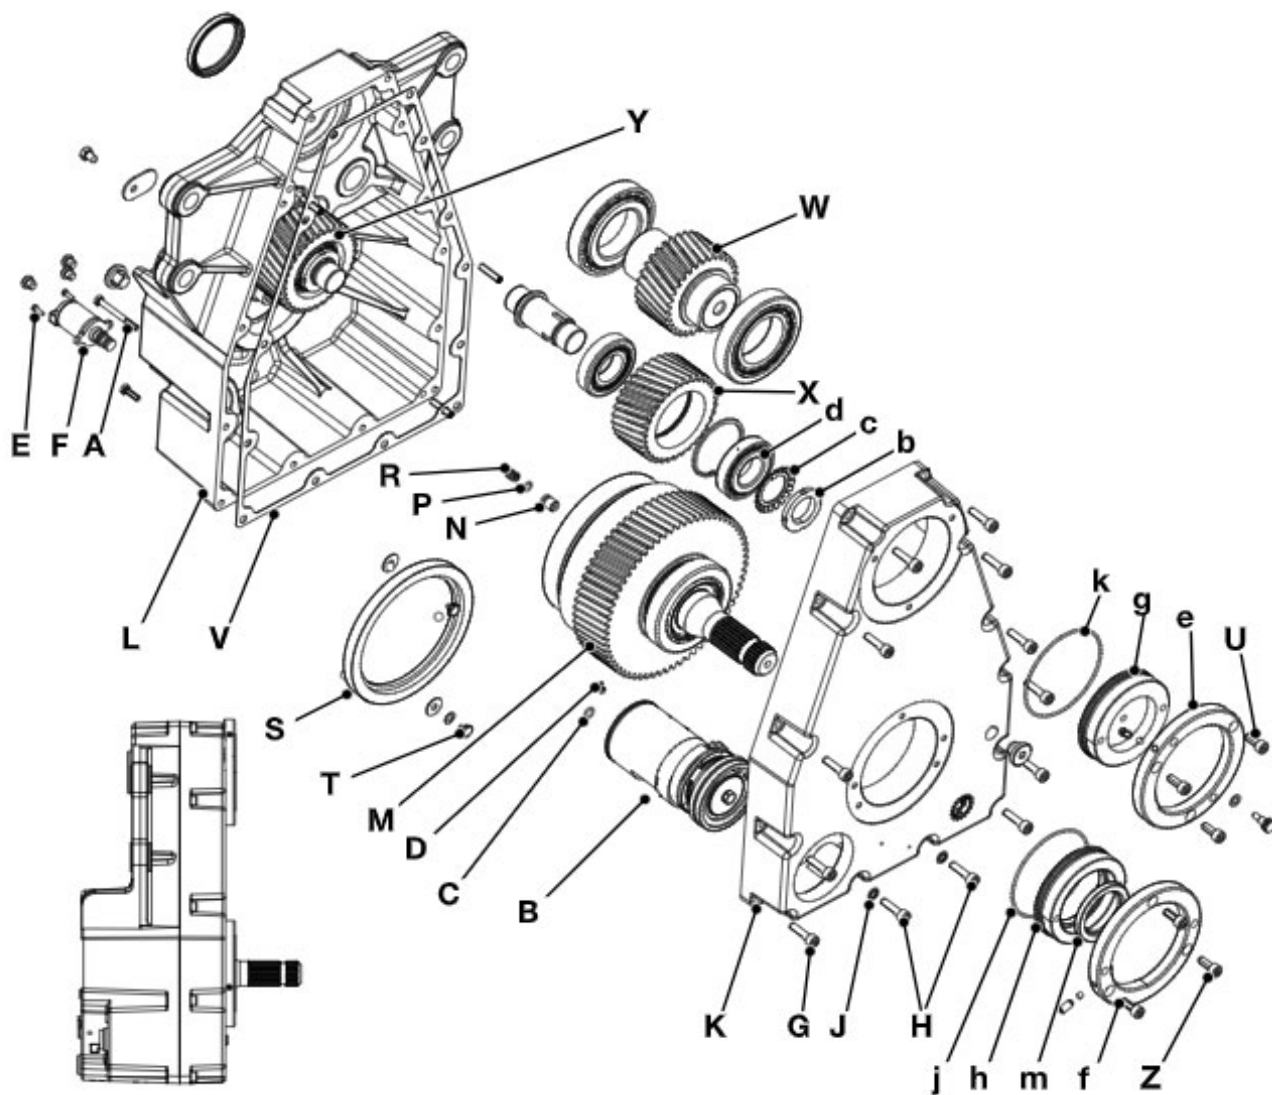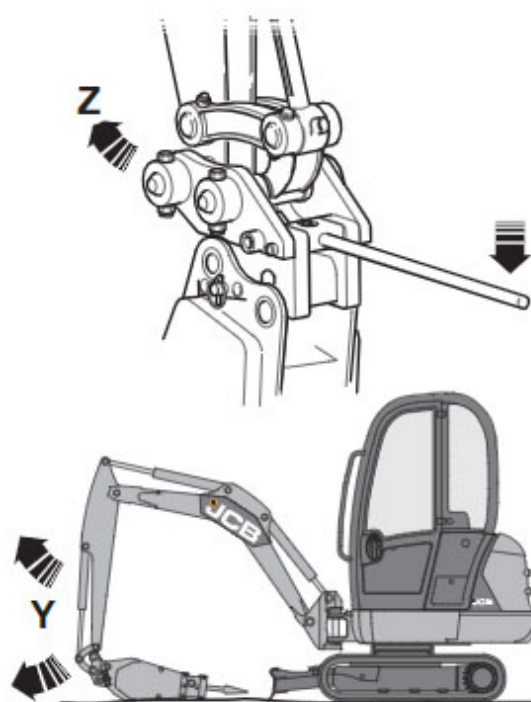 

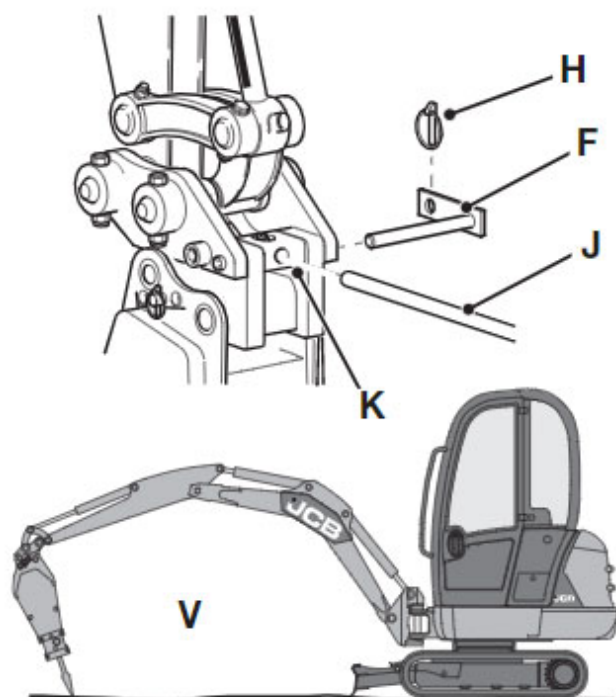 

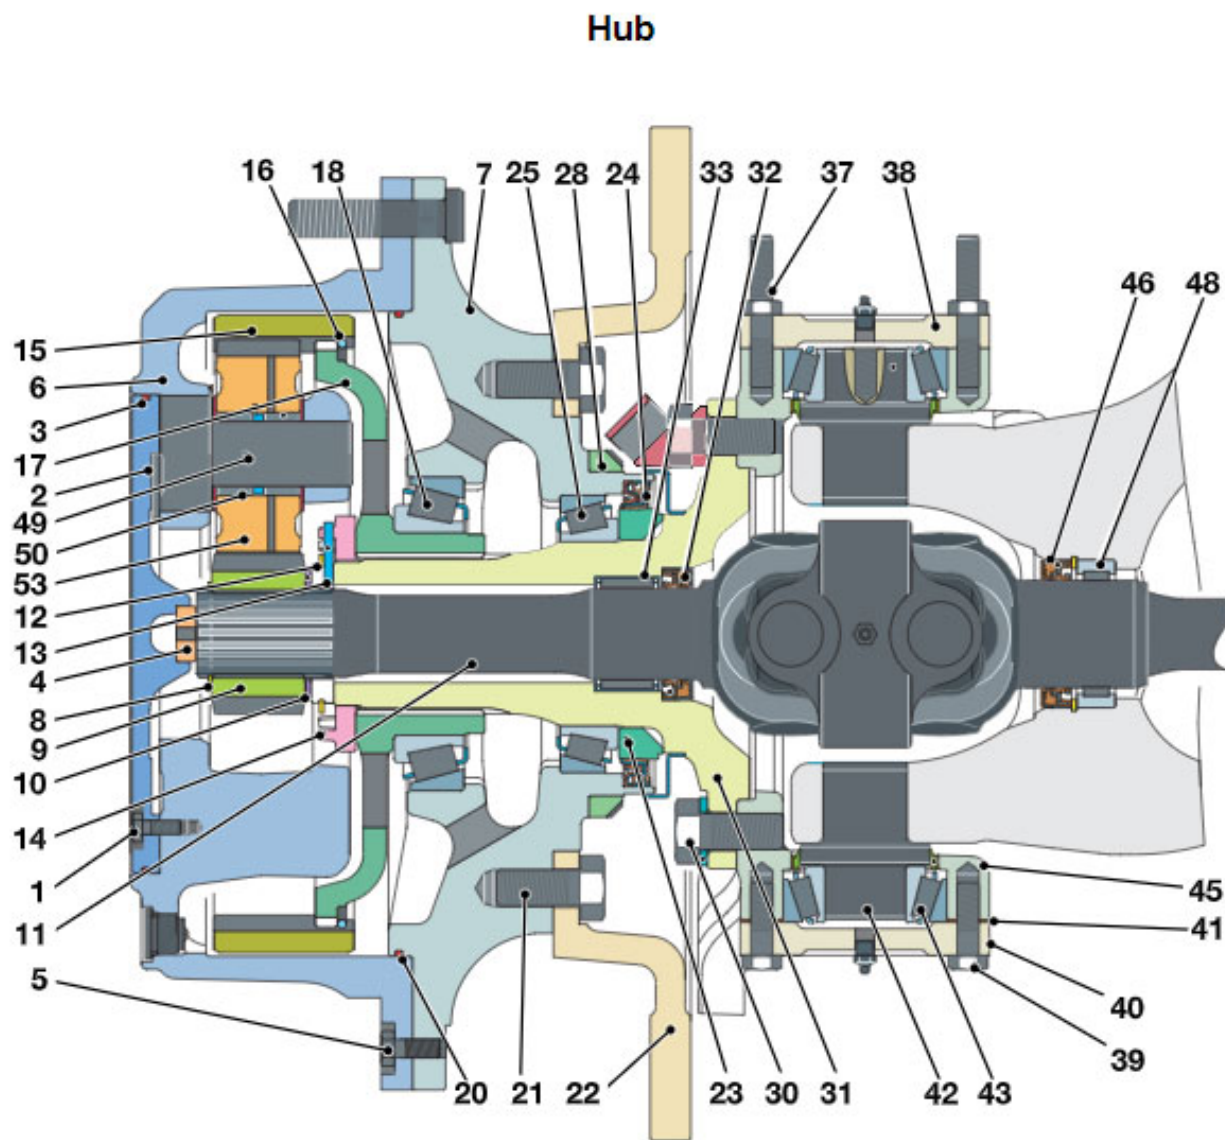 

Format elektroniczny PDF

Kontakt: tel. 696 915 311

Poszukujesz instrukcji napraw i nie możesz znaleźć jej na naszym sklepie? Napisz do nas maila podając w nim markę i model maszyny a także rok produkcji.

motodiagnostyka2010@gmail.com

facebook.com/servicemanualspdf