

Link do produktu: <https://www.specdiag.pl/jcb-instrukcje-napraw-schematy-dtr-jcb-2cx-od-1992r-1994r-instrukcja-naprawy-koparko-ladowarek-p-1001.html>



JCB instrukcje napraw + schematy + DTR: JCB 2CX od 1992r. - 1994r. instrukcja naprawy koparko ładowarek

Cena **300,00 zł**

Opis produktu

JCB 2CX

instrukcje napraw + schematy instalacji + DTR

Koparko ładowarka JCB 2 CX
Koparka JCB 2CX
od 1992r. do 1994r.




Service Manual

2CX Backhoe Loader

PUBLISHED BY THE
TECHNICAL PUBLICATIONS DEPARTMENT
OF JCB SERVICE; ©
ROCESTER, STAFFORDSHIRE, ST14 5LS,
ENGLAND
Tel. ROCESTER (0889) 590312
PRINTED IN ENGLAND

Publication No. 9803/7100

General Information	1
Care & Safety	2
Routine Maintenance	3
Attachments	A
Body & Framework	B
Electrics	C
Controls	D
Hydraulics	E
Transmission	F
Brakes	G
Engine	K

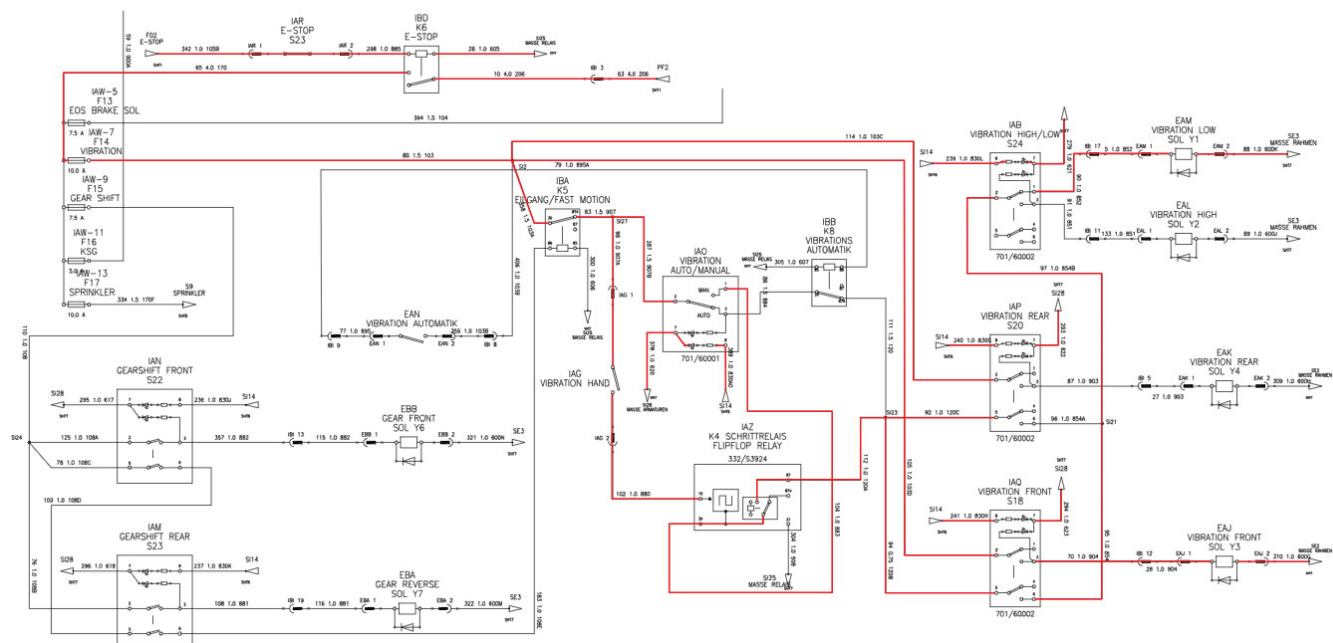

held in suspension will then be drained with the oil.

- 1 Get access to the engine. Refer to **Access Panels, Engine Cover**.
- 2 Place a container of suitable size beneath the sump drain plug **C**.

CAUTION

Oil will gush from the hole when the drain plug is removed. Hot oil and engine components can burn you. Keep to one side when you remove the plug.

13-3-1-15

- 3 Drain the engine oil.
 - a Machine with a sump plug, remove the sump drain plug **C** and its 'O' ring **D**. Let the oil drain out, then clean and refit the drain plug with a new 'O' ring. Torque the drain plug to 40-60Nm (30-44lbf ft).
 - b Machines with a drain valve, remove the dust cap **K** from the sump drain port. Attach drain tube **L**. With the free end of the tube in an oil container, screw in the drain tube assembly to open the valve.

When all the oil has drained, unscrew the drain tube assembly and fit the dust cap **K**.



Fig 28.

C012110-1

drain plug to 40-60Nm (30-44lbf ft).

- 6 Unscrew the filter canister **F**, use a chain wrench if necessary.
- 7 Clean the seal face of the filter head **G**.
- 8 Smear the seal **H** on the new filter canister **F** with clean engine oil.
- 9 Screw the filter on until it just contacts the filter head.
- 10 Turn the filter at least a further 3/4 of a turn.
- 11 Through the top filler point, fill the engine with the recommended oil to the MAX mark on the dipstick. Refer to **Checking the Oil Level**. Wipe off any spilt oil, refit the filler cap and make sure it is secure.
- 12 Operate the engine until the oil pressure low warning light has extinguished. Check for oil leakage. When the oil has cooled, check the oil level again, and if necessary top up with clean engine oil.



Fia 29.

C012110-5

Hydraulic Pump

Description

The pump is a variable displacement, axial piston pump with swashplate design. The flow is proportional to the

input drive speed and displacement. By adjusting the swashplate, it is possible to infinitely vary the flow.



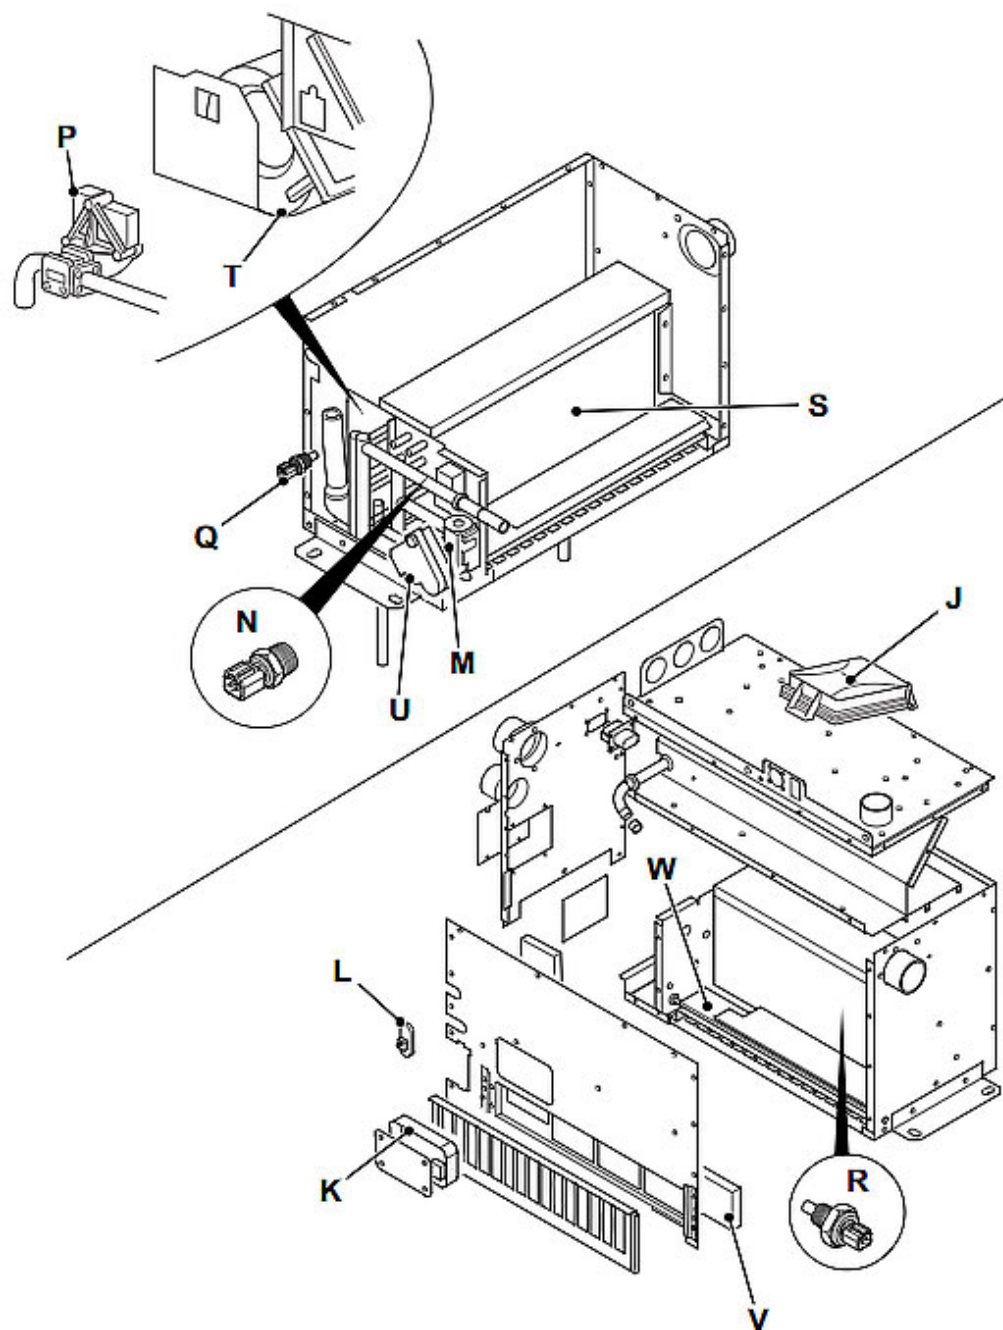


Fig 2. ATC HVAC unit components

T014050-C1



Fig 151.

- 12 Remove screws **14** and guard **14a**.
- 13 Extract driving gear **15**.
- 14 Remove circlip **16** and remove bearing **17** from driving gear **15**.
- 15 Remove screws **18** and extract flange **19**, collecting the adjustment spacer(s) **20**.
- 16 Remove 'O' ring **21** and seal **22** from the flange.
- 17 Remove 'O' rings **23**.
- 18 Drive bearing race **24** out of the cover.



Section F - Transmission CVT Cartridge

Removal and Replacement

- 20 Unclip the circlip from the pinion shaft. Slide the circlip, washer and the coupling sleeve onto the pinion shaft in the direction of the arrow.



Fig 38.

- 21 Pivot the hydraulic motors inwards using a tyre lever.
22 Unscrew the two M20 hex nuts on each side of the housing.



Fig 39.


- 23 Loosen the two M12 clamping screws at the top. Unscrew two drain plugs on the underside of the gearbox. Collect any draining oil. Loosen the two M12 clamping screws.





Fig 140.



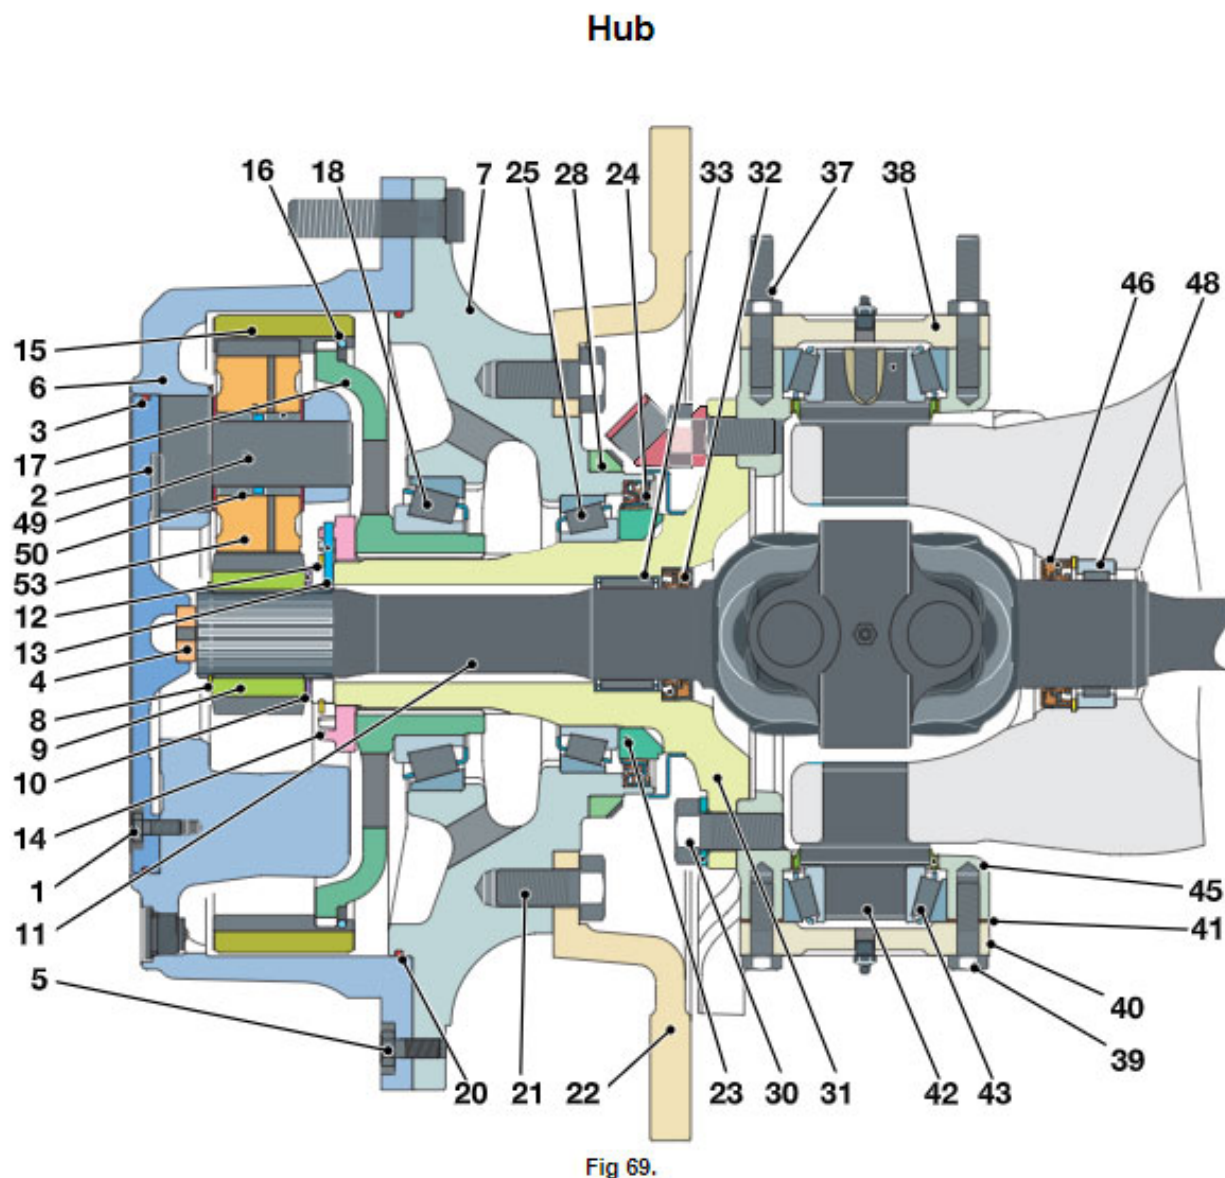

Kontakt: tel. 696 915 311

Poszukujesz instrukcji napraw i nie możesz znaleźć jej na naszym sklepie? Napisz do nas maila podając w nim markę i model maszyny a także rok produkcji.

motodiagnostyka2010@gmail.com

facebook.com/servicemanualspdf