 


Link do produktu: <https://www.specdiag.pl/komatsu-pw170-instrukcje-napraw-schematy-instalacji-p-839.html>

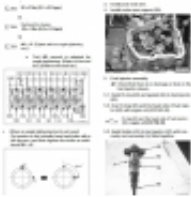

Komatsu PW170 - Instrukcje Napraw + Schematy Instalacji

 
Cena

250,00 zł

Opis produktu

Komatsu PW170 - instrukcje napraw - schematy instalacji.
Format PDF
Język angielski.

Circuit diagram related to engine preheater/start-
ing motor/charging system

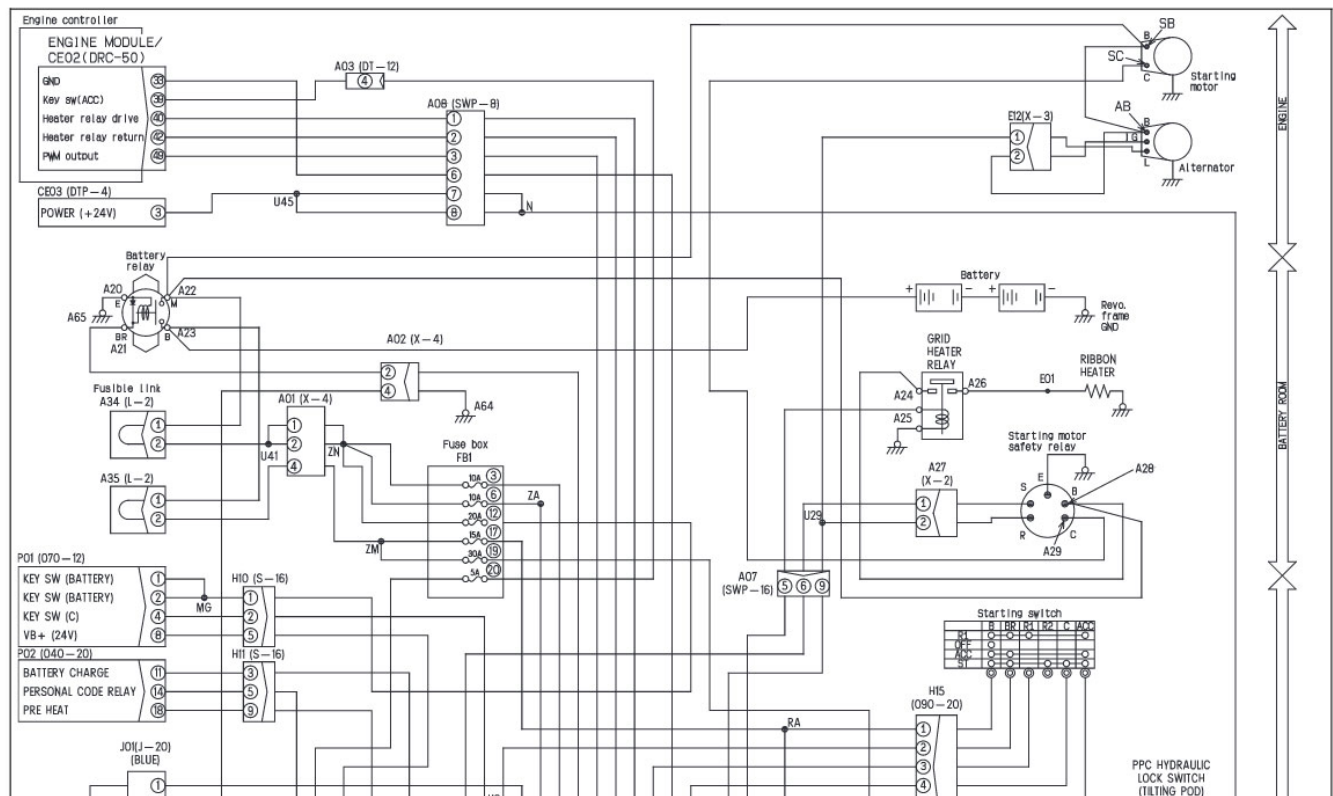

 **90 ± 3 Nm {9.2 ± 0.3 kgm}**

 
2]

 **Recheck the torque:
90 ± 3 Nm {9.2 ± 0.3 kgm}**


3]

 **90° ± 5° (Tighten with an angle tightening tool.)**


- a Tool **A6**: wrench is adopted for angle tightening. (Refer to the tool list.) (Refer to the tool list.)

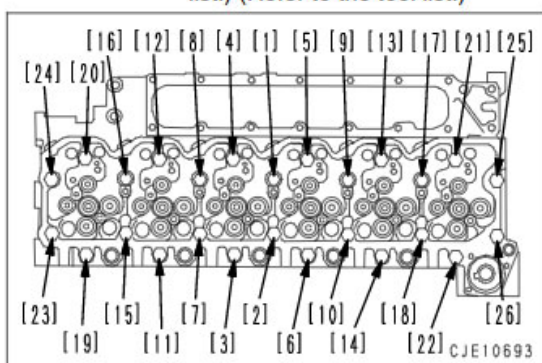

 - When an angle tightening tool is not used:
Put marks on the cylinder head and bolts with a felt-tip pen, and then tighten the bolts an additional 90° ± 5°.

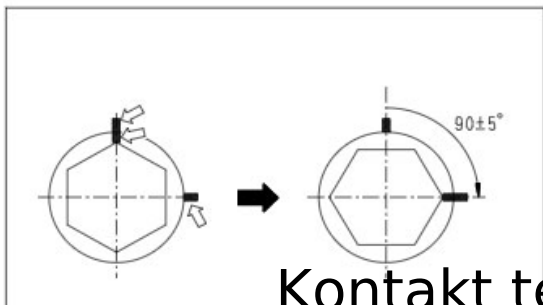

 
3. Install push rods (57).
4. Install rocker arm support (58).

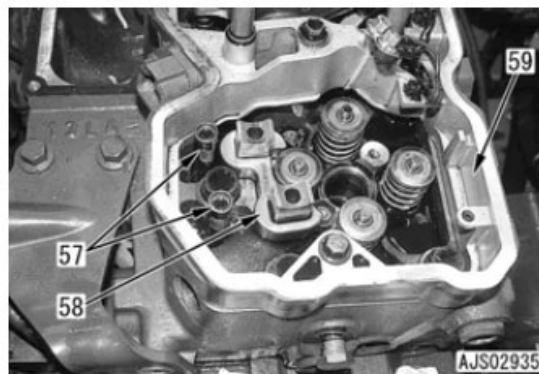

5. Fuel injector assembly
 - ✗ Check that there is no damage or dust on the fuel injector sleeve.
- 5.1. Install O-ring (63) and gasket (64) to fuel injector (62).
- 5.2. Coat O-ring (63) and the head side of fuel injector (62) with engine oil (EO15W-40).

 O-ring (63) and the head side of fuel injector (62): **engine oil (EO15W-40)**

 - 5.3. Install holder (65) to fuel injector (62) with concavity and convexity (A) fitted together.

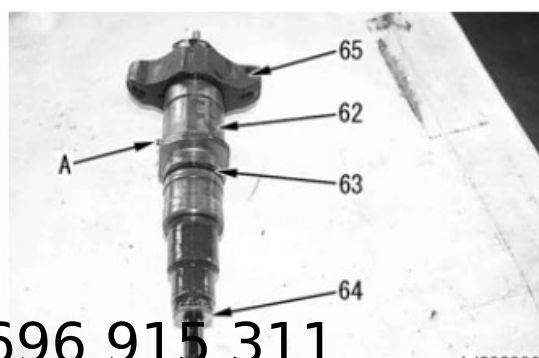

Kontakt tel: 696 915 311

motodiagnostyka2010@gmail.com