 


Link do produktu: <https://www.specdiag.pl/new-holland-129l-turbo-compound-engine-f3ce0684ae001-f3ce0684be003-service-manual-instrukcje-napraw-schematy-instalacji-p-1730.html>

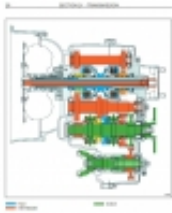

New Holland - 12.9L Turbo Compound Engine - F3CE0684A*E001 - F3CE0684B*E003 - SERVICE MANUAL instrukcje napraw + schematy instalacji

Cena

250,00 zł

Opis produktu

 
Warsztatowe instrukcje napraw wraz ze
schematami instalacji.

Instrukcje serwisowe New Holland
12.9L Turbo Compound Engine
F3CE0684A*E001
F3CE0684B*E003

SERVICE MANUALS


Poniższe zdjęcia są przykładowymi zdjęciami z losowych instrukcji napraw, po dokonaniu zakupu klient otrzymuje dokumentację do wybranego przez siebie modelu.

PRIMARY HYDRAULIC POWER SYSTEM - Exploded view

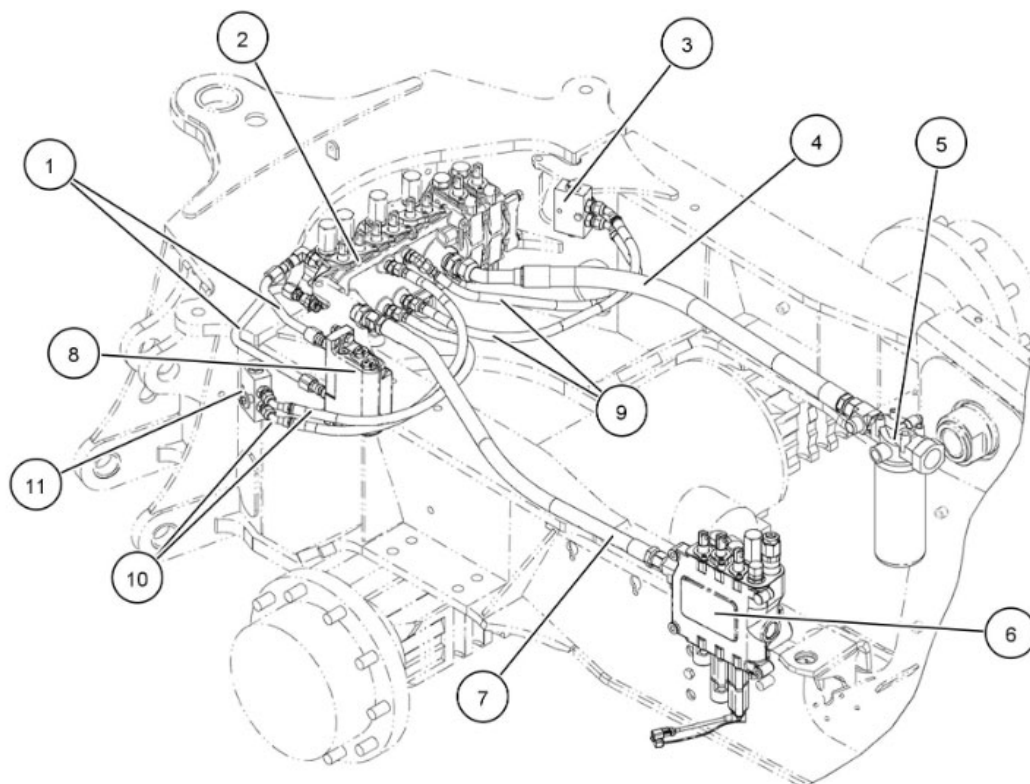


RCPH10TLB005GAM 1

- | | | |
|-------------------------------------|------------------------------|---------------------------------------|
| 1. Hoses swing control | 5. Hydraulic filter | 9. Left stabilizer hoses |
| 2. Backhoe valve | 6. Loader valve | 10. Right stabilizer hoses |
| 3. Left stabilizer load check valve | 7. Pressure to backhoe valve | 11. Right stabilizer load check valve |
| 4. Return to filter | 8. Swing cushion valve | |

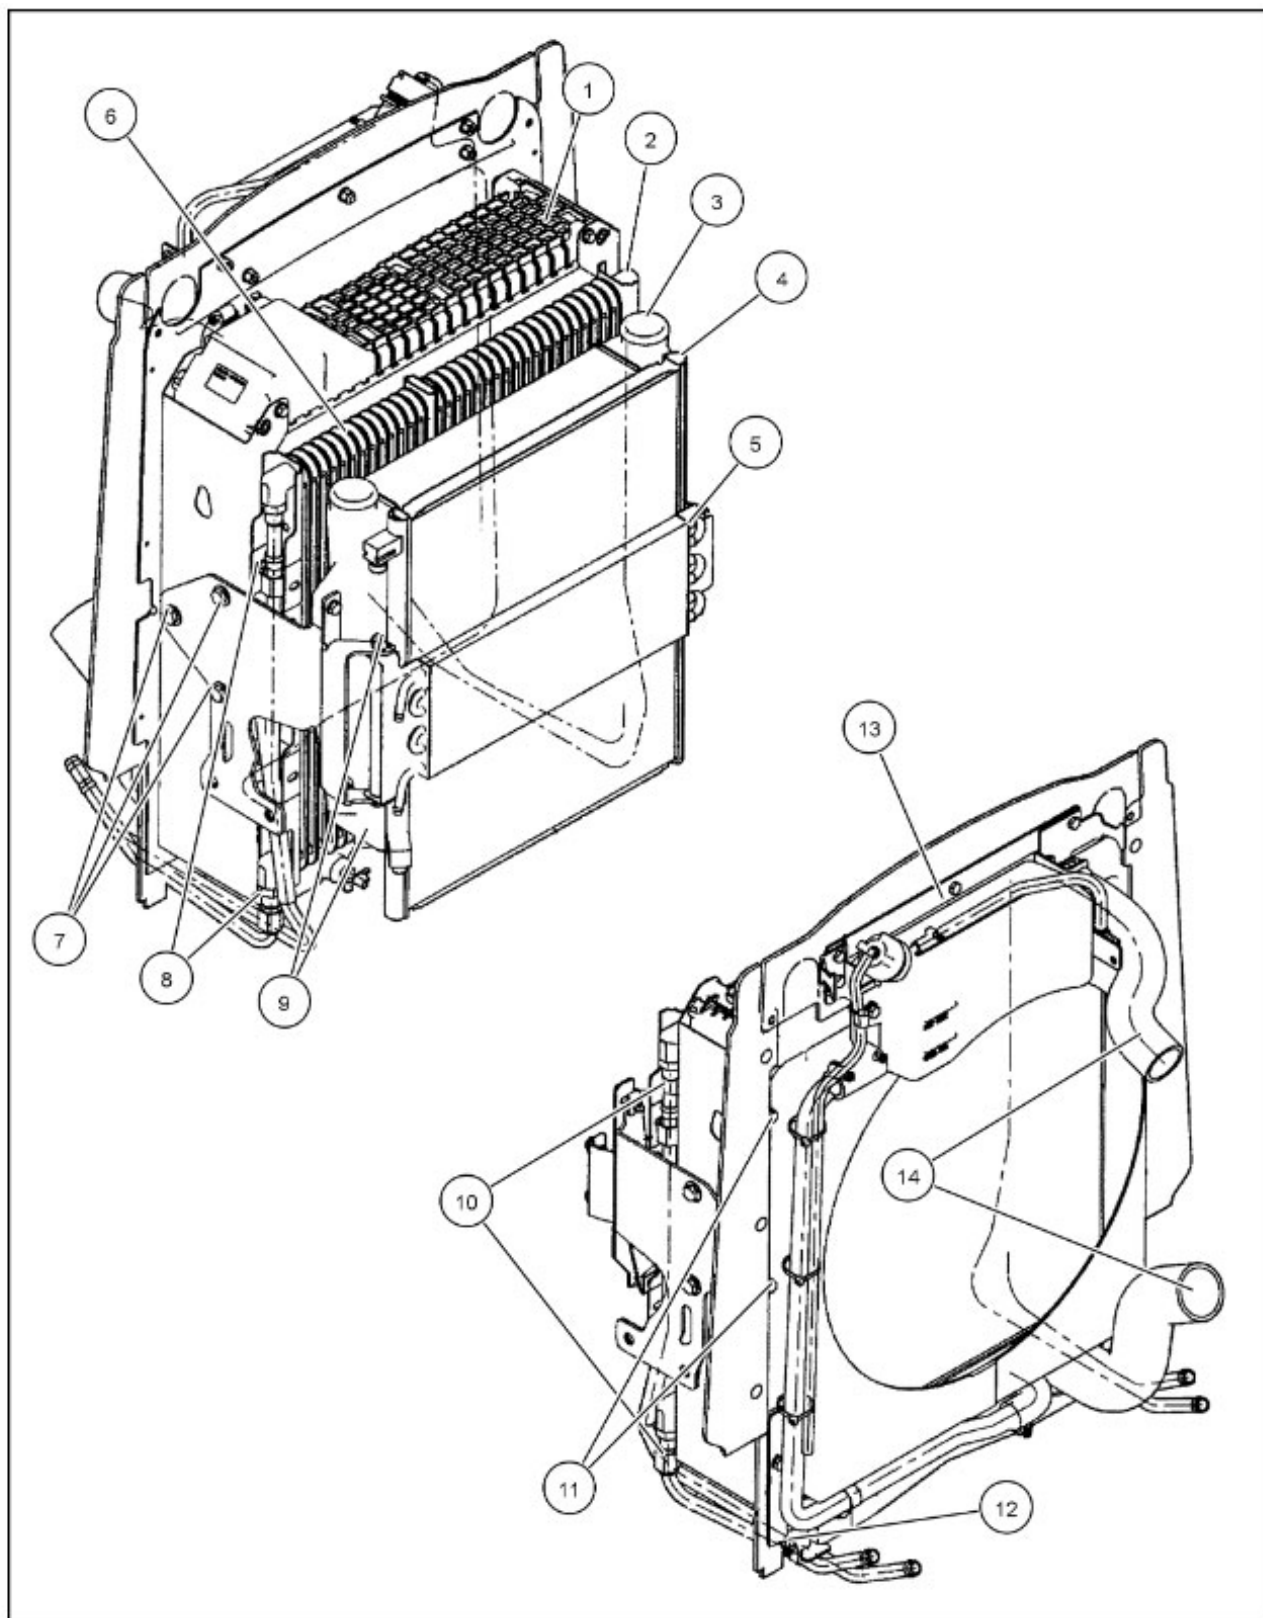 


 7. Remove the charge air cooler hoses and pipes.

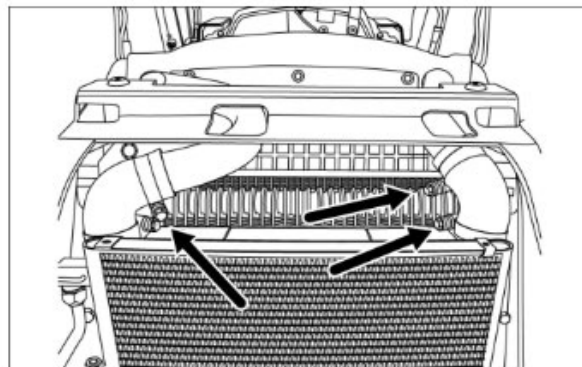


RCPH11TLB015AAM 8

 
8. Cap (seal) all open ports to keep contaminants from entering the system.

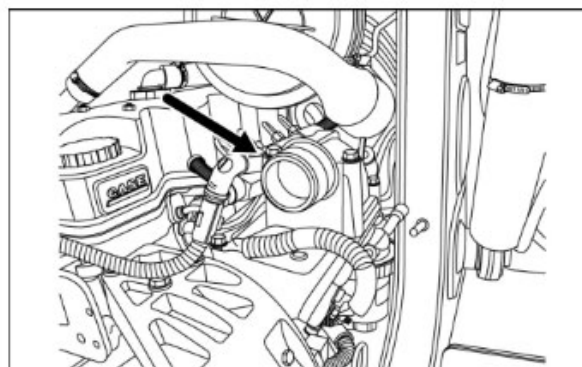


RCPH11TLB015AAM 9

  9. Remove the lower radiator hose.

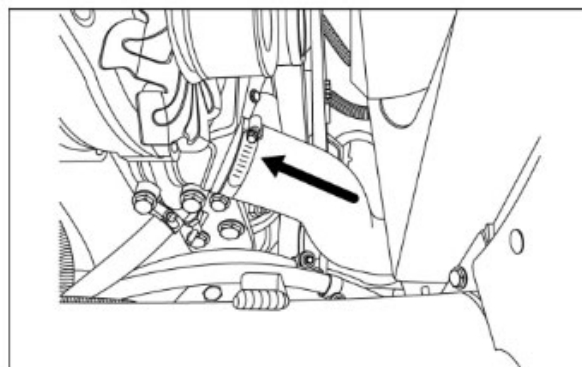

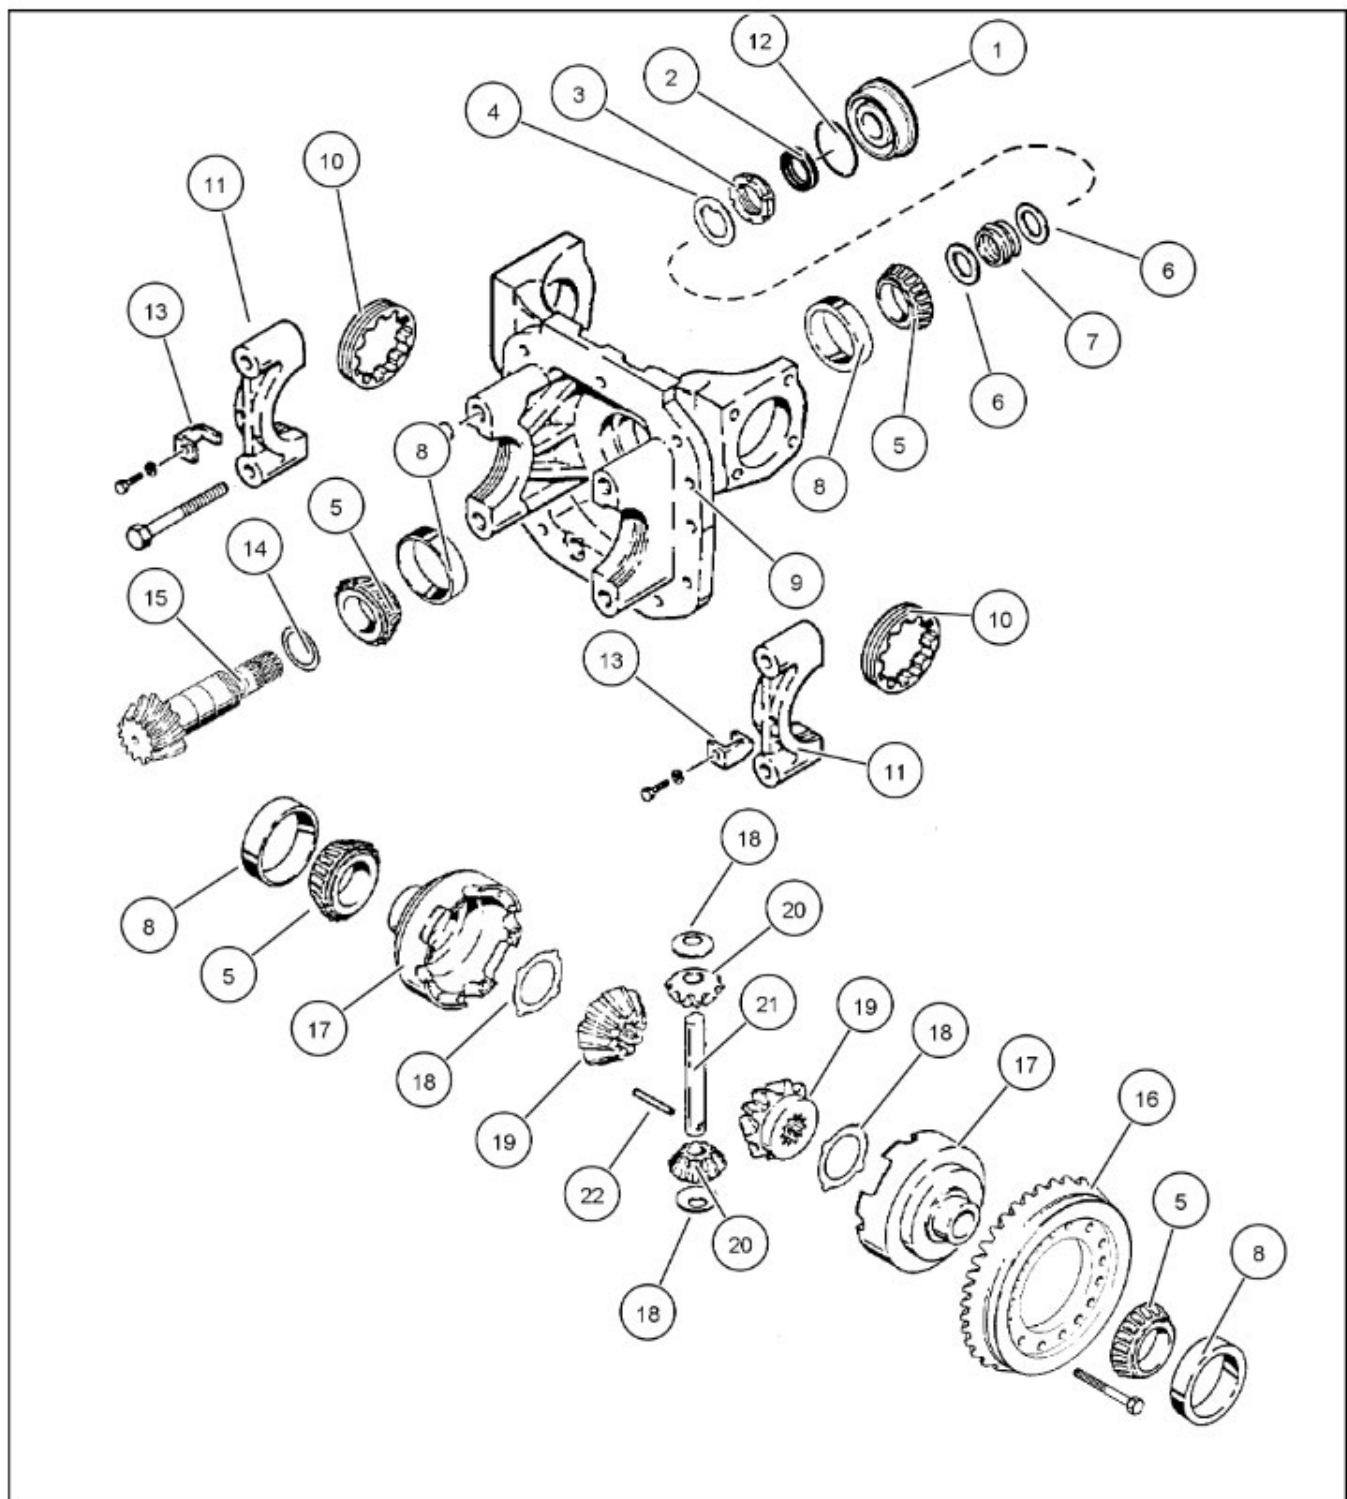


 5. Make sure the bevelled washers are in place, install the upper and lower king pins. Torque the bolts to **120 N·m (88.5 lb ft)**

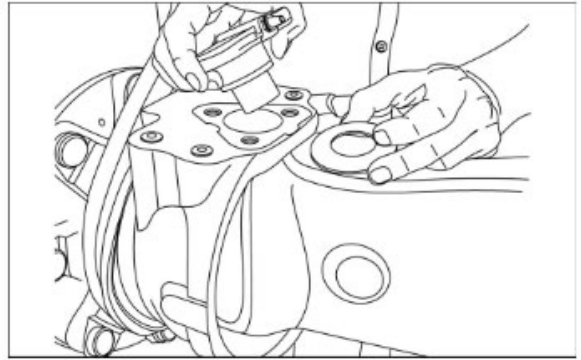


RCPH10TLB002ACL 5

 6. Grease the bearing cone and install it onto the swivel housing.

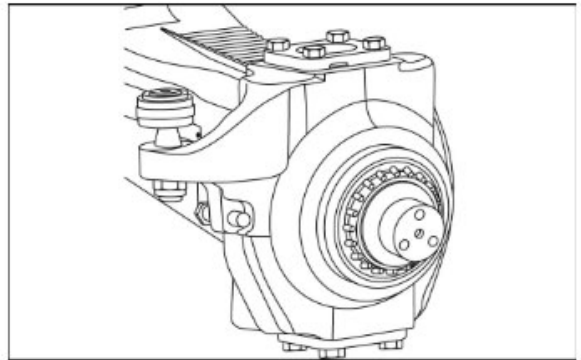


RCPH10TLB007ABL 6

 7. Use suitable drivers and install new bearing cups and seal into wheel hub.

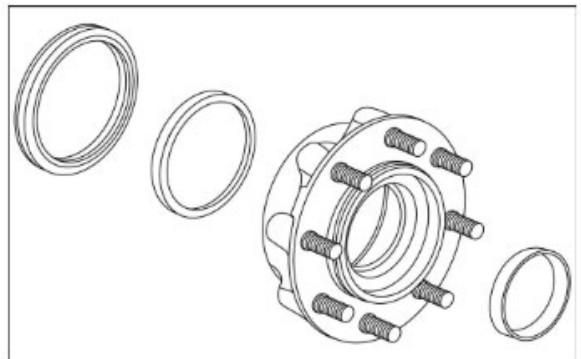


 5. Remove lifting device.

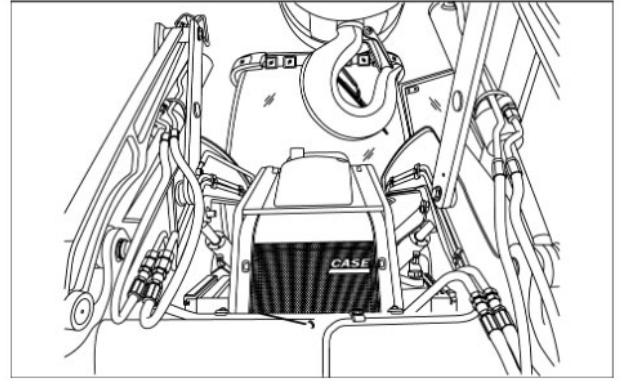

RCPH11TLB102AAM 5

 
6. Lower loader frame to the floor.

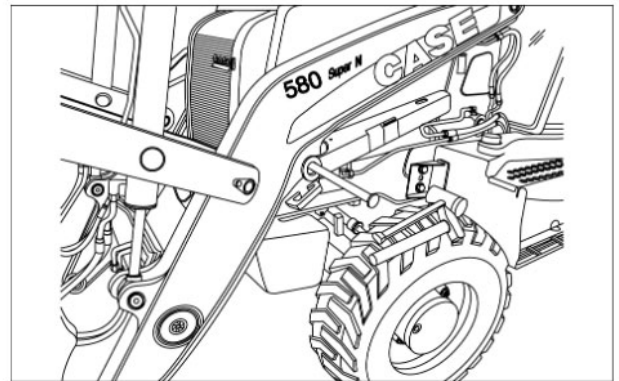

RCPH11TLB103AAM 6

REMOVING THE TORQUE CONVERTER HOUSING AND TORQUE CONVERTER

 STEP 1

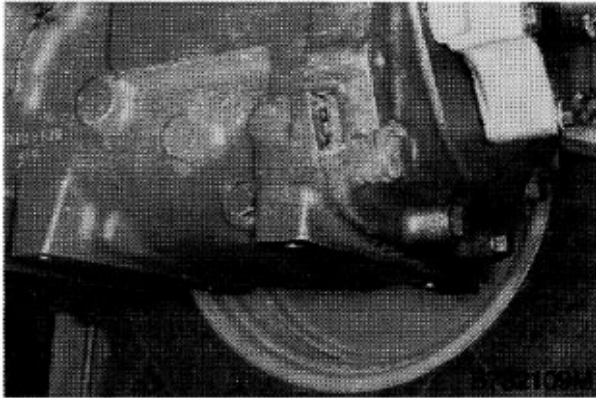

Drain the oil from the transaxle. The transaxle holds approximately 40 U.S. quarts (38 litres). If equipped with a PTO, drain the oil from the torque converter housing.

STEP 2

 
If the machine has four wheel drive, do steps 3 through 7.

STEP 3




Loosen and remove the self-locking nuts from the bolts that hold the guard. Do not remove the bolts now.

STEP 4

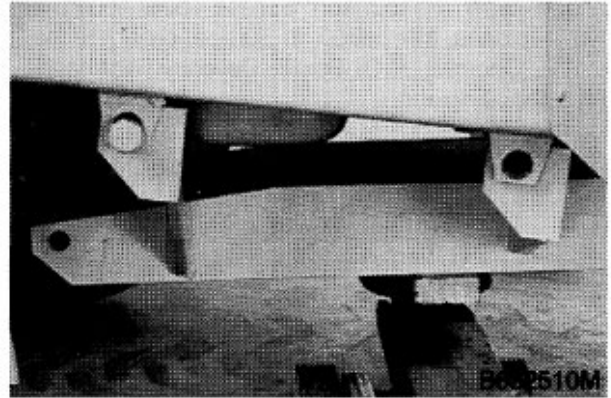

Use a floor jack to hold and lower the guard.

 
STEP 5

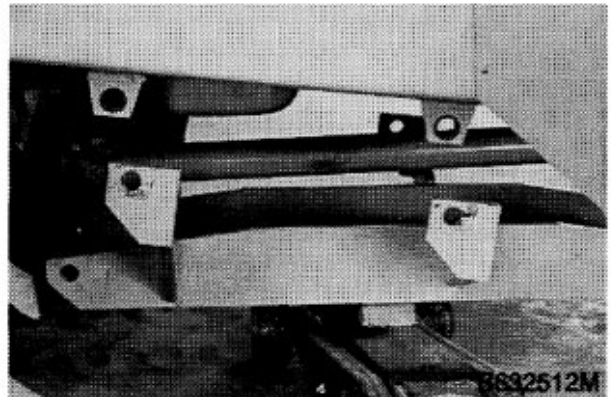

Remove the bolts and carefully lower the guard.


STEP 6

 
Carefully tilt the guard and remove the guard from under the machine.

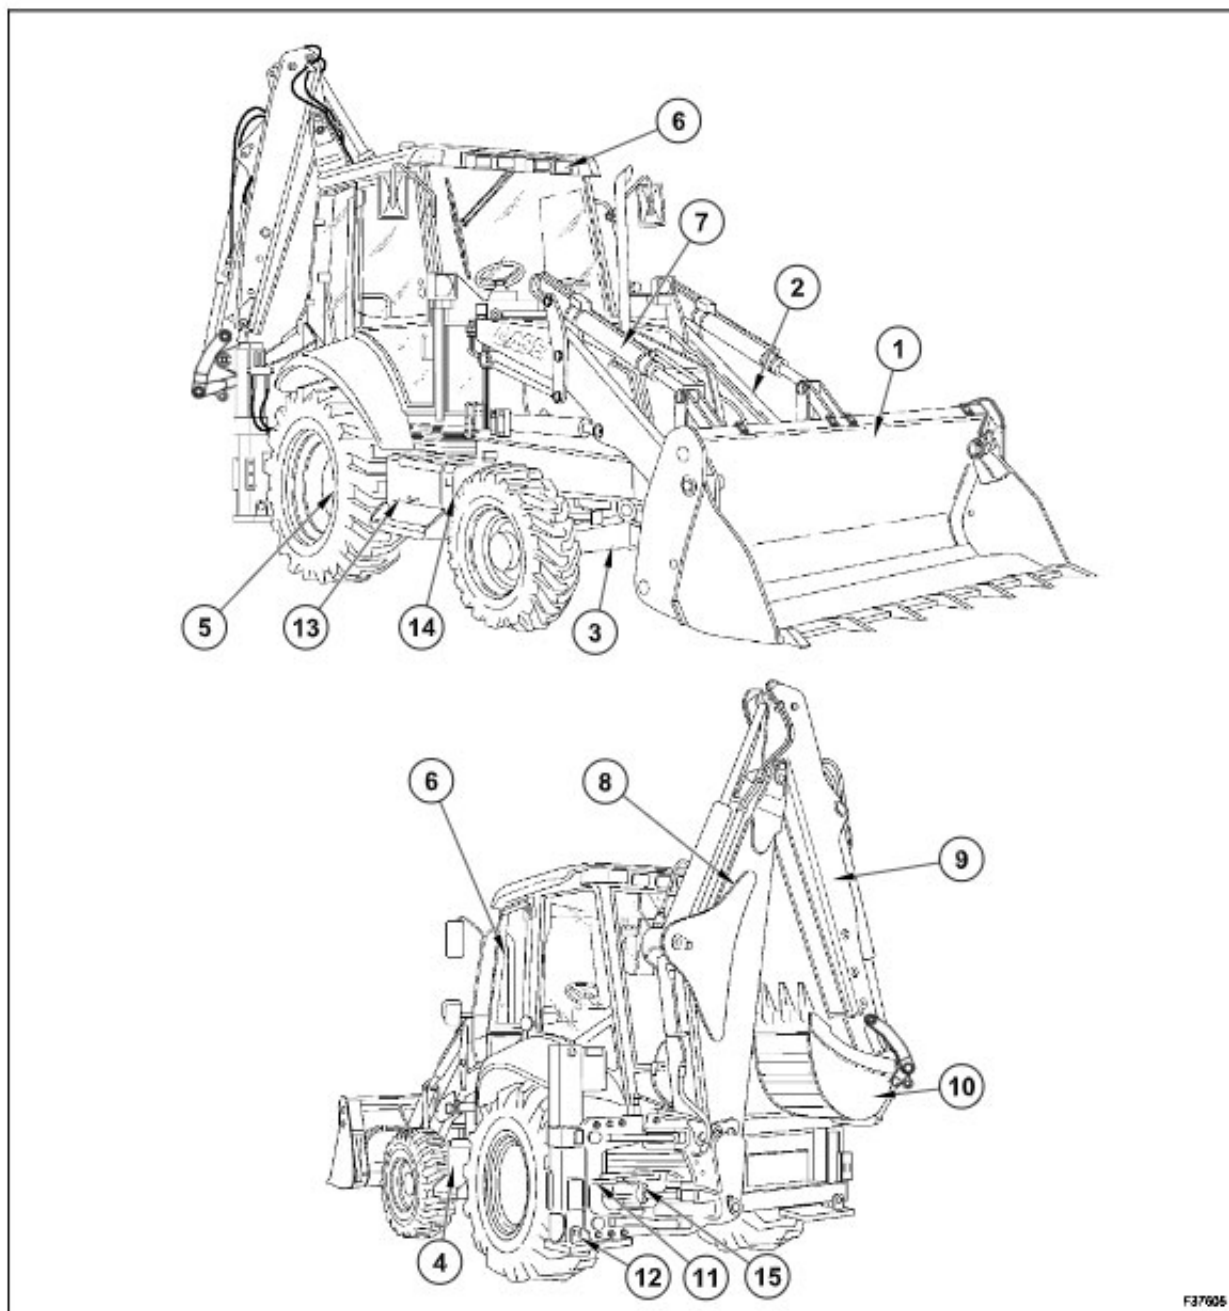


F37605

- | | |
|----------------------------|---|
| 1. Loader bucket | 9. Dipper or telescopic dipper |
| 2. Loader arm | 10. Backhoe bucket |
| 3. Front axle | 11. Backhoe attachment sideshift carriage |
| 4. Fuel tank | 12. Stabilizers |
| 5. Rear axle | 13. Battery box |
| 6. Operator's compartment | 14. Hydraulic oil tank |
| 7. Engine guard | 15. Swing cylinders |
| 8. Backhoe attachment boom | |

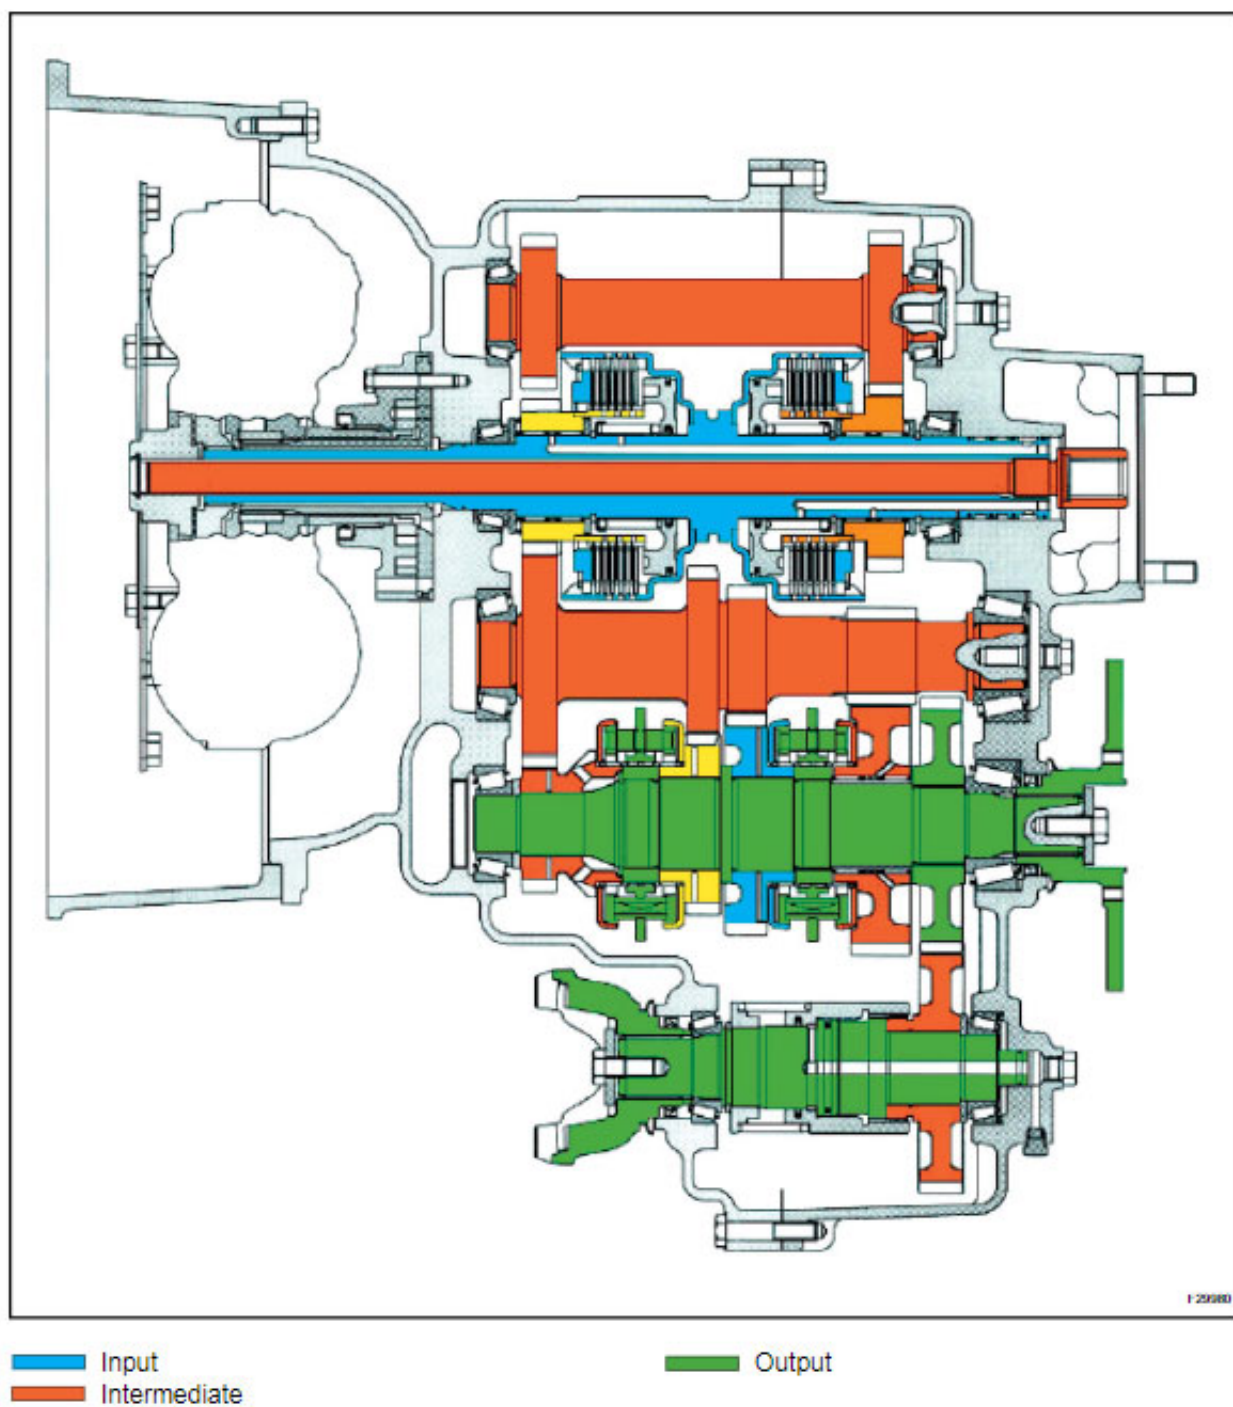 

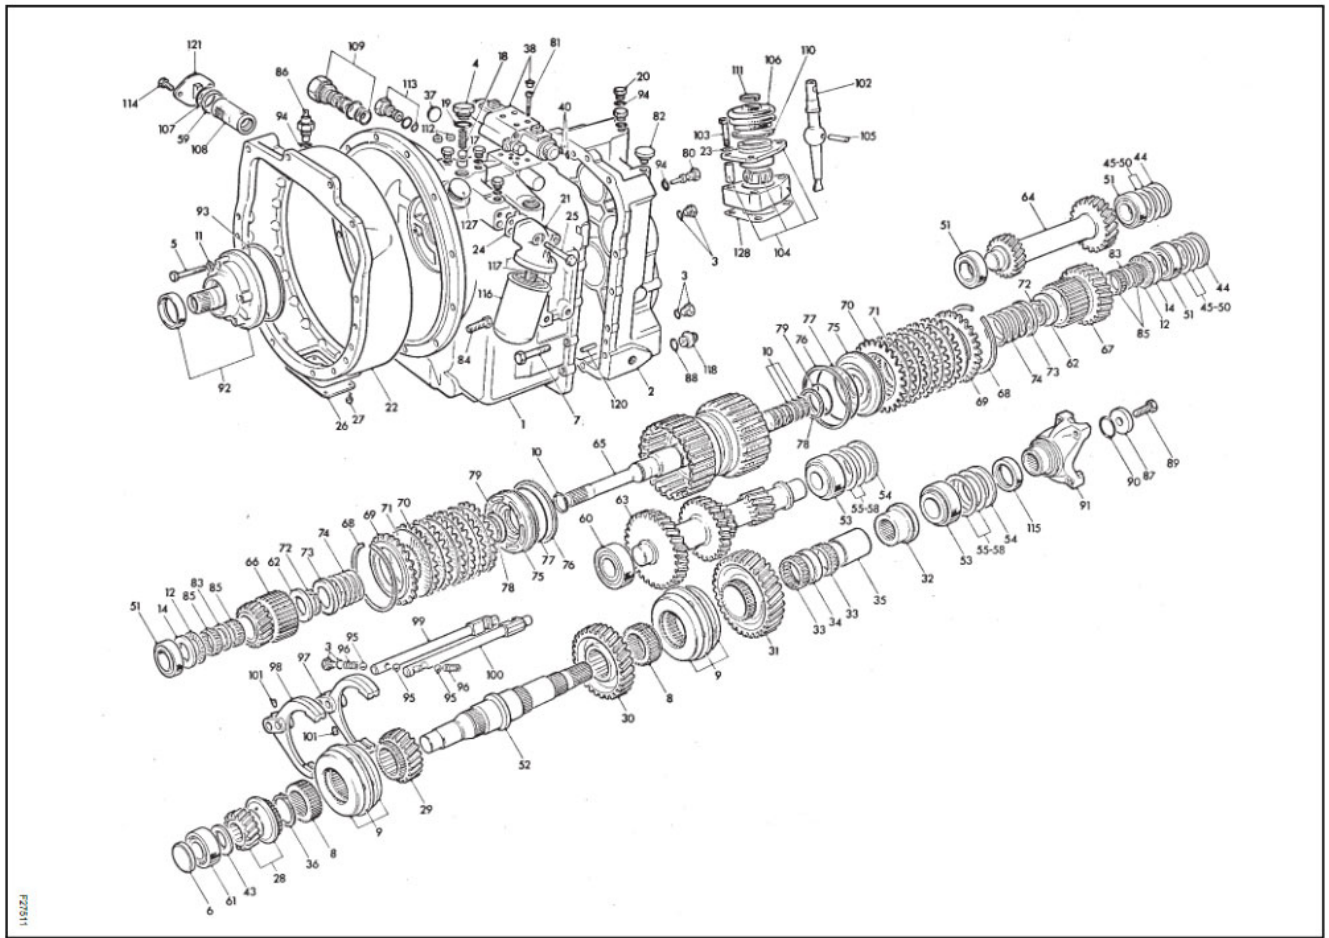 

 Remove the reverse idler shaft assembly.

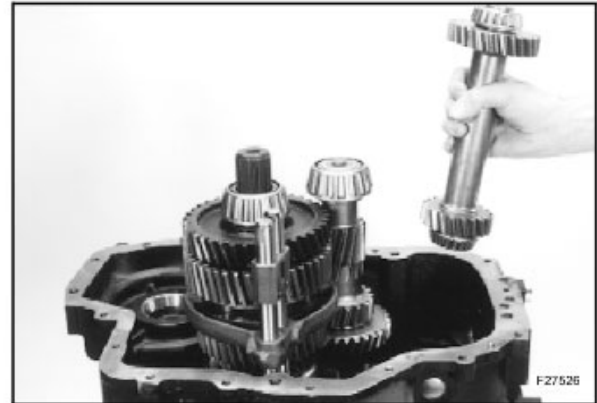

Remove the by-pass plug, the spring and the ball.



Ensure both synchronizers are in the neutral position then remove the 1st/2nd shift fork screw.



Szukasz instrukcji napraw do maszyny której
nie ma na naszym sklepie?

Zadzwoń lub napisz do nas tel. 696 915 311 lub
530 894 984 lub

motodiagnostyka2010@gmail.com.

Podaj markę i model maszyny do jakiej
instrukcji poszukujesz.