 


Link do produktu: <https://www.specdiag.pl/new-holland-tvt-135-145-155-170-190-195-instrukcje-napraw-schematy-instalacji-service-manual-p-1717.html>

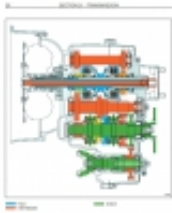

New Holland TVT 135 145 155 170 190 195 - instrukcje napraw + schematy instalacji - SERVICE MANUAL

Cena **250,00 zł**

Opis produktu

Warsztatowe instrukcje napraw wraz ze
schematami instalacji.

Instrukcje serwisowe New Holland
TRACTORS

TVT 135

TVT 145

TVT 155

TVT 170


TVT 190

TVT 195

SERVICE MANUALS


Poniższe zdjęcia są przykładowymi zdjęciami z losowych instrukcji napraw, po dokonaniu zakupu klient otrzymuje dokumentację do wybranego przez siebie modelu.

 PRIMARY HYDRAULIC POWER SYSTEM - Exploded view

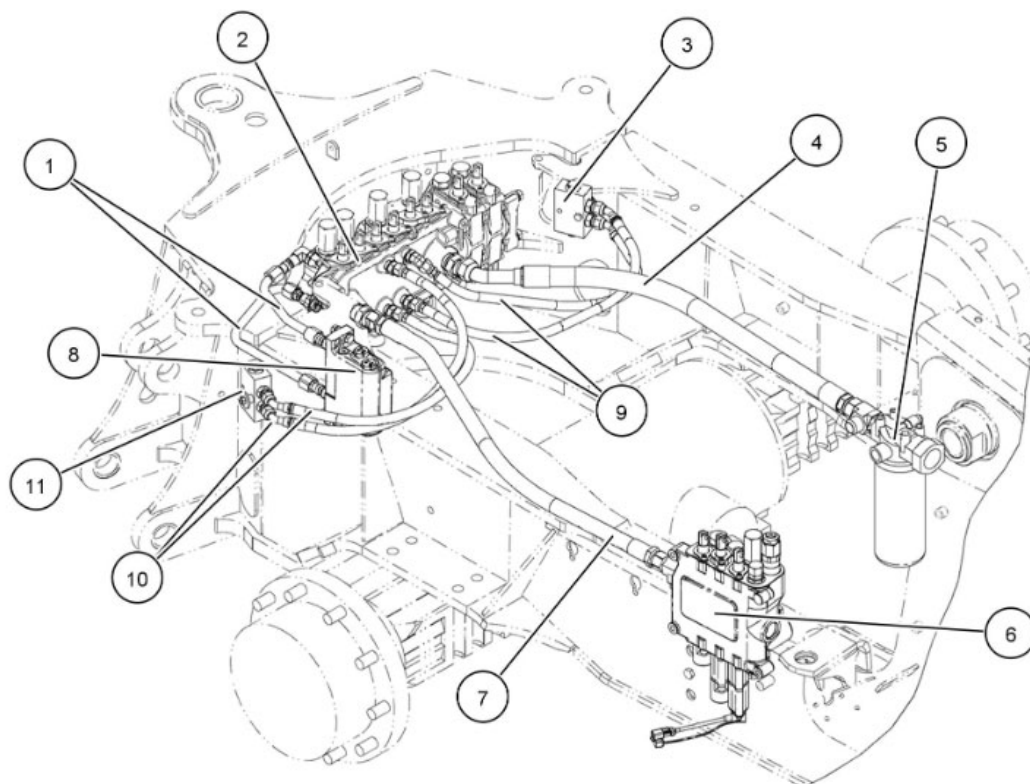


RCPH10TLB005GAM 1

- | | | |
|-------------------------------------|------------------------------|---------------------------------------|
| 1. Hoses swing control | 5. Hydraulic filter | 9. Left stabilizer hoses |
| 2. Backhoe valve | 6. Loader valve | 10. Right stabilizer hoses |
| 3. Left stabilizer load check valve | 7. Pressure to backhoe valve | 11. Right stabilizer load check valve |
| 4. Return to filter | 8. Swing cushion valve | |

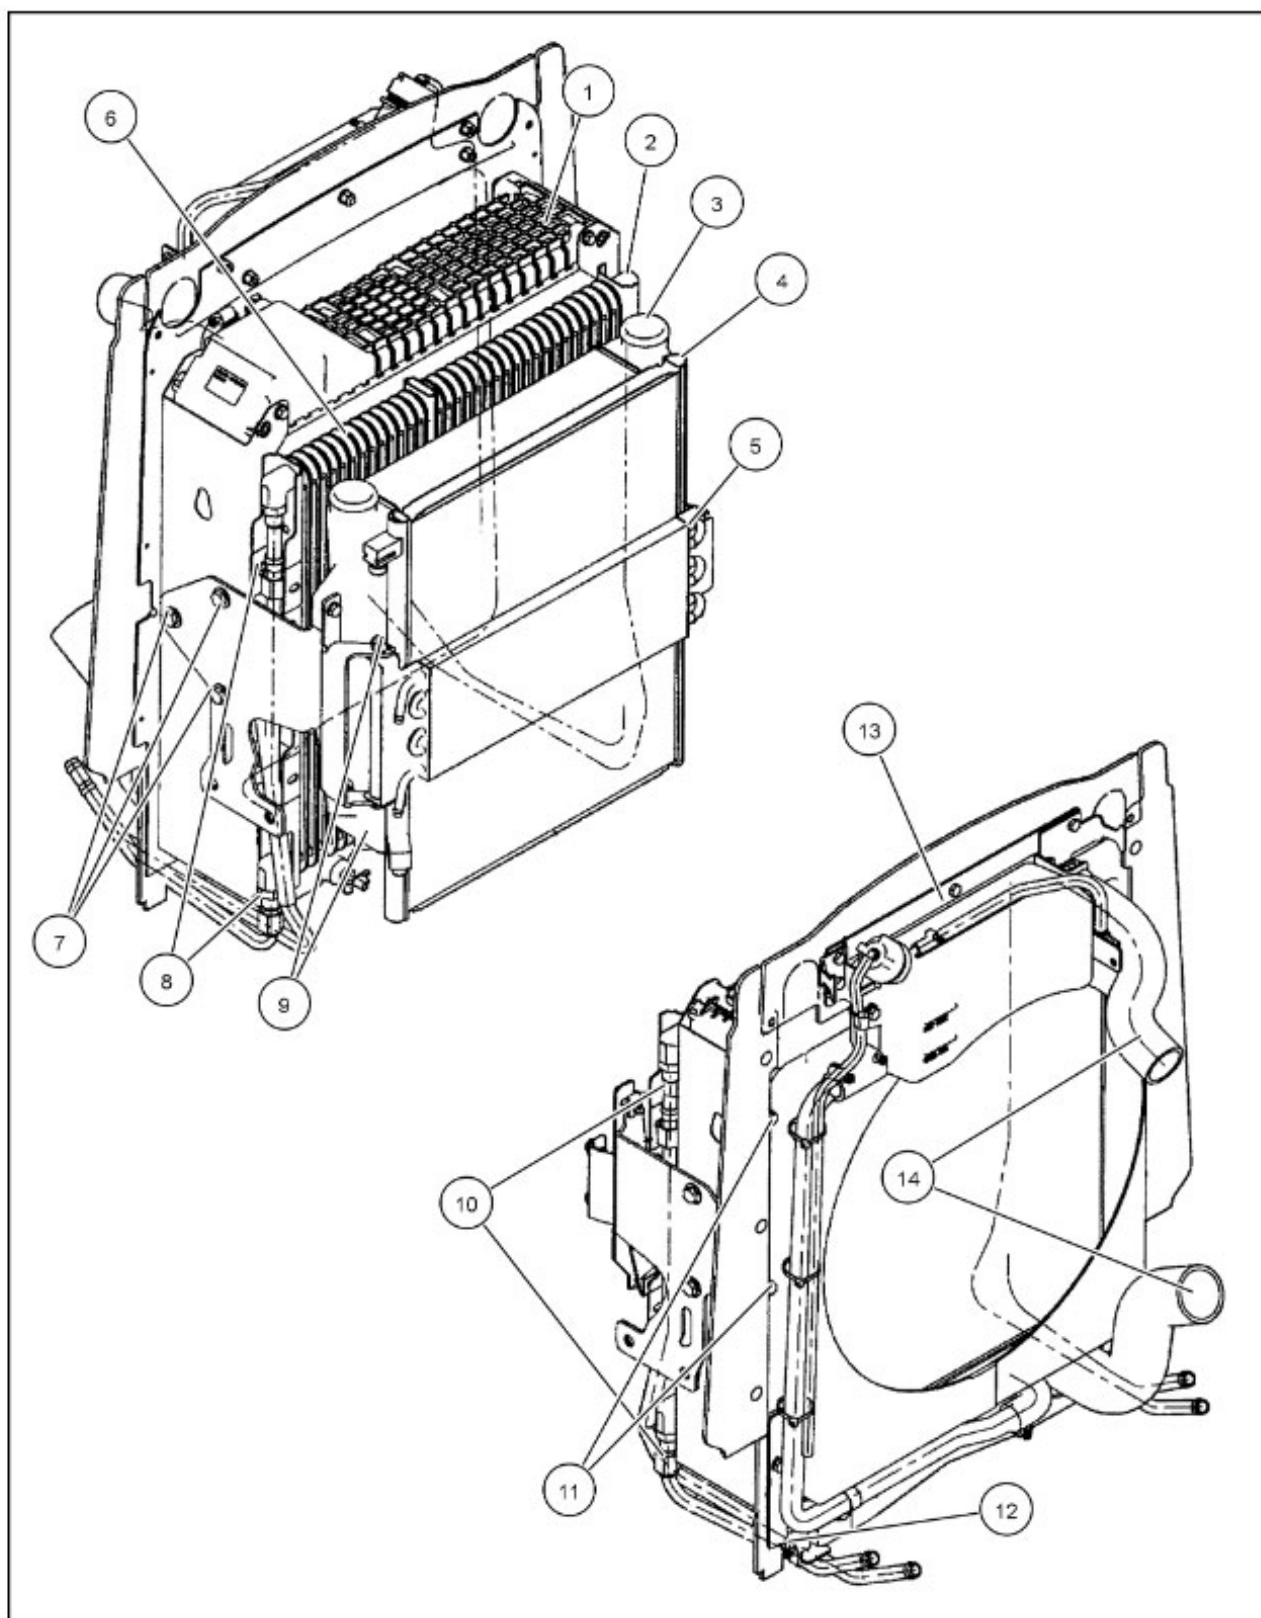 


 7. Remove the charge air cooler hoses and pipes.

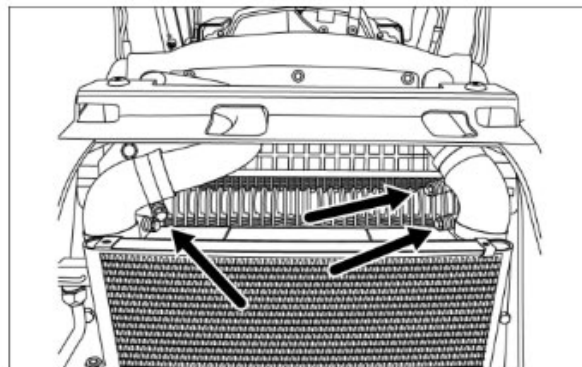


RCPH11TLB015AAM 8

 
8. Cap (seal) all open ports to keep contaminants from entering the system.

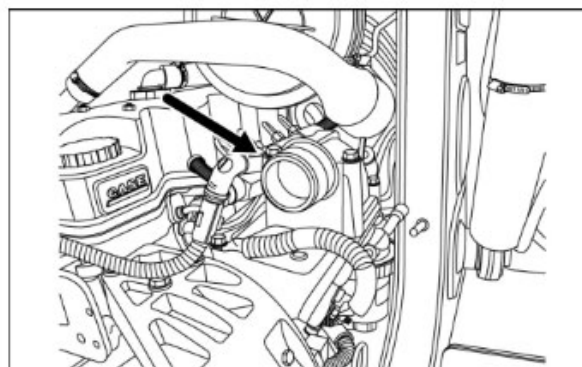


RCPH11TLB015AAM 9

  9. Remove the lower radiator hose.

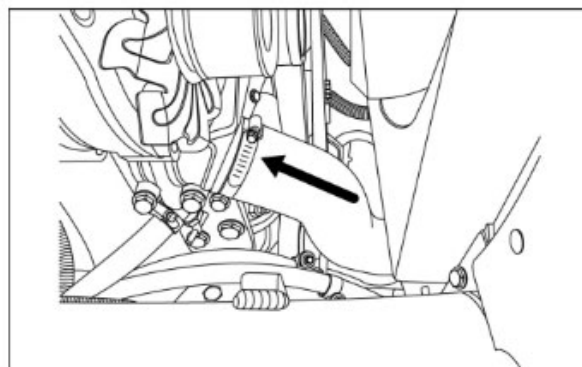

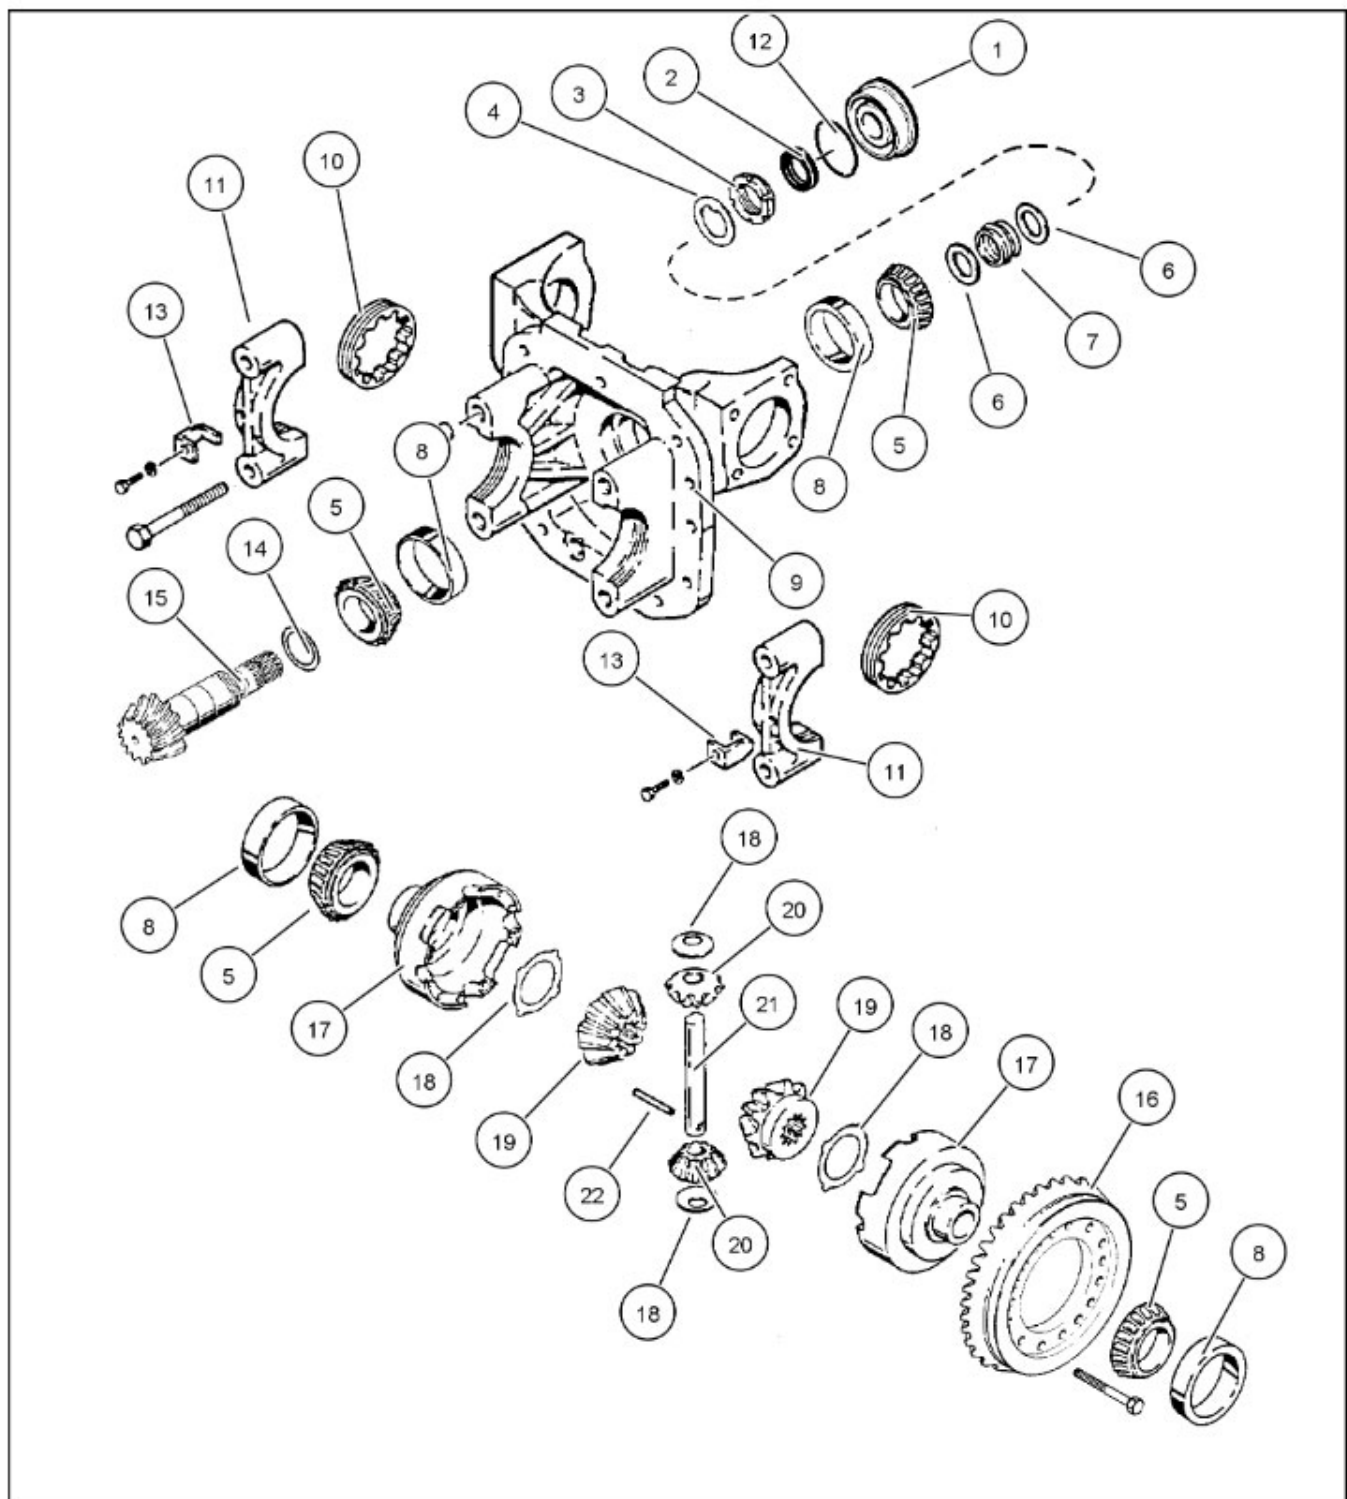


 5. Make sure the bevelled washers are in place, install the upper and lower king pins. Torque the bolts to **120 N·m (88.5 lb ft)**

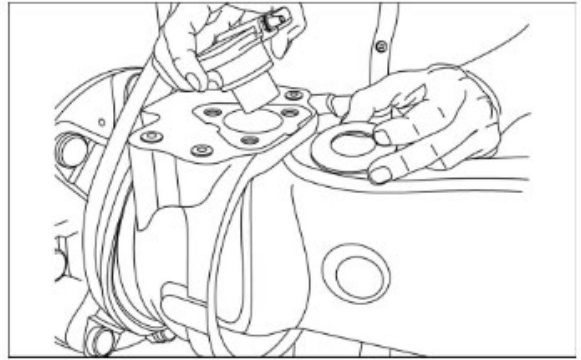


RCPH10TLB002ACL 5

 6. Grease the bearing cone and install it onto the swivel housing.

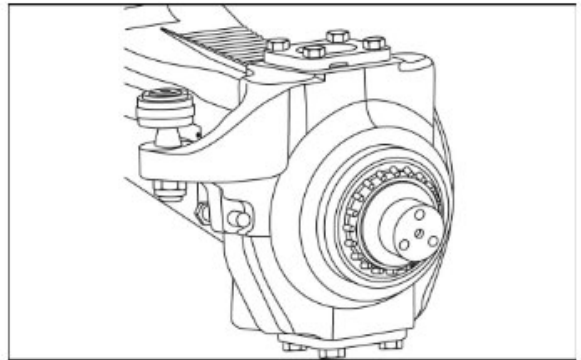


RCPH10TLB007ABL 6

 7. Use suitable drivers and install new bearing cups and seal into wheel hub.

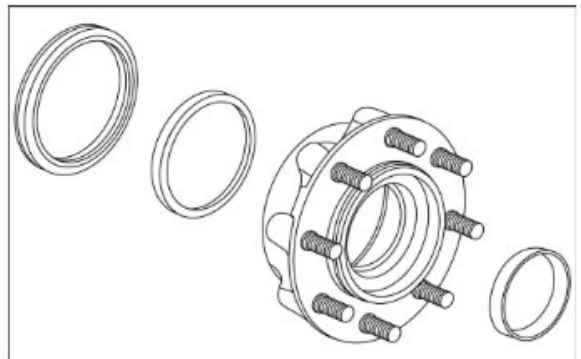


 5. Remove lifting device.

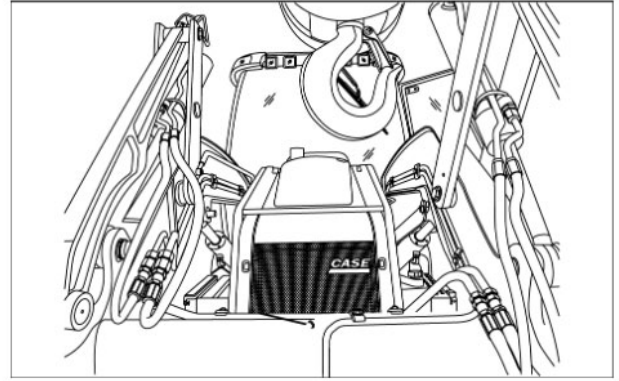

RCPH11TLB102AAM 5

 
6. Lower loader frame to the floor.

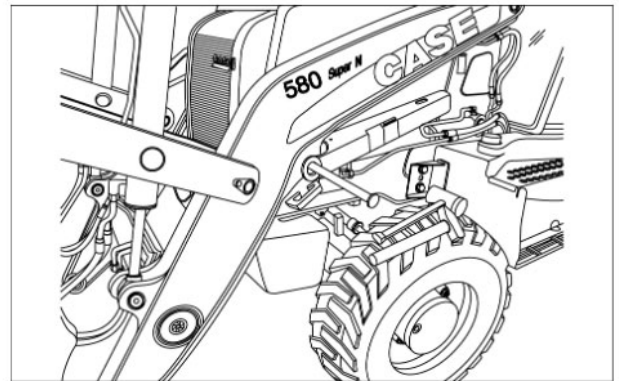

RCPH11TLB103AAM 6

REMOVING THE TORQUE CONVERTER HOUSING AND TORQUE CONVERTER

 STEP 1

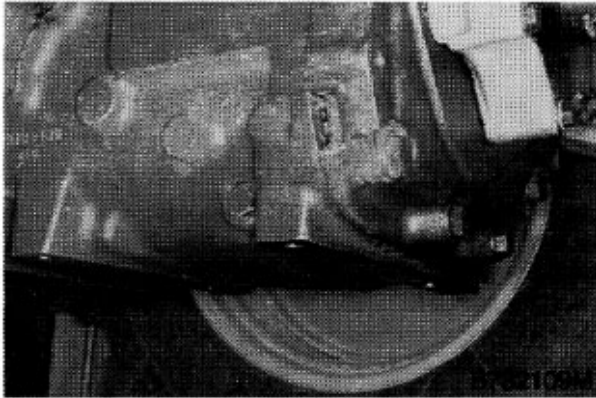

Drain the oil from the transaxle. The transaxle holds approximately 40 U.S. quarts (38 litres). If equipped with a PTO, drain the oil from the torque converter housing.

STEP 2

 
If the machine has four wheel drive, do steps 3 through 7.

STEP 3




Loosen and remove the self-locking nuts from the bolts that hold the guard. Do not remove the bolts now.

STEP 4

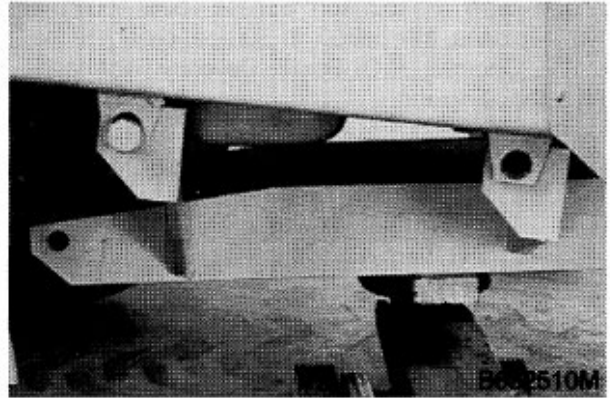

Use a floor jack to hold and lower the guard.

 
STEP 5

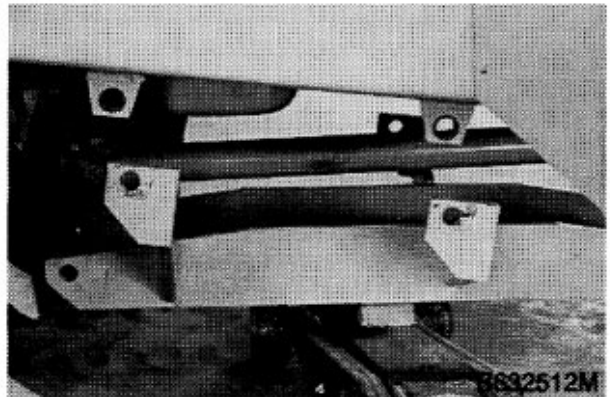

Remove the bolts and carefully lower the guard.


STEP 6

 
Carefully tilt the guard and remove the guard from under the machine.

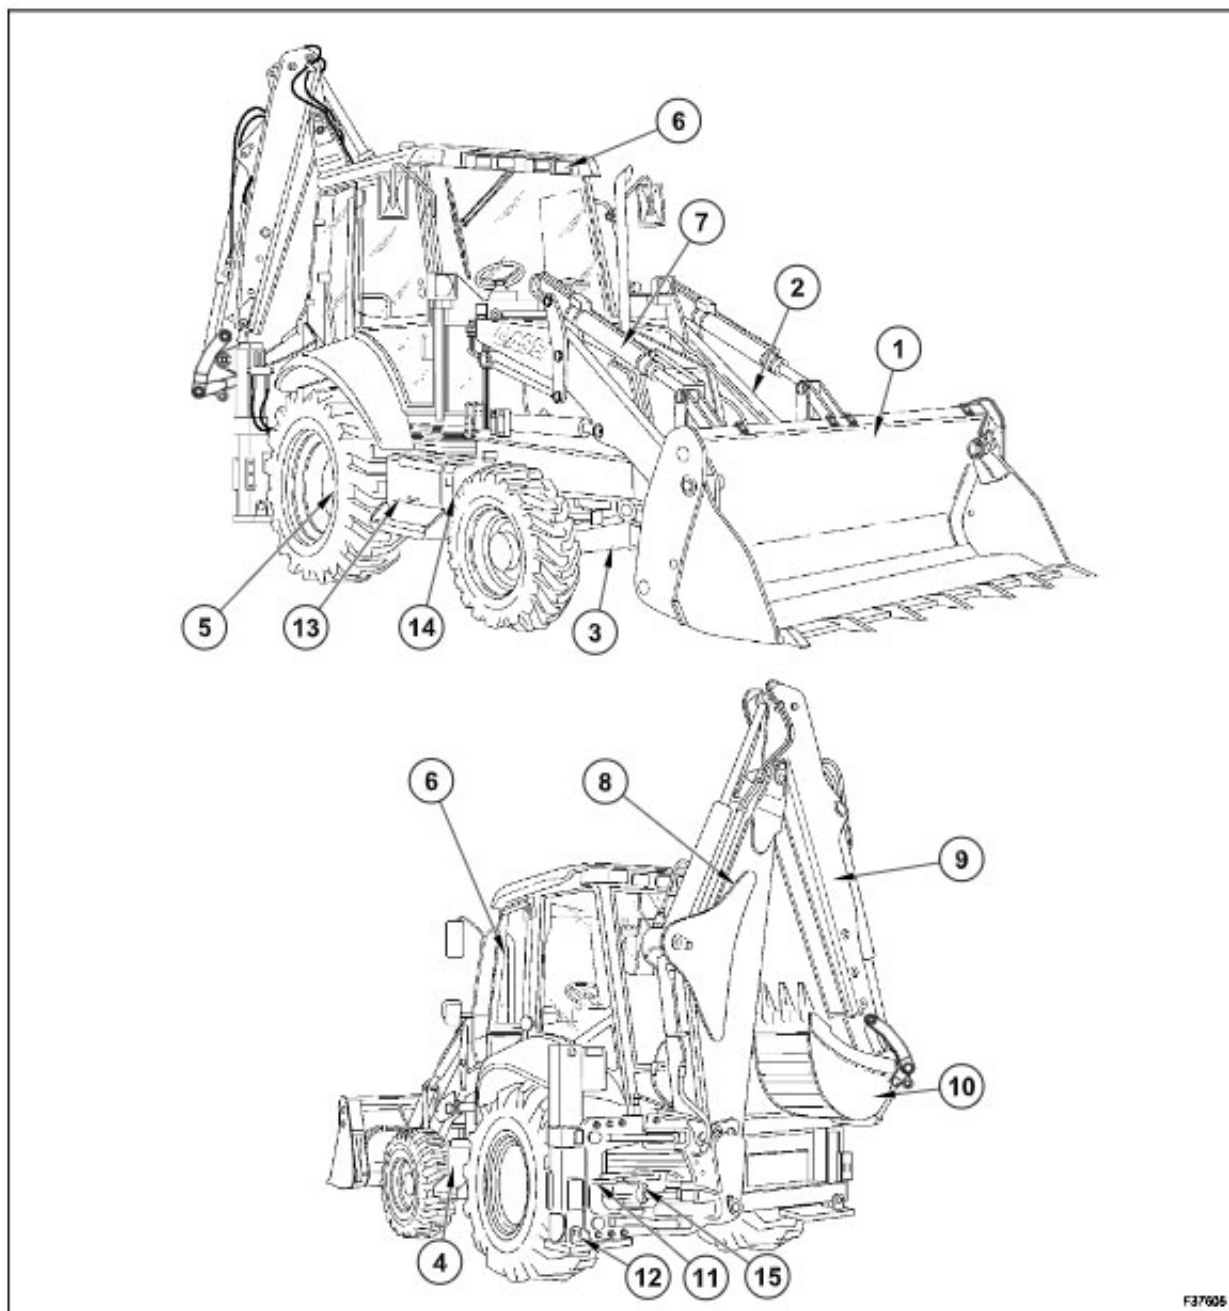


F37605

- | | |
|----------------------------|---|
| 1. Loader bucket | 9. Dipper or telescopic dipper |
| 2. Loader arm | 10. Backhoe bucket |
| 3. Front axle | 11. Backhoe attachment sideshift carriage |
| 4. Fuel tank | 12. Stabilizers |
| 5. Rear axle | 13. Battery box |
| 6. Operator's compartment | 14. Hydraulic oil tank |
| 7. Engine guard | 15. Swing cylinders |
| 8. Backhoe attachment boom | |

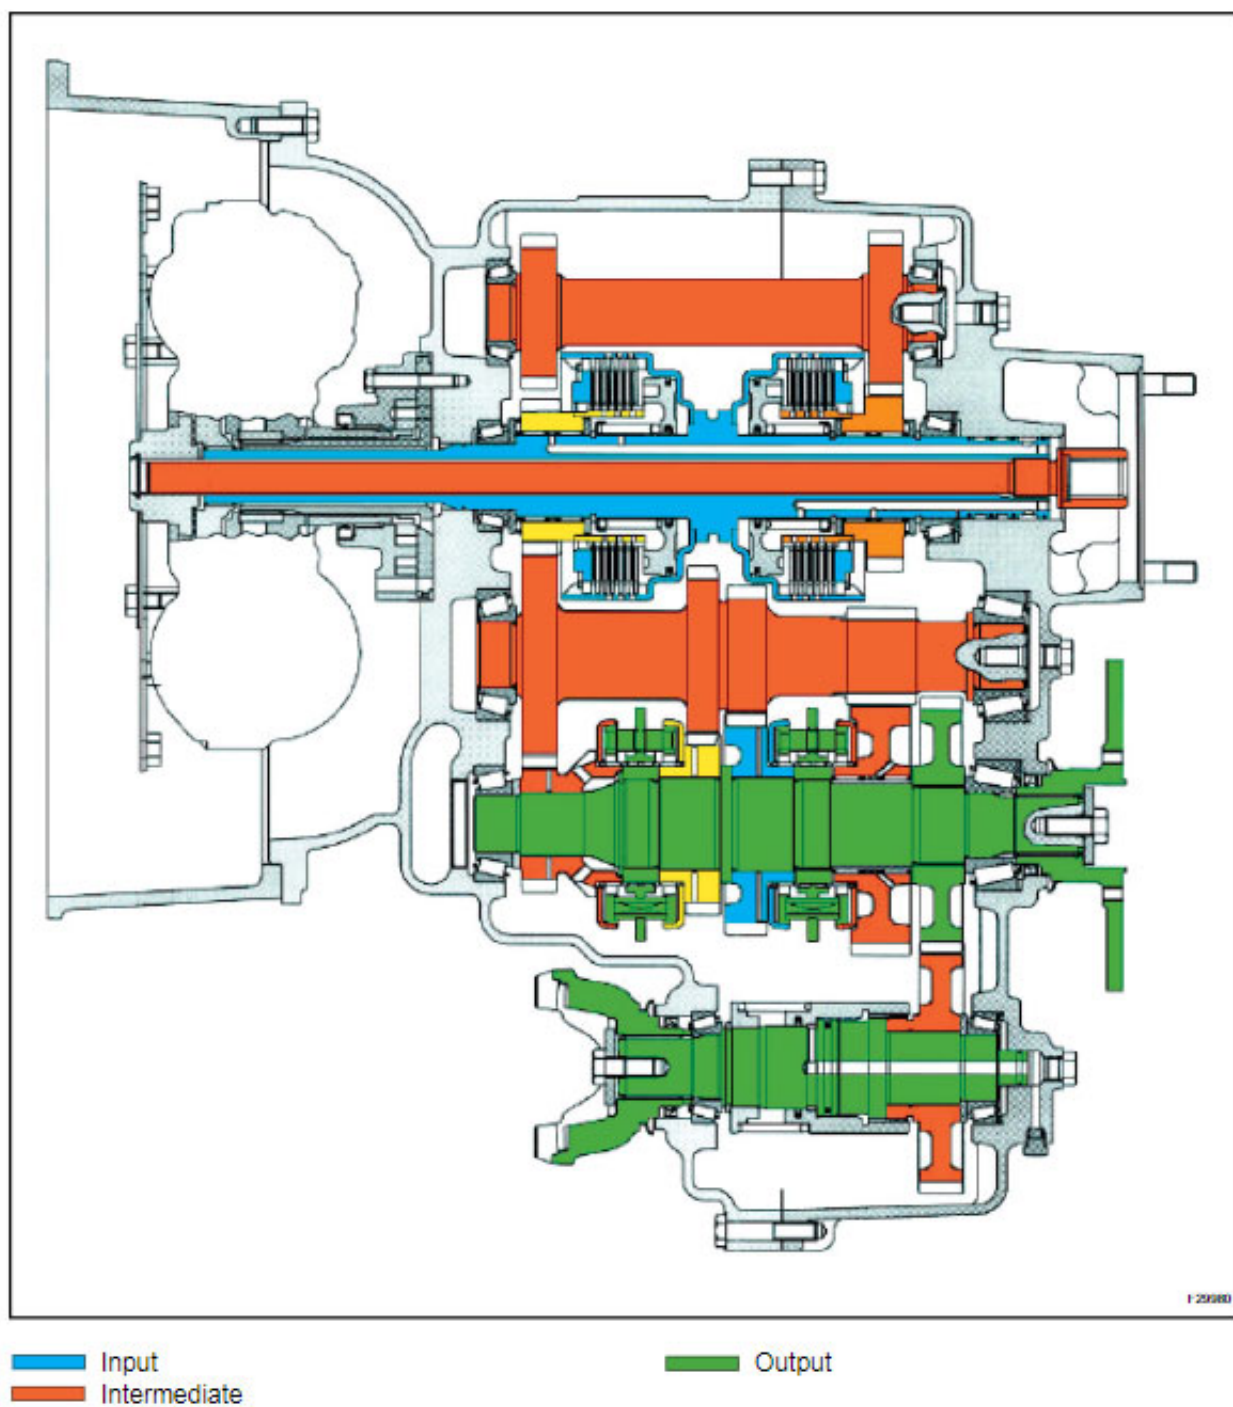 

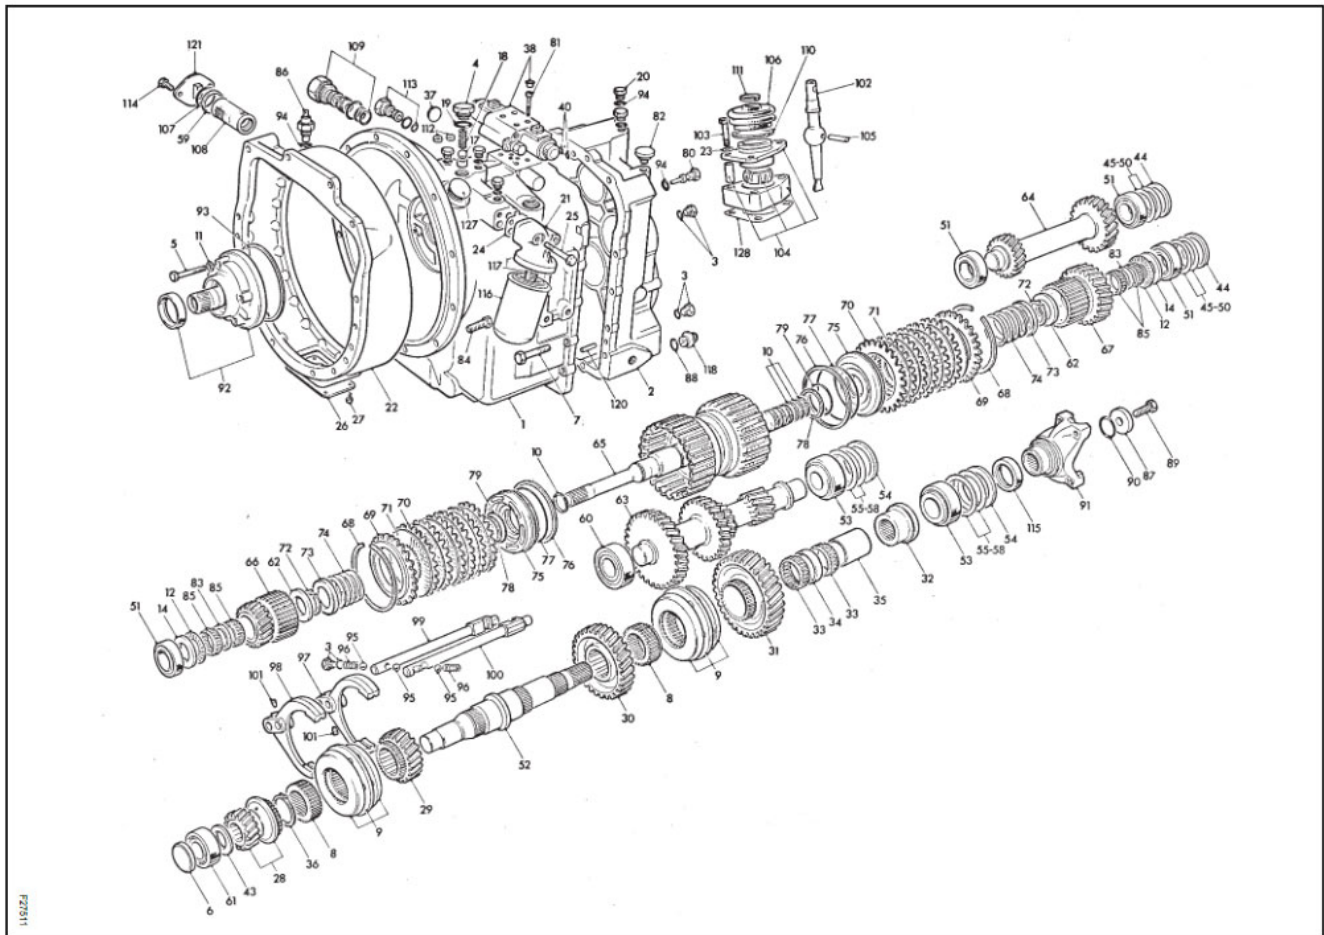 

 Remove the reverse idler shaft assembly.

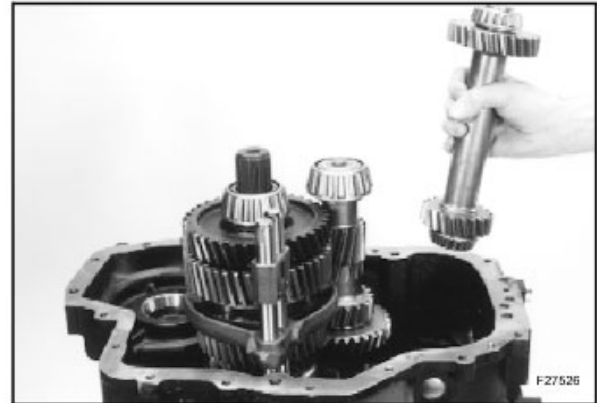

Remove the by-pass plug, the spring and the ball.



Ensure both synchronizers are in the neutral position then remove the 1st/2nd shift fork screw.



Szukasz instrukcji napraw do maszyny której
nie ma na naszym sklepie?

Zadzwoń lub napisz do nas tel. 696 915 311 lub
530 894 984 lub

motodiagnostyka2010@gmail.com.

Podaj markę i model maszyny do jakiej
instrukcji poszukujesz.