

Link do produktu: <https://www.specdiag.pl/perkins-instrukcje-napraw-schematy-dtr-perkins-zestaw-instrukcji-serwisowych-p-1468.html>



Perkins Instrukcje napraw, schematy, DTR - Perkins Zestaw Instrukcji serwisowych

Cena

1 600,00 zł

Opis produktu

Perkins - zestaw instrukcji napraw

Content All:

ELECTRICAL CONNECTORS
OPERATION AND MAINTENANCE MANUAL
PART BULLETINS
PARTS COMPARISON BULLETINS
PARTS KIT INSTRUCTIONS
PERKINS ENGINE NUMBER GUIDE
SERVICE BULLETINS
SERVICE DATA BOOKLET-PART1-MATURE
PRODUCTS UP TO 8,85 LITRES
SERVICE DATA BOOKLET-PARR-CURRENT
PRODUCTS UP TO 8,7 LITRES
SERVICE LETTERS
SERVICE MANUALS

SERVICE TOOLING SPECIAL INSTRUCTIONS

SERVICE MANUAL-Contents:

SERIES 3.152
SERIES 4 CYLINDER
SERIES 6 CYLINDER
SERIES 100
SERIES 200-300 SERIES 400
SERIES 500-PRIMA
SERIES 700
SERIES 800-800 C
SERIES 800-800 D
SERIES 850
SERIES 900
SERIES 1000
SERIES 1100
SERIES 1200
SERIES 1300
SERIES 1500
SERIES 1600
SERIES 2000-EAGLE
SERIES 2200-2500-2800
SERIES 2300
SERIES 3000

SERIES 4000
SERIES V8.540-V8.510
SERIES VS.640
ELECTRICAL CONNECTOR-Contents:

ELECTRICAL CONNECTOR
NEW STARTER WIRING

OPERATION AND MAINTENANCE MANUAL-
Contents:

MODEL-4012 TESI-4016 TESI
MODEL-4016 TAGI-4016 TAG2
MODEL-AA to AH
MODEL-BK
MODEL-BL MODEL-BM-BN
MODEL-BQ-BP
MODEL-DE6-DE8
MODEL-E08-E06
MODEL-EG-EH-EJ-EK
MODEL-EL-EN-EP
MODEL-ER-EQ-EW
MODEL-FJ
MODEL-FT-FE
MODEL-FX-FW-FM-FL
MODEL-G16

MODEL-GAS
MODEL-GG-GH-GJ-GK-GL-GM-GN-GP-GR-GS-GT-
GU-GV
MODEL-HB-HD-HH-HL-HM-HN-HP-HR
MODEL-IH-IF-IG-IZ-IS-IK-IJ-IN
MODEL-IN84182-IN84331-IN84360-IN84372
MODEL-IR-IQ-IW
MODEL-JGK-P84-PP8
MODEL-JG-PK8
MODEL-JR-JS-JT-JV
MODEL-JU
MODEL-KHG
MODEL-LG-PK9
MODEL-LN-LQ-LR MODEL-LT-LU-LV
MODEL-MGA-MGB-MGD MODEL-MK-ML
MODEL-MT-MU-MW
MODEL-NGK-VGF-VGE
MODEL-NGW-YG
MODEL-NH-NJ
MODEL-NK-NL-NM
MODEL-NP-NR
MODEL-PJ
MODEL-PK
MODEL-PK3
MODEL-PK5
MODEL-PP3-PP4-TGK

MODEL-PP5
MODEL-PP8
MODEL-PP-PR-PT-PU
MODEL-PV-PW
MODEL-R5H
MODEL-R8H
MODEL-RE-RG-RJ-RR-RS-RT-DC-DD-DF-DG-DJ-DK
MODEL-S12
MODEL-S16
MODEL-SD8-SD6-DGBH
MODEL-SU-ST
MODEL-TGB-TGD-TGF
MODEL-UK-UL
MODEL-WG6
MODEL-WK-WL-WM-WN-WP-WQ-WR-WS
MODEL-XGA-XGB-XGD-XGE-XGF-XGH
MODEL-XK-XL-XM
MODEL-YA to YD

PARTS BULLETINS-Contents:

3.152 - 1000 Series4 Cylinder Assembled Long
Engines

3.152 Agricultural Engine Overhaul Kits

3.152 Industrial Engine Overhaul Kits
400 Series Long Engines
400C Power Exchange Long Engines
700 & 900 Series Valvetrain Kits
1000 Series Exchange Crankshafts
1000 Series Exchange Cylinder Heads
1103C & 1104C Cylinderre-bore
1104 -1106 NEW FOR OLD TURBOCHARGERS
NOW AVAILABLE
1104D Electronic Secondary Fuel Filter Change
1106D Series Service Tools List
2300 - 2500 - 2800 Series Valve Seat Inserts
2300 & 2800 SERIES TOOLSLIST-GBP
2300, 2500 and 2800 Series Service Tools List
2656F843-Packaging Change
4000 Series Exchange Gas Cylinder Heads
Bearing Rationalisation and Material Change V2
Brand Protection
Change of Moulded Anti-Drain Diaphragm on
Key Oil Filters
Change to Unit of Issue
Compact Communication Adapter
CRANK WEAR SLEEVE AVAILABILITY
Extended Service Contract Pricing Review
Filter Cross Reference Update
Fractured Split Connecting Rods

Introducing Power Exchange Part Numbers Look
For The R

Launch of the Parts Help Desk Web Front-end
Logic Control Governor 1 (LCG1) conversion to
Logic Control Governor 2 (LCG2)

Long Engine Kits

Minor and Major Cylinder Head Kits

New and improved front oil seal!

NEW FILTER SALES SUPPORT TOOLS

OIL COOLER GASKET KITS

Packaging Material Change

PDF Parts Books

Perkins Genuine Filters -Changes to 26561118

Perkins Genuine Filters- Changesto Design

Perkins Overhaul Kit Breakdown Matrix

Piston Ring Kit Packaging Change

POWERPART EXTENDED LIFE COOLANT

Recommended parts list for new 4006 engines

Roll out of Peterborough Pre-1978 Engine Data

Soft Gasket Material Change

The Integrated Product Support Solution (TIPSS)

Software Help And Support Contacts

Tier 0 1000 Series Exchange Short Engines

Tier 1 'New' 1000 Series Exchange - Assembled
Long Engines

Tier 1 'New' 1000 Series Exchange Short

Engines
TIPSSand ONLINE LICENSING
Water Pump Repair Kit Phase Out

PARTS COMPARISON BULLETINS-Contents:

PERKINS REAR END OIL SEAL-REOS-VS
CONTERFEIT
PERKINS CRANKSHAFT AGAINST THE IQ
CRANKSHAFT

PARTS KIT INSTRUCTION-Contents:

4.41 Cylinder Block Or Cylinder Head Kit
100 and 400 Series cylinder head gaskets
700 Series engine overhaul kit
700 Series engine valve train kit
700,900 and 1000 series long engine kit
800 Series Core Plug Replacement
800 Series Electrical Connection Kit
900 Series Cylinder Head Kits
900 series engine overhaul parts kit
900 Series engine valve train kit
1000 Series Overhaul Kit
1100 Series Atomisers
1100 Series Fuel Injection Pump

1100 Series Naturally Aspirated 4 cylinder Part
Leak Off Pipes Kit
1100 Series oil and intake manifold pressure
connectors
1100 Series oil and intake manifold pressure
connectors-2 1
1060 Cap Kit
2000 Series Power Exchange long Engines
3000 series engine cooling fan parts kit
Additional Fuel Fier Kit
Assembled Long Engines 3.152 and 1000 Series
4 Cylinder
Bearing Kits
Camshaft Position Sensor Kit
Check for damage to the rubber blanking cap
Check The rubber blanking cap
Conversion for Long Engines
Conversion of the ignition system
Crankshaft Front Seal
Crankshaft palm tapped holes for
6.354,6.60and 6.601engines
Crankshaft liming Ring
Cylinder Block Kit For A Short Engine
Cylinder Block Kit
Cylinder Head Bolts Cylinder Head Valve Seat
Kit

Cylinder Sleeve and Sealing Ring Kit
DPG-2104 Controller
Electrical Connections for the Analog Throttle
Pedal
Electrical Connections for the PWM Throttle
Pedal
Electronic Control Governor
Electronic Unit Injectors - Remove and Install
Electronically Governed Stanadyne Fuel
Injection Pumps
Eliminating Leakage from the Oil Filter Head
Sealing Face on 800 Series engines
Engine Oil Cooler
Engine Oil Pump Idle Gear
Engine Serial Numbers for Short Engines
Fitting bearing shells into fractured split
connecting rods
Fitting of a 'long engine'
Fractured -split connecting rods for
turbocharged 6354.4, 4.236, 1000 Series 4 and 6
cylinder and 1100 Series 6 Cylinder engines
Fuel Injection Pump Locking Screw and Locking
Spacer
Fuel injection pump rated speed
High Pressure Fuel Lines for engine model PJ
Injector leak-off rate measurement procedure

Installation of BFPM Conversion Kit (Four
Cylinder Engines)
Installation of Cold Climate Kit for 4 Cylinder
Engines
Installation of Cold Climate Kit for 6 Cylinder
Engines
Installation of Coolant Expansion Tank
Installation of Differential Pressure Sensor
(NRS) Kit
Installation of New Engine Oil Pump
Installation of New Fuel Priming Pump (BFPM)
Installation of New Fuel Priming Pump
Instructions for Fitting and Servicing 11060
Turbos
Instructions to fit a bridge piece
Instructions to fit a new turbocharger
Instructions to fit a new turbocharger-2
JPT ESOS Introduction and conversion
Machining of new cylinder liners fitted to 900
Series engines
Mounting Bracket Part 2634A157
Mounting Kits for Fuel Priming Pump
New 1000 series engine overhaul parts kit
New 1000 Series exhaust manifolds
New Primary Fuel Filter Element
New rear end oil seal

New Secondary Fuel Filter
New timing case covers and 'O' ring
Oversized pistons for 1103 and 1104 Series
Engines
Perkins 900 Series Cylinder block kit (ZZ50304)
Perkins Consumables
Perkins LC Governor Installation
Perkins Water Pumps
Phaser-1000 Series Cylinder Block Kit
Power Exchange Crankshaft Kits
Power Exchange Long Engines
Power Exchange Long Engines-2
Power Exchange Long Engines-3
Prima Head Gasket Incorrectly Stamped
Prima Short Engines
Protection Kit (3724232)
Protection Kit (3724232)-2
Protection Kit (3881289)
Protection Kit (3932259)
Protection Kit
Replacement of Vibration Isolators for the Fuel
Filter-Lift Pump Assembly
Replacement Water Pump
Replacing Logic Control Governor 1 with the
new Logic Control Governor 2
Sealing of the lubricating oil cooler and blanking

plate
Service timing kit U5MK0396
Starter Motor Introduction
To fit the new three-piece exhaust manifold to
New 1000 Series engines
To fit the timing ring to the crankshaft for 1104
and 1106 engines
To set the flight speed
Valve stem oil seals for the 1100 Series 3 and 4
Cylinder engines
Valve Train Kits
Wastegate Actuator Replacement
Wiring Diagram for Coolant Level Switch Kit
(Perkins kit number CV25001)

PERKINS ENGINE NUMBERS GUIDE-Contents:

PERKINS ENGINE NUMBER GUIDE

SERVICE BULLETINS-Contents:

3.152 SERIES-C
4.107-4.108 SERIES-EA
4.165 SERIES-GA
4.203 SERIES-JD
4.236 SERIES-LM

6.354 SERIES-TC
6.3544 SERIES-TW
100 SERIES-K
130 SERIES-W
200-300 SERIES-G
400 SERIES-H
500 SERIES-B
700 SERIES-U
800 SERIES-UE
854 SERIES
900 SERIES-CP
1000 SERIES-A
1100 SERIES-R
1200 SERIES
1300 SERIES-W
1600 SERIES-XG
2000 SERIES-S2
2200 SERIES-TG
2500 SERIES-MG
2800 SERIES-FH
3000 SERIES-S3
4000 SERIES-D
EAGLE SERIES-SE
GENERSERVICE BULLETINS
T6.3543 SERIES-TP
V8 540-640 SERIES-X

SERVICE DATA BOOKLET
-PART1-MATURE PRODUCTS UP TO 8,85 LITERS-
Contents:

PART1

SERVICE DATA BOOKLET-
PART2-CURRENT PRODUCTS UP TO 8,7 LITERS-
Contents:

PART2

SERVICE LETTERS-Contents:

400 SERIES-New Flash Files
400 SERIES-Nuts for Rocker Shaft
400 SERIES-Piston Kits
400 SERIES-Replacement of the Engine
1100 SERIES-Charge Cooler Tube Assembly
1100 SERIES-Crankshaft Timing Ring -2
1100 SERIES-Crankshaft Timing Ring
1100 SERIES-Crankshaft Timing Ring-3
1100 SERIES-Crankshaft Timing Ring-4
1100 SERIES-Cylinder Head Valve Adjustment
Screw

1100 SERIES-Emissions Certification Film -
Replace
1100 SERIES-Engine Oil Pump
1100 SERIES-Replacement Electronic Control
Module
1100 SERIES-Tube Assembly
1200 SERIES-Engine Oil Pressure
1200 SERIES-Flash File Update
1200 SERIES-New Flash File
1200 SERIES-New Flash Files
1300 SERIES-Engine Wiring Harness
2200 SERIES-Fan Drive Bolts
4000 SERIES-Bolts for the Fuel Linkage
4000 SERIES-Charge Cooler

SERVICE MANUALS-Contents:

SERIES 3.152
SERIES4 CYLINDER
SERIES 6 CYLINDER
SERIES 100
SERIES 200-300 SERIES400
SERIES 500-PRIMA
SERIES 700
SERIES 800-800 C
SERIES 800-800 D

SERIES 850
SERIES 900
SERIES 1000
SERIES 1100
SERIES 1200
SERIES 1300
SERIES 1500
SERIES 1600
SERIES 2000-EAGLE
SERIES 2200-2500-2800
SERIES 2300
SERIES 3000
SERIES 4000
SERIES V8.540-V8.510
SERIES VS.640
3.152 SERIES-USER HANDBOOK
3.152 SERIES-WORKSHOP MANUAL

SERIES 4.41
SERIES 4.108
SERIES 4.154
SERIES 4.165
SERIES 4.192
SERIES 4.203
SERIES 4.2032
SERIES 4.2482-4.248-T4.236-4.236-4.212-T4.38

SERIES G4.203
SERIES G4.236

SERIES 6.247
SERIES 6.254
SERIES 6.354-T6.354-6.3542-6.372
SERIES 6.3544-T6.3544-6.3724
SERIES T6.3543

SERIES 100-USER HANDBOOK
SERIES 100-Workshop Manual

SERIES 200-300-USER HANDBOOK
SERIES 200-300-Workshop Manual

400 A-D SERIES-GG-GH-GJ-GK-GL-GM-GN-GP-GR-
GS-GT-GU-GV
400 C SERIES-HB-HD-HH-HL-HN-HP-HR
400 F SERIES-EL-EN-EP
400 F-E SERIES-ER-EQ-EW
404 A-EX SERIES

500-PRIMA-Workshop Manual
500-User Handbook
PRIMA 80T-User Handbook

SERIES 700-UA-UB-UC
Workshop Manual
User Handbook

SERIES 800-800C
DISASSEMBLY AND ASSEMBLY-UE-UF
OPERATION AND MAINTENANCE MANUAL-UE-UF
SPECIFICATIONS-UE-UF
SYSTEMS OPERATION TESTING AND ADJUSTING-
UE-UF

SERIES 800-800D
DISASSEMBLY AND ASSEMBLY-UK-UL
OPERATION AND MAINTENANCE MANUAL-UK-UL
SPECIFICATIONS-UK-UL
SYSTEMS OPERATION TESTING AND ADJUSTING
-UK-UL

SERIES 850
854F-E34T AND 854E-E34TA
854F-E34TA-ENGINE-56kw-JU
CUSTOMER ASSEMBLY-1204F-E44TAA-MT-
MU-854F-E34T-JS-JT-1206F-E70TA-BM-BN

SERIES 900-CP·CR-USER HANDBOOK
SERIES 900-CP·CR-WORKSHOP MANUAL

SERIES 900-CT GAS USER HANDBOOK

SERIES NEW 1000-AF-GAS-USER HANDBOOK

SERIES NEW 1000-AF-GAS-WORKSHOP MANUAL

SERIES NEW 1000-AJ-AS-YG-YK-USER
HANDBOOK

SERIES NEW 1000-AJ-AS-YG-YK-WORKSHOP
MANUAL

SERIES 1000-AA-AH-YA-YD-USER HANDBOOK

SERIES PHASER 135Ti-AL-EURO 2-WORKSHOP
MANUAL

SERIES PHASER-1000-AA-AH-YA-YE-WORKSHOP
MANUAL

SERIES PHASER-AA-AE-YA-YE-USER HANDBOOK

SERIES PHASER-AL-EURO 2-USER HANDBOOK

SERIES 1100

1103 D-XK-XL-XM-INDUSTRIAL ENGINES

1103-1104 ABC-RE-RG-RJ-RR-RS-DC-D D-DF-
DG-DJ-DK-INDUSTRIAL ENGINES

1104 C-RF-RH-RK-ELECTRONIC-INDUSTRIAL
ENGINES

1104 D-E44T-1104 D-E44TA-NP-NR-INDUSTRIAL
ENGINES

1104 D-NH-NJ-INDUSTRIAL ENGINES

1104 D-NK-NL-NM-INDUSTRIAL ENGINES

1106 A-C-D-PP-PR-PT-PU-INDUSTRIAL ENGINES

1106 C- 1106 D-PV-PW-INDUSTRIAL ENGINES

1106 C-PK-GENSET

1106 C-VK-INDUSTRIAL ENGINES

1106 D-PJ-INDUSTRIAL ENGINES

ELECTRONIC DIAGNOSTIC DEVICE-USERS

HANDBOOK

PERKINS LOGIC CONTROL GOVERNOR ONE-

LCG1-PERKINS LOGIC CONTROL GOVERNOR

TWO-LCG2

THE DURABILITY OF THE FUEL SYSTEMS

SERIES 1200

1204 E-E44TA-1204 E-E44TTA-1206 E-E66TA-

BK-MK-MI-ENGINES

1204 E-E44TA-1204 E-E44TTA-MK-MI-

INDUSTRIAL ENGINES

1204 F-E44TA-1204 F-E44TTA-MT-MU-MW-

INDUSTRIAL ENGINES

1206 E-70TTA-BL-ENGINES

1206 E-E66TA-BK-INDUSTRIAL ENGINES

1206 F-E70TA-1206 F-E70TTA-BM-BN-

INDUSTRIAL ENGINES

DEF CLEANLINESS KITFOR 1200F

SERIES 1300

PEREGRINE AND NOW GENERATION 1300
SERIES-WD-WJ
PEREGRINE EDi AND 1300 SERIES EDi-WK-WS
PEREGRINE-1300 SERIES-WB-WC

SERIES 1500
1506 A-C-D-LG-PK9-INDUSTRIAL ENGINES

SERIES 1600
1600 SERIES-XGA-XGB-XGD-XGE-XGF-
INDUSTRIAL ENGINES

SERIES 2000
ALL 2000 DIESEL MODELS-USERS HANDBOOK
MODELS 2006 SIAND 2006TSI-GAS-USERS
HANDBOOK
WORKSHOP MANUAL

SERIES EAGLE
EAGLE 800-EAGLE TX-EAGLE TX
2000-WORKSHOP MANUAL
EAGLE TX 2000-USERS HANDBOOK
EAGLE TX AND EAGLE 800-USERS HANDBOOK
SERIES-2200-2500-2800
2206 D-E13TA-PK3-INDUSTRIAL ENGINE

2206 F-E13TA 2506 F-EI5TA-2806 F-E18TA-
P84-PP5-PP4-INDUSTRIAL ENGINES
2206 F-E13TA-PP3-PP4-INDUSTRIAL ENGINE
2206-E13-TGB·TGD-TGF-INDUSTRIAL ENGINE
2506 D-EI5TA-PK5 1-UP-INDUSTRIAL ENGINE
2506 D-EI5TA-PK5-INDUSTRIAL ENGINE
2506 D-EI5TA-PK5-UP-INDUSTRIAL ENGINE
2506 F-EI5TA-2806 F-EI8TA-
P84-PP5-INDUSTRIAL ENGINES
2806 C-E16-INDUSTRIAL ENGINE
2806 C-E18TA-2806 D-EI8TA-2806 D-E18TTA-JG-
PK8-INDUSTRIAL ENGINES
2806 F-E18TA P84-INDUSTRIAL ENGINE
ELECTRONIC DIAGNOSTIC DEVICE

SERIES 2300

2306A-E14-2306 C-E14-DIAGNOSTIC MANUAL
2306A-E14-2306 C-E14-USERS HANDBOOK
2306A-E14-2306 C-E14-WORKSHOP MANUAL
ELECTRONIC DIAGNOSTIC DEVICE-USERS
HANDBOOK

SERIES 3000

3008 GAS SERIES
3008 SERIES
3012 GAS SERIES

3012 SERIES

SERIES 4000

4006 TRS GAS-4008 TRS GAS-
SG6-SG8-INDUSTRIAL ENGINES

4006-8-DIESEL ENGINE

4006-23-4008-30-SD8-SD6-INDUSTRIAL
ENGINES

4006-4008-GAS ENGINES

4008-30-SD8-INDUSTRIAL ENGINE

4012-16-DIESEL ENGINE

4012-16-GAS ENGINE

4012-46A-S12-INDUSTRIAL ENGINE

4016-61TRG-S16-INDUSTRIAL ENGINE

4016-E61TRS-GAS ENGINES

4006 TRS GAS-4008 TRS

GAS-4012-46A-4016-61A-PANDAROS DIGITAL
GOVERNOR

SERIES V8.540-V.8.510

V8.510-V8.540-TV8.540-WORKSHOP MANUAL
V8.540-USERS HANDBOOK

SERIES V8.640

 
V8.640-TV8.640-WORKSHOP MANUAL
V8.640-USERS HANDBOOK

SERVICE TOOLING-Contents:

ENGINE TOOL LIST SPECIALIST TOOL CATALOGUE

SPECIAL INSTRUCTION-Contents:

SPECIAL INSTRUCTIONS HAVE BEEN MOVED UNDER SERVICE MANUALS

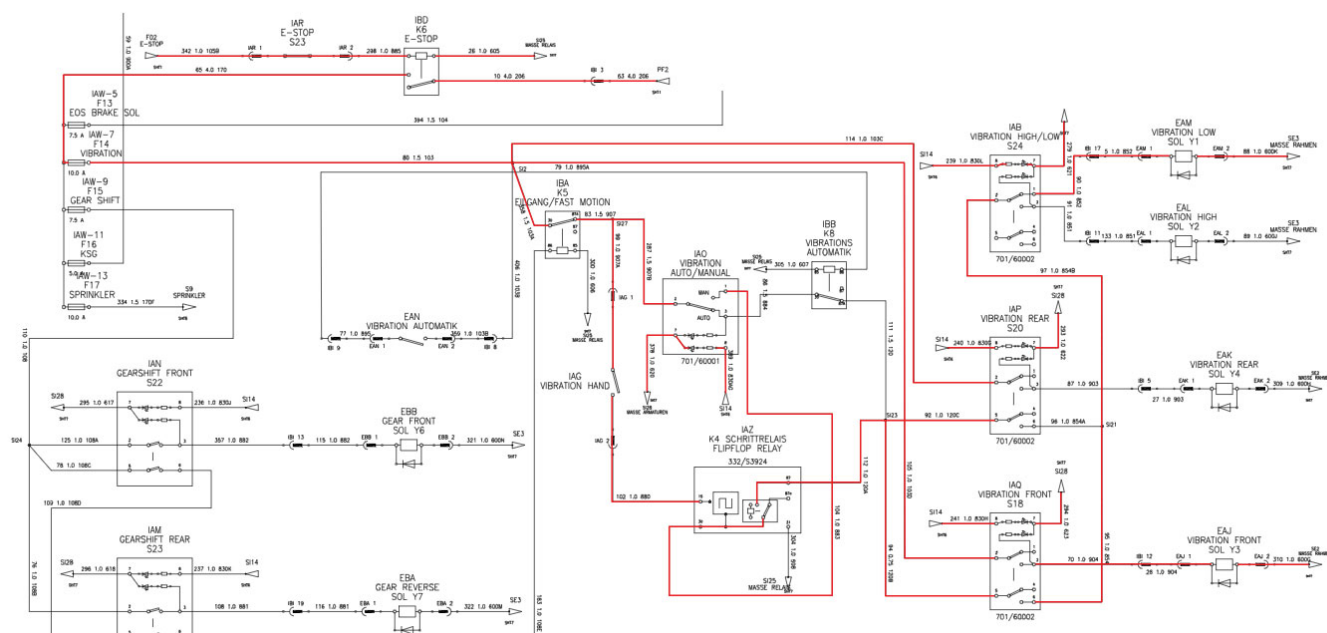

held in suspension will then be drained with the oil.

- 1 Get access to the engine. Refer to **Access Panels, Engine Cover**.
- 2 Place a container of suitable size beneath the sump drain plug **C**.

CAUTION

Oil will gush from the hole when the drain plug is removed. Hot oil and engine components can burn you. Keep to one side when you remove the plug.

13-3-1-15

- 3 Drain the engine oil.
 - a Machine with a sump plug, remove the sump drain plug **C** and its 'O' ring **D**. Let the oil drain out, then clean and refit the drain plug with a new 'O' ring. Torque the drain plug to 40-60Nm (30-44lbf ft).
 - b Machines with a drain valve, remove the dust cap **K** from the sump drain port. Attach drain tube **L**. With the free end of the tube in an oil container, screw in the drain tube assembly to open the valve.

When all the oil has drained, unscrew the drain tube assembly and fit the dust cap **K**.


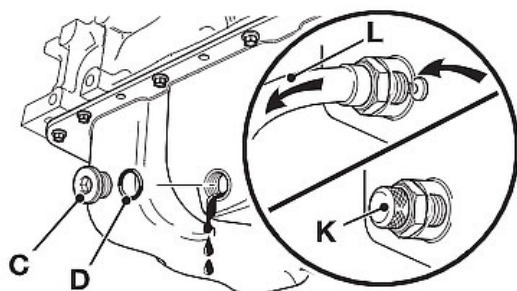 


Fig 28.

C012110-1

drain plug to 40-60Nm (30-44lbf ft).

 - 6 Unscrew the filter canister **F**, use a chain wrench if necessary.
- 7 Clean the seal face of the filter head **G**.
- 8 Smear the seal **H** on the new filter canister **F** with clean engine oil.
- 9 Screw the filter on until it just contacts the filter head.
- 10 Turn the filter at least a further 3/4 of a turn.
- 11 Through the top filler point, fill the engine with the recommended oil to the MAX mark on the dipstick. Refer to **Checking the Oil Level**. Wipe off any spilt oil, refit the filler cap and make sure it is secure.
- 12 Operate the engine until the oil pressure low warning light has extinguished. Check for oil leakage. When the oil has cooled, check the oil level again, and if necessary top up with clean engine oil.

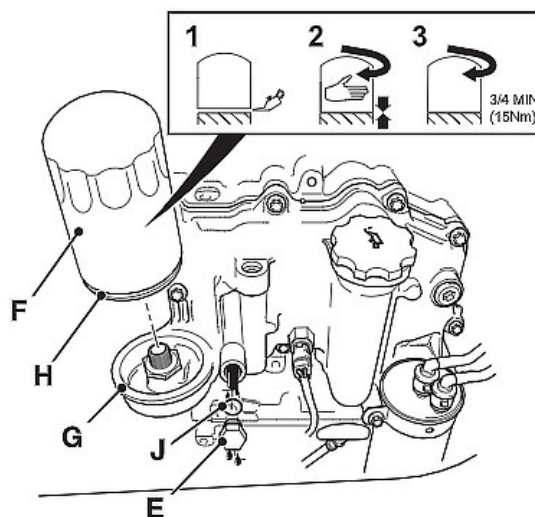

Fia 29.

 
C012110-5

Hydraulic Pump

Description

The pump is a variable displacement, axial piston pump with swashplate design. The flow is proportional to the

input drive speed and displacement. By adjusting the swashplate, it is possible to infinitely vary the flow.

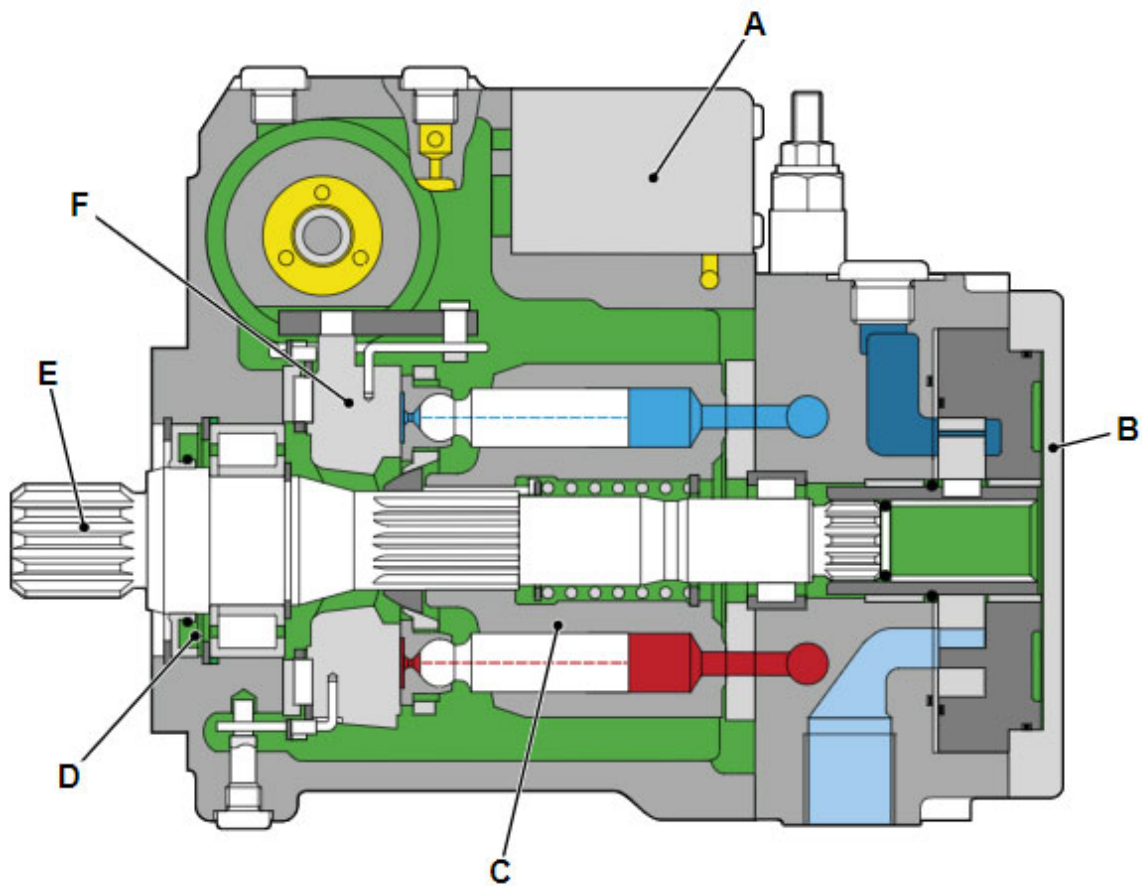

Replacement

Replacement is the opposite of the removal procedure.


2 Stage Booms (P2)

Removal

- 1 Position the boom so that the fork carriage A can be safely supported when it is disconnected from the boom assembly.
- 2 Park the machine and make it safe. Vent the hydraulic pressure. Obey the care and safety procedures.
⇒ [Related Topics](#) (□ B-5)
- 3 Support the fork carriage A.
- 4 Remove the securing bolt and remove the pivot pin B from the tipping link C.
- 5 Remove the securing bolt D and remove the pivot pin E.
- 6 Remove the fork carriage A.

Replacement

Replacement is the opposite of the removal procedure.

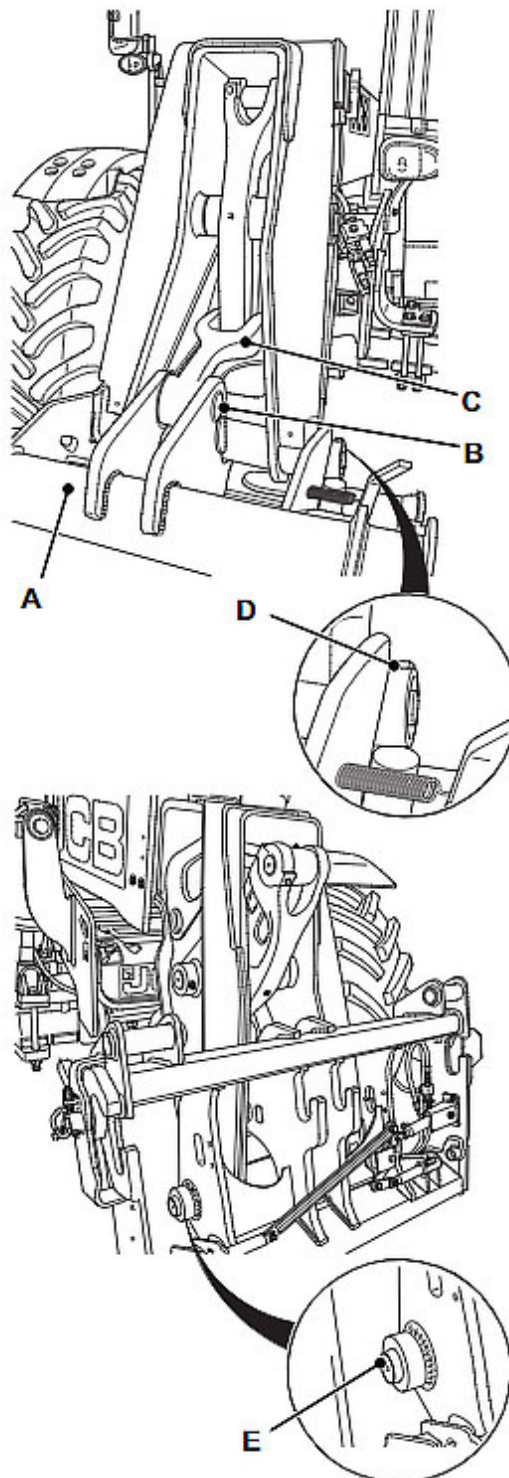 

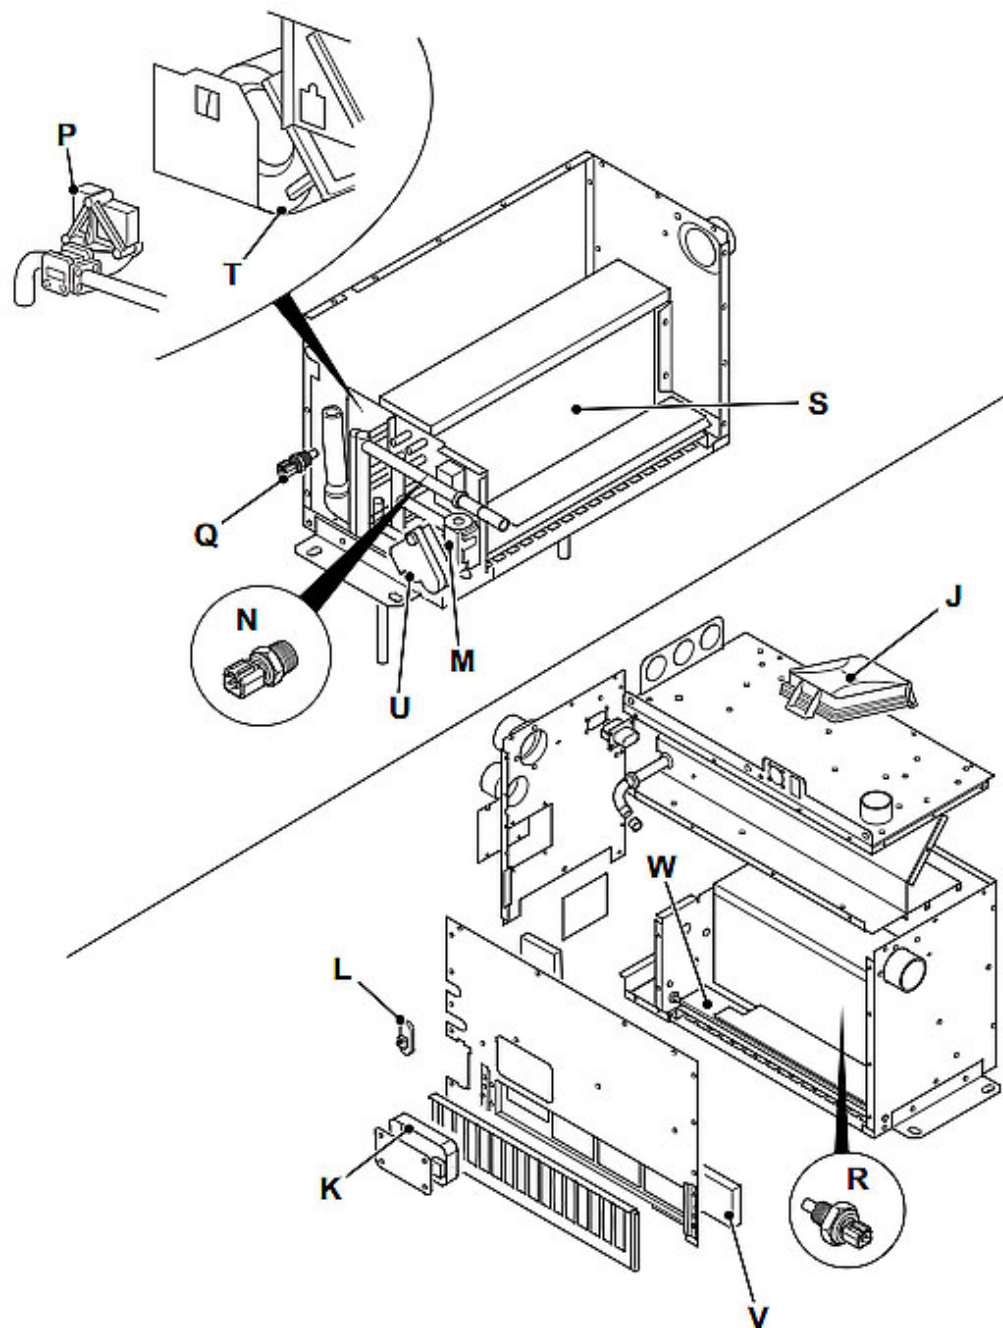 


Fig 2. ATC HVAC unit components

T014050-C1

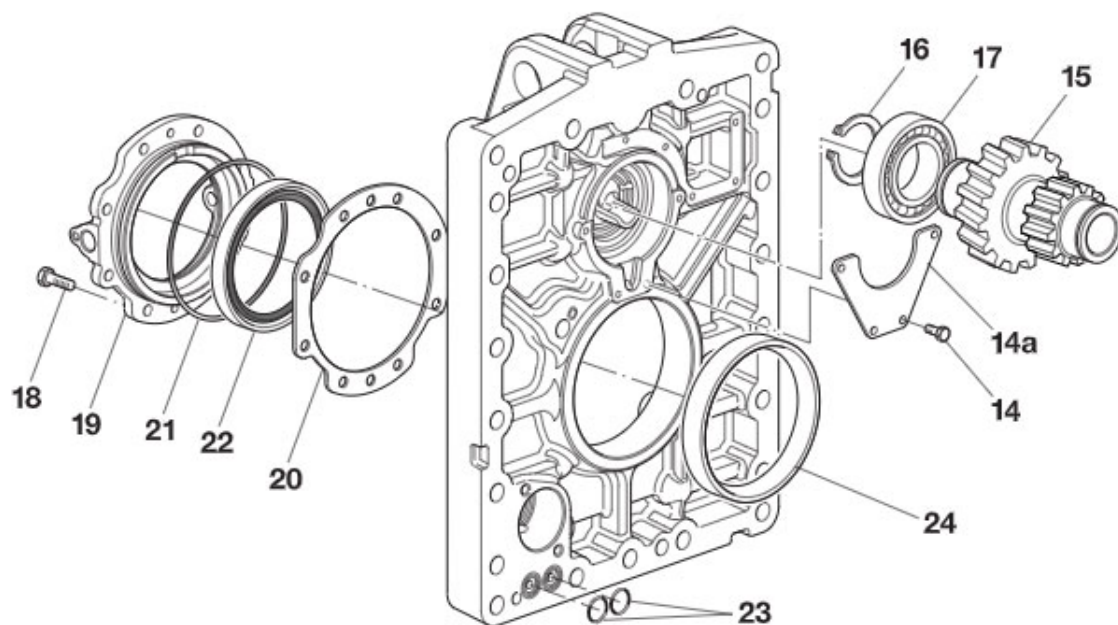 


Fig 151.

- 12 Remove screws **14** and guard **14a**.
- 13 Extract driving gear **15**.
- 14 Remove circlip **16** and remove bearing **17** from driving gear **15**.
- 15 Remove screws **18** and extract flange **19**, collecting the adjustment spacer(s) **20**.
- 16 Remove 'O' ring **21** and seal **22** from the flange.
- 17 Remove 'O' rings **23**.
- 18 Drive bearing race **24** out of the cover.



Section F - Transmission CVT Cartridge

Removal and Replacement

- 20 Unclip the circlip from the pinion shaft. Slide the circlip, washer and the coupling sleeve onto the pinion shaft in the direction of the arrow.

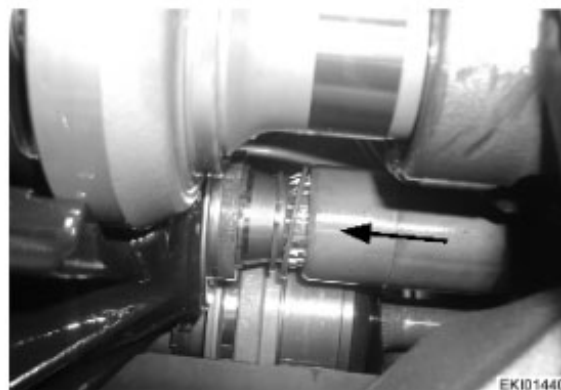 


Fig 38.

- 21 Pivot the hydraulic motors inwards using a tyre lever.
22 Unscrew the two M20 hex nuts on each side of the housing.



Fig 39.

- 23 Loosen the two M12 clamping screws at the top. Unscrew two drain plugs on the underside of the gearbox. Collect any draining oil. Loosen the two M12 clamping screws.






 
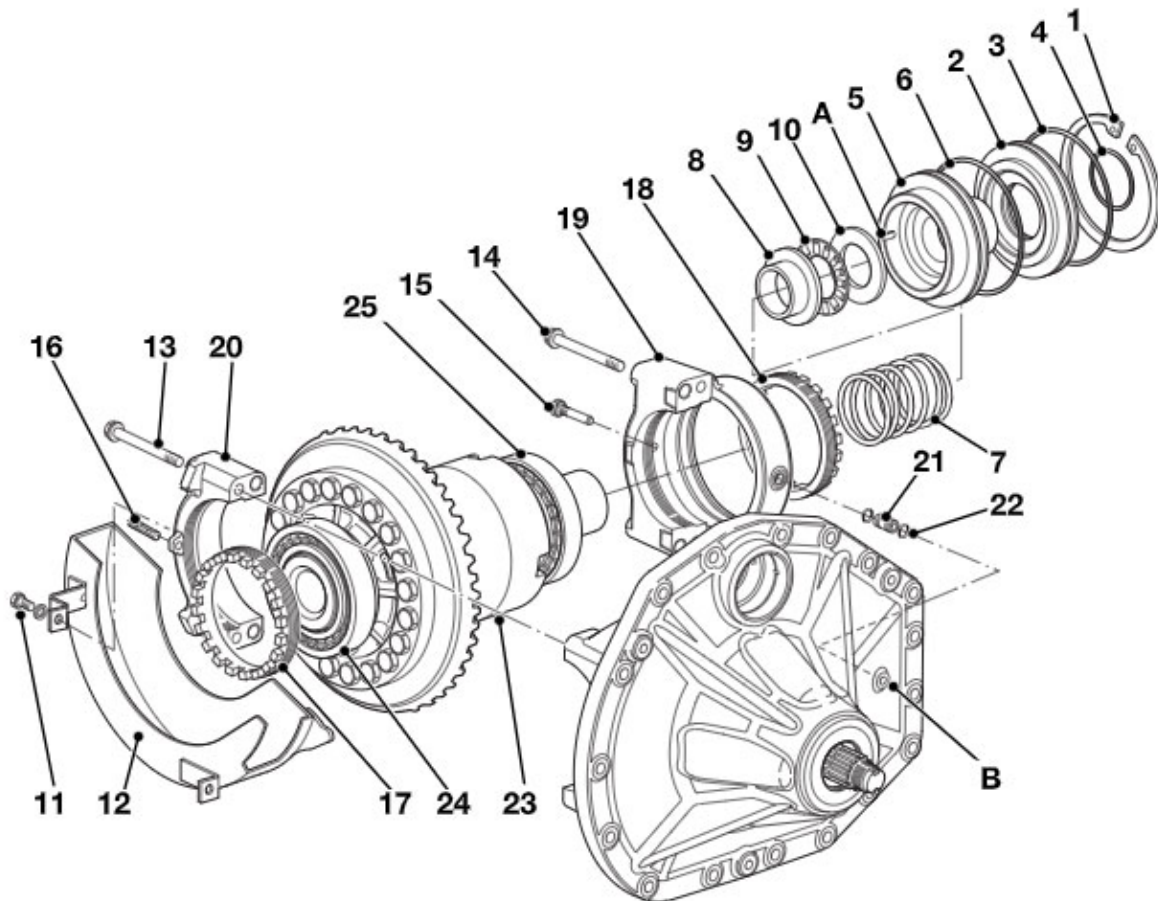 


Fig 140.

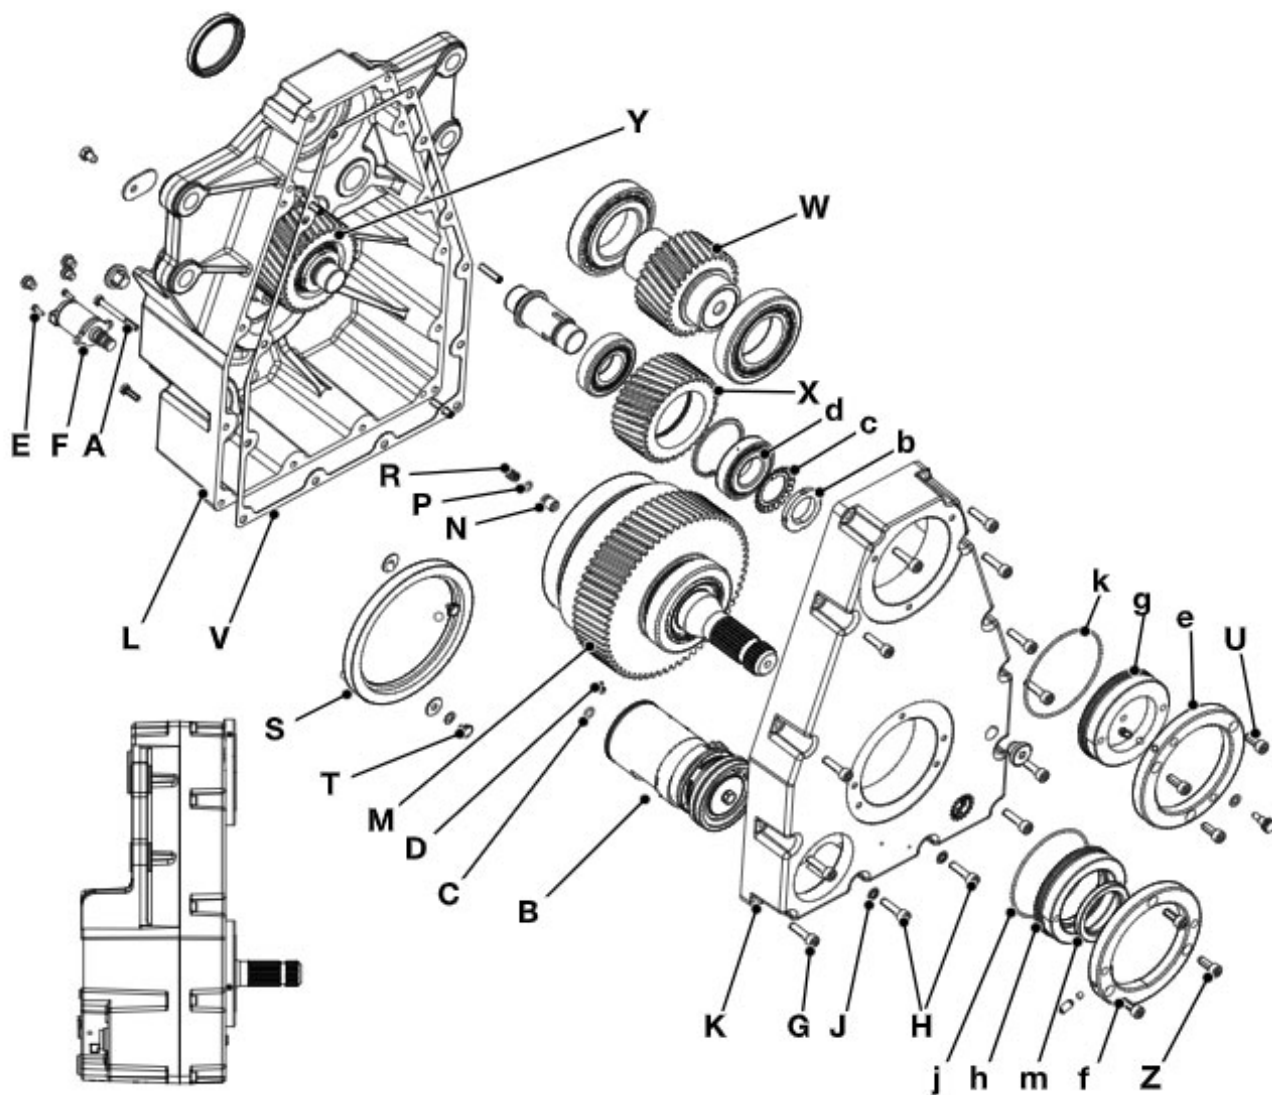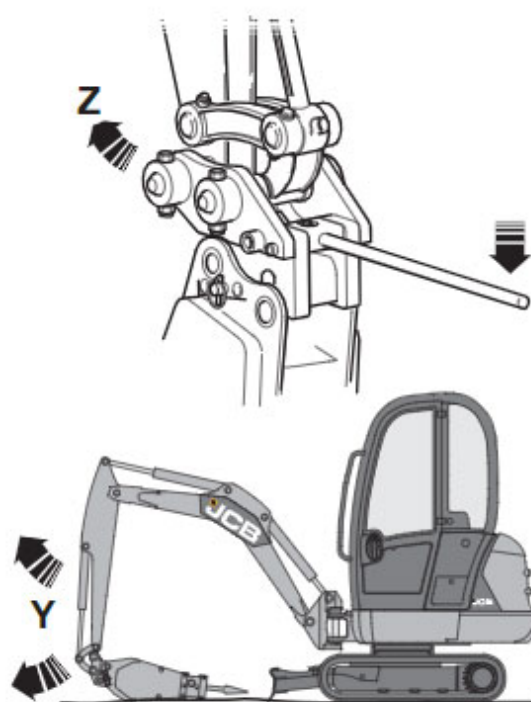 

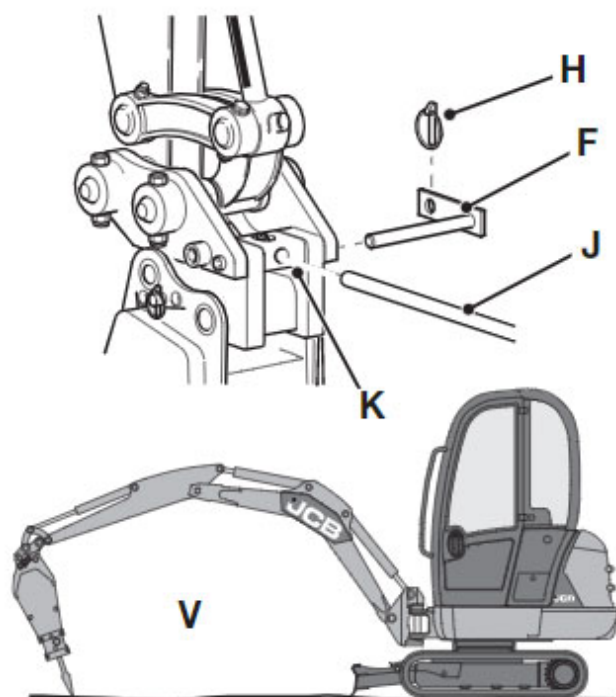 

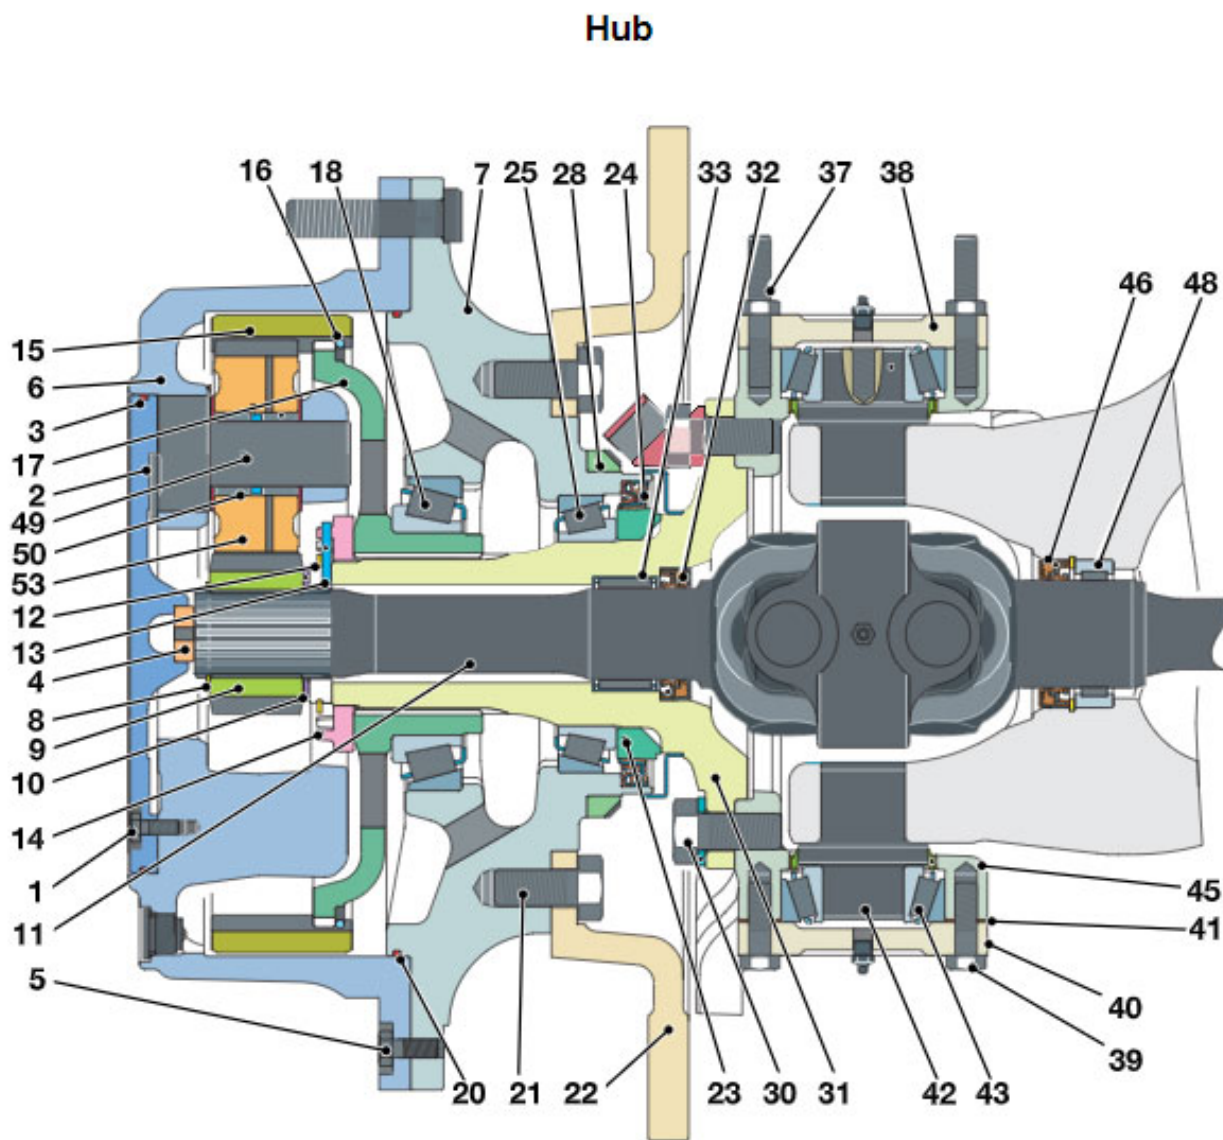 

Format elektroniczny PDF

Kontakt: tel. 696 915 311

Poszukujesz instrukcji napraw i nie możesz znaleźć jej na naszym sklepie? Napisz do nas maila podając w nim markę i model maszyny a także rok produkcji.

motodiagnostyka2010@gmail.com

facebook.com/servicemanualspdf