
Dane aktualne na dzień: 14-11-2026 01:17

Link do produktu: https://www.specdiag.pl/case-cx57c-serwisowa-ksiazka-napraw-instrukcje-serwisowe-schematy-instalacji-p-1948.html

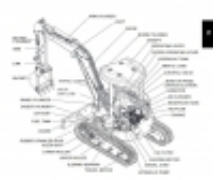

Case CX57C - serwisowa książka napraw - instrukcje serwisowe - schematy instalacji

Cena	**450,00 zł**


Opis produktu

Koparki gąsienicowe CX 57 C - CX57C CRAWLER EXCAVATOR - SERVICE MANUAL

Warsztatowe instrukcje napraw wraz ze schematami instalacji.


Instrukcje serwisowe dla CX57C CRAWLER EXCAVATOR SERVICE MANUAL

1) Disengage the water rubber hose from the EGR cooler.

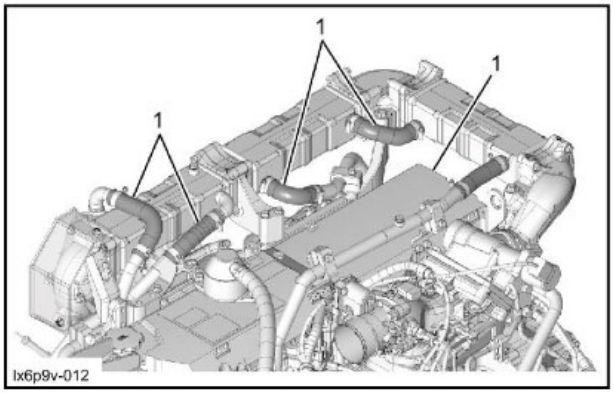


1	Water rubber hose

2) Remove the EGR pipe B from the EGR valve and the EGR cooler C.

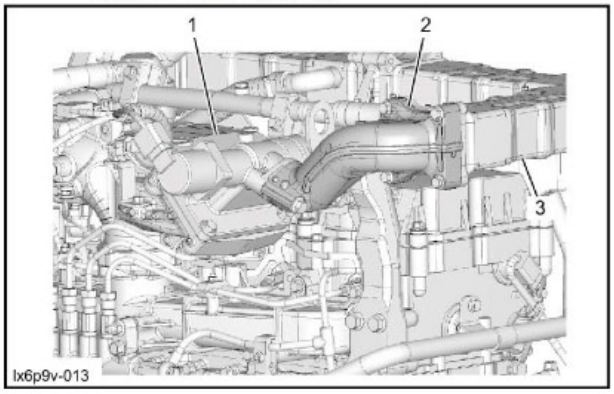


1	EGR valve
2	EGR pipe B
3	EGR cooler C

5) Remove the EGR cooler B from the EGR cooler bracket A.
6) Remove the EGR cooler bracket A from the EGR cooler A.

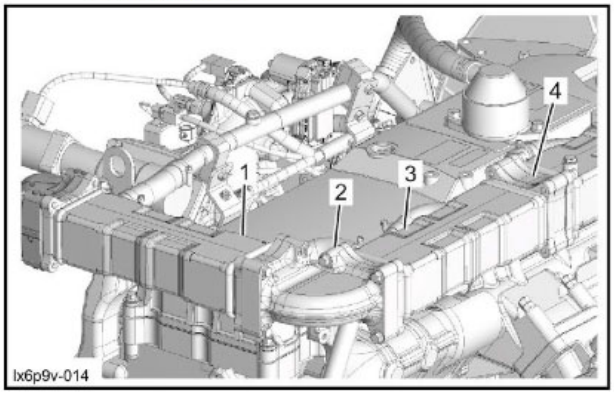


1	EGR cooler C
2	EGR bracket C
3	EGR cooler B
4	EGR cooler bracket A

7) Remove the EGR heat protector from the EGR pipe A.

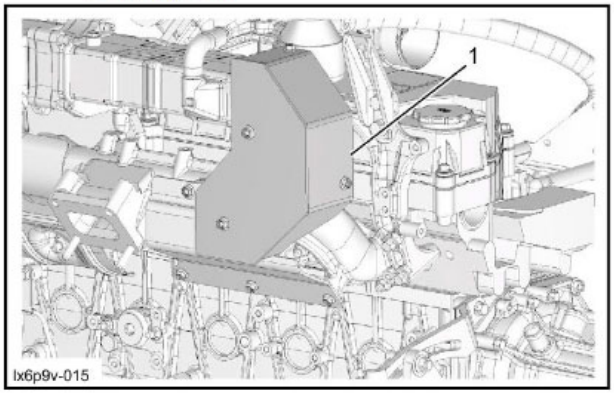


PRIMARY HYDRAULIC POWER SYSTEM - Exploded view

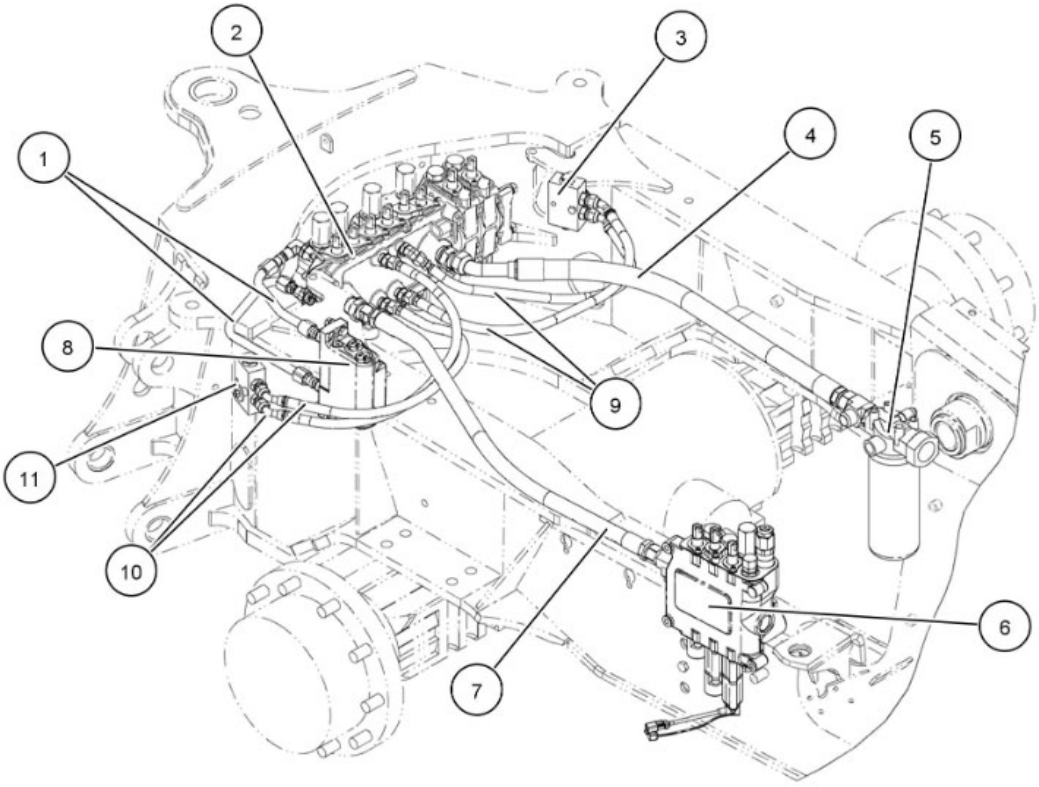


RCPH10TLB005GAM 1

1. Hoses swing control
2. Backhoe valve
3. Left stabilizer load check valve
4. Return to filter
5. Hydraulic filter
6. Loader valve
7. Pressure to backhoe valve
8. Swing cushion valve
9. Left stabilizer hoses
10. Right stabilizer hoses
11. Right stabilizer load check valve

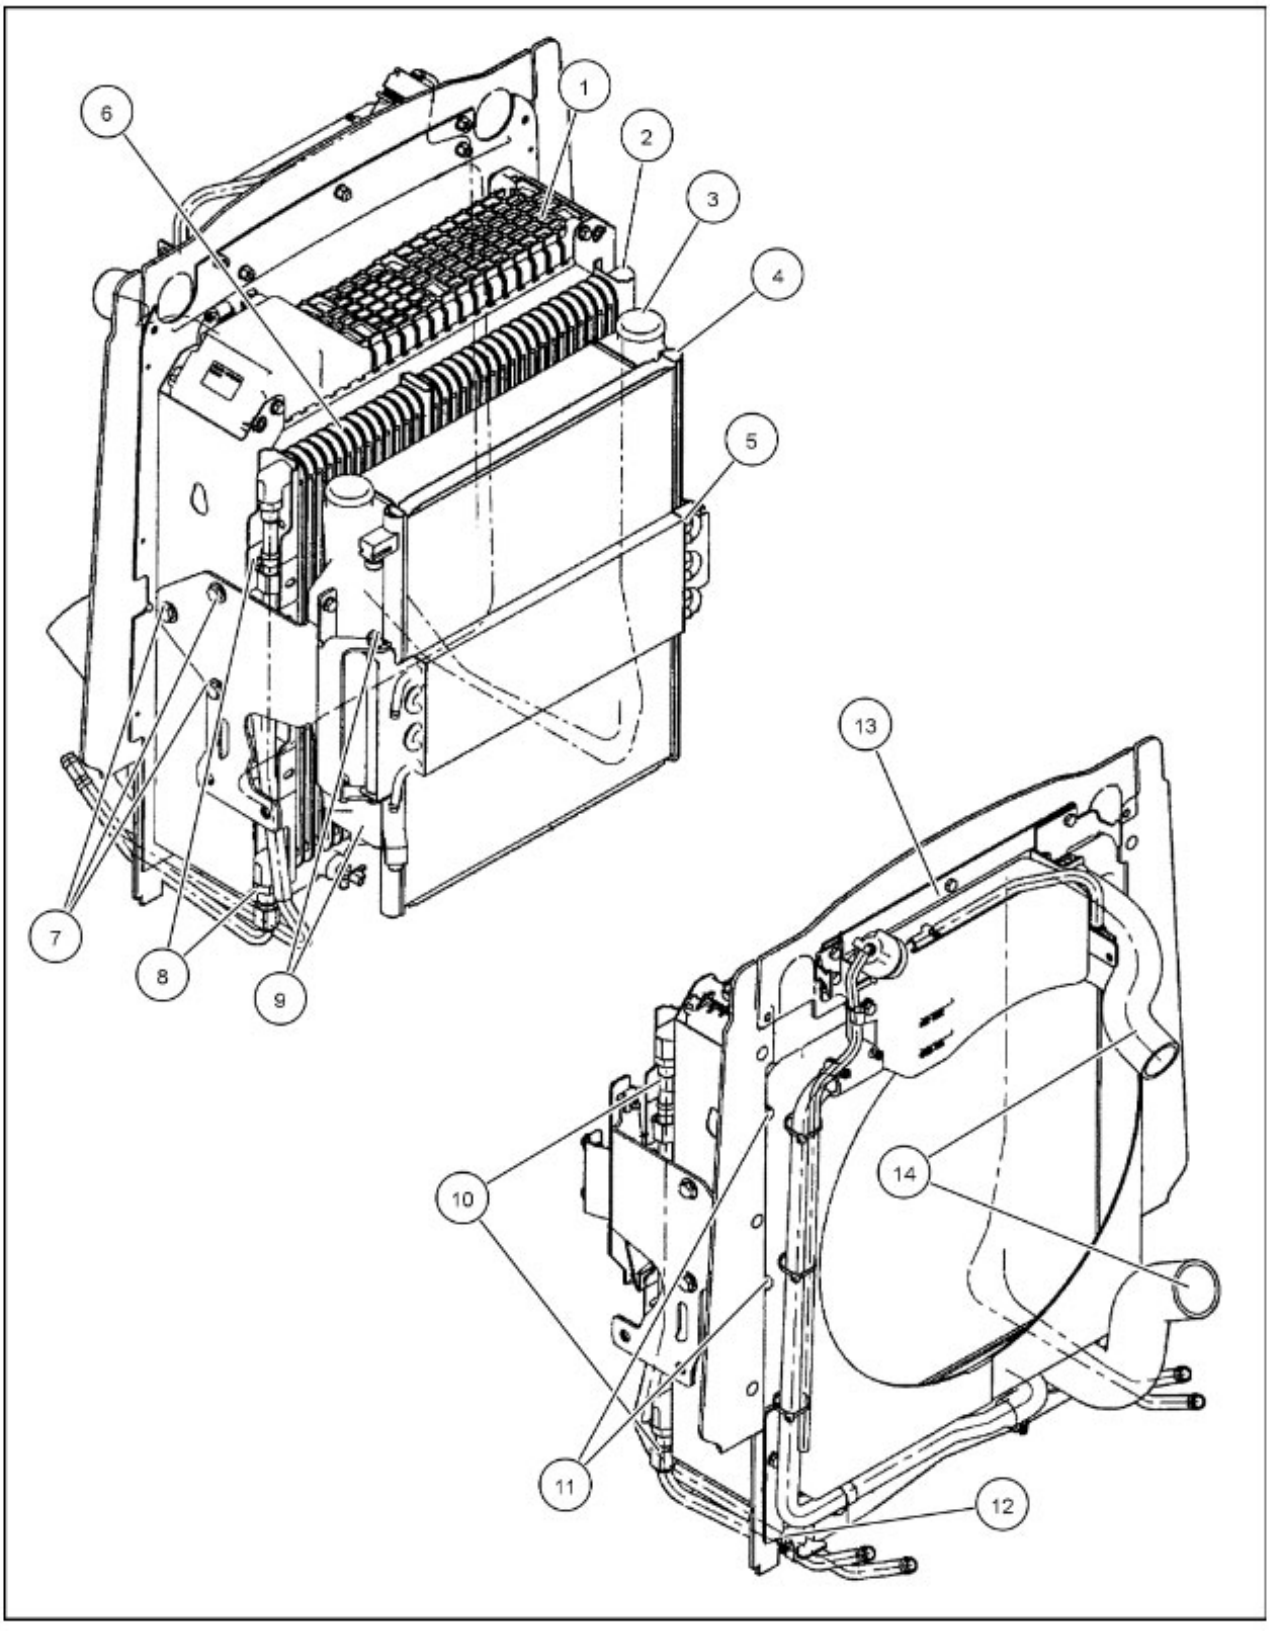

1
2
3
4
5
6
7
8
9
10
11
12
13
14

7. Remove the charge air cooler hoses and pipes.

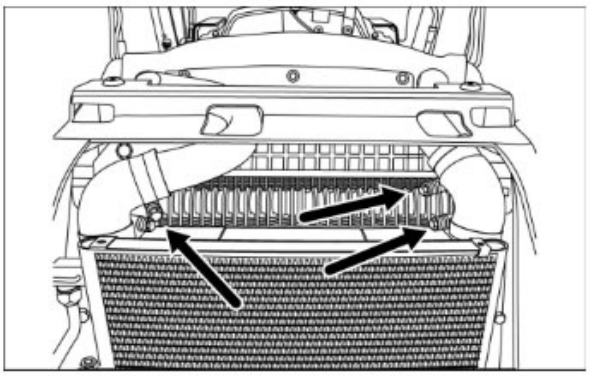


RCPH11TLB015AAM 8


8. Cap (seal) all open ports to keep contaminates from entering the system.

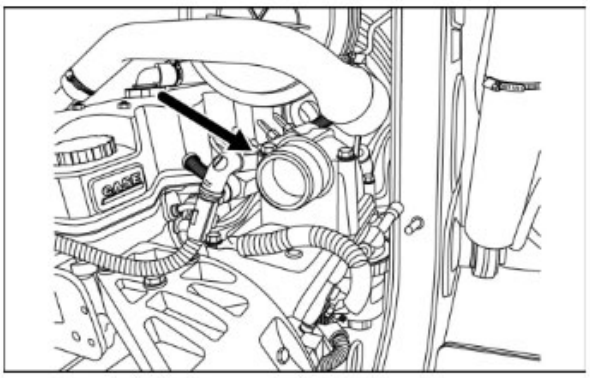


RCPH11TLB016AAM 9


9. Remove the lower radiator hose.

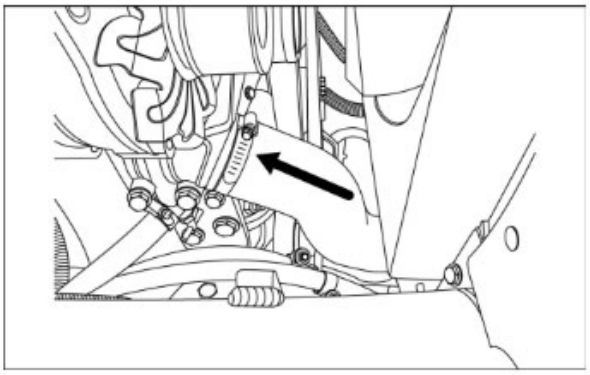

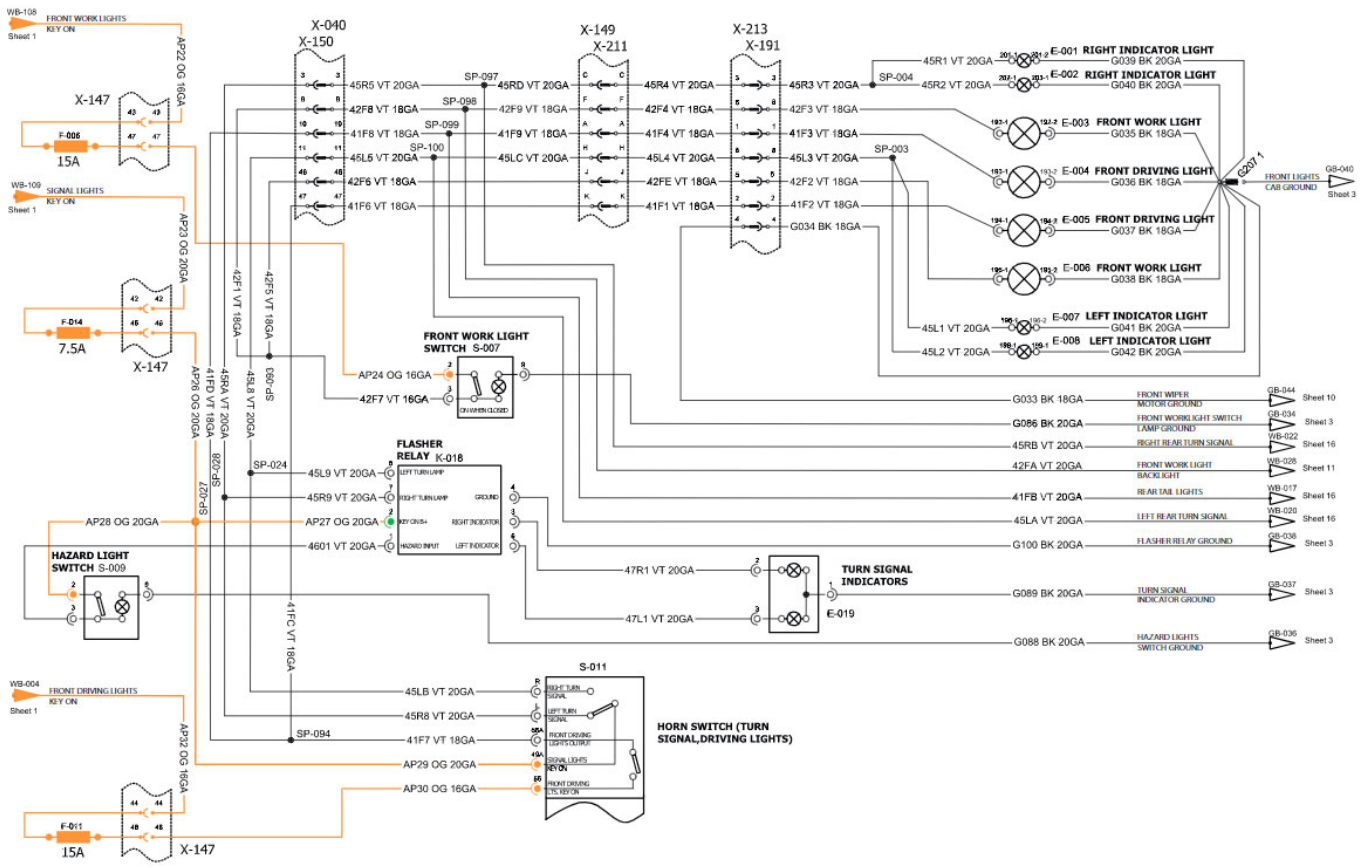
WB-108
FRONT WORK LIGHTS KEY ON
Sheet 1
AP22 OG 16GA
X-147
F-006
15A
WB-109
SIGNAL LIGHTS KEY ON
Sheet 1
AP23 OG 20GA
F-014
7.5A
X-147
AP28 OG 20GA
HAZARD LIGHT SWITCH S-009
WB-004
FRONT DRIVING LIGHTS KEY ON
Sheet 1
AP32 OG 16GA
F-011
15A
X-147
X-040
X-150
X-149
X-211
X-213
X-191
SP-097
SP-098
SP-099
SP-100
45R5 VT 20GA
42F8 VT 18GA
41F8 VT 18GA
45L5 VT 20GA
42F6 VT 18GA
41F6 VT 18GA
45RD VT 20GA
42F9 VT 18GA
41F9 VT 18GA
45LC VT 20GA
45R4 VT 20GA
42F4 VT 18GA
41F4 VT 18GA
45L4 VT 20GA
42FE VT 18GA
41F1 VT 18GA
45R3 VT 20GA
42F3 VT 18GA
41F3 VT 18GA
45L3 VT 20GA
42F2 VT 18GA
41F2 VT 18GA
G034 BK 18GA
SP-004
SP-003
45R1 VT 20GA
45R2 VT 20GA
45L1 VT 20GA
45L2 VT 20GA
E-001 RIGHT INDICATOR LIGHT
G039 BK 20GA
E-002 RIGHT INDICATOR LIGHT
G040 BK 20GA
E-003 FRONT WORK LIGHT
G035 BK 18GA
E-004 FRONT DRIVING LIGHT
G036 BK 18GA
E-005 FRONT DRIVING LIGHT
G037 BK 18GA
E-006 FRONT WORK LIGHT
G038 BK 18GA
E-007 LEFT INDICATOR LIGHT
G041 BK 20GA
E-008 LEFT INDICATOR LIGHT
G042 BK 20GA
G007 1
FRONT LIGHTS CAB GROUND
GB-040
Sheet 3
FRONT WORK LIGHT SWITCH S-007
AP24 OG 16GA
42F7 VT 18GA
ON WHEN CLOSED
42F1 VT 18GA
42F5 VT 18GA
SP-093
45L8 VT 20GA
45RA VT 20GA
41FD VT 18GA
SP-026
SP-027
SP-024
FLASHER RELAY K-018
45L9 VT 20GA
45R9 VT 20GA
AP27 OG 20GA
4601 VT 20GA
LEFT TURN LAMP
RIGHT TURN LAMP
KEY ON/S+
HAZARD INPUT
GROUND
RIGHT INDICATOR
LEFT INDICATOR
47R1 VT 20GA
47L1 VT 20GA
TURN SIGNAL INDICATORS
E-019
41FC VT 18GA
SP-094
S-011
45LB VT 20GA
45R8 VT 20GA
41F7 VT 18GA
AP29 OG 20GA
AP30 OG 16GA
RIGHT TURN SIGNAL
LEFT TURN SIGNAL
FRONT DRIVING LIGHTS OUTPUT
SIGNAL LIGHTS KEY ON
FRONT DRIVING LTS KEY ON
HORN SWITCH (TURN SIGNAL,DRIVING LIGHTS)
G033 BK 18GA
FRONT WIPER MOTOR GROUND
GB-044
Sheet 10
G086 BK 20GA
FRONT WORK LIGHT SWITCH LAMP GROUND
GB-034
Sheet 3
45RB VT 20GA
RIGHT REAR TURN SIGNAL
WB-022
Sheet 16
42FA VT 20GA
FRONT WORK LIGHT BACK LIGHT
WB-028
Sheet 11
41FB VT 20GA
REAR TAIL LIGHTS
WB-017
Sheet 16
45LA VT 20GA
LEFT REAR TURN SIGNAL
WB-020
Sheet 16
G100 BK 20GA
FLASHER RELAY GROUND
GB-038
Sheet 3
G089 BK 20GA
TURN SIGNAL INDICATOR GROUND
GB-037
Sheet 3
G088 BK 20GA
HAZARD LIGHTS SWITCH GROUND
GB-036
Sheet 3

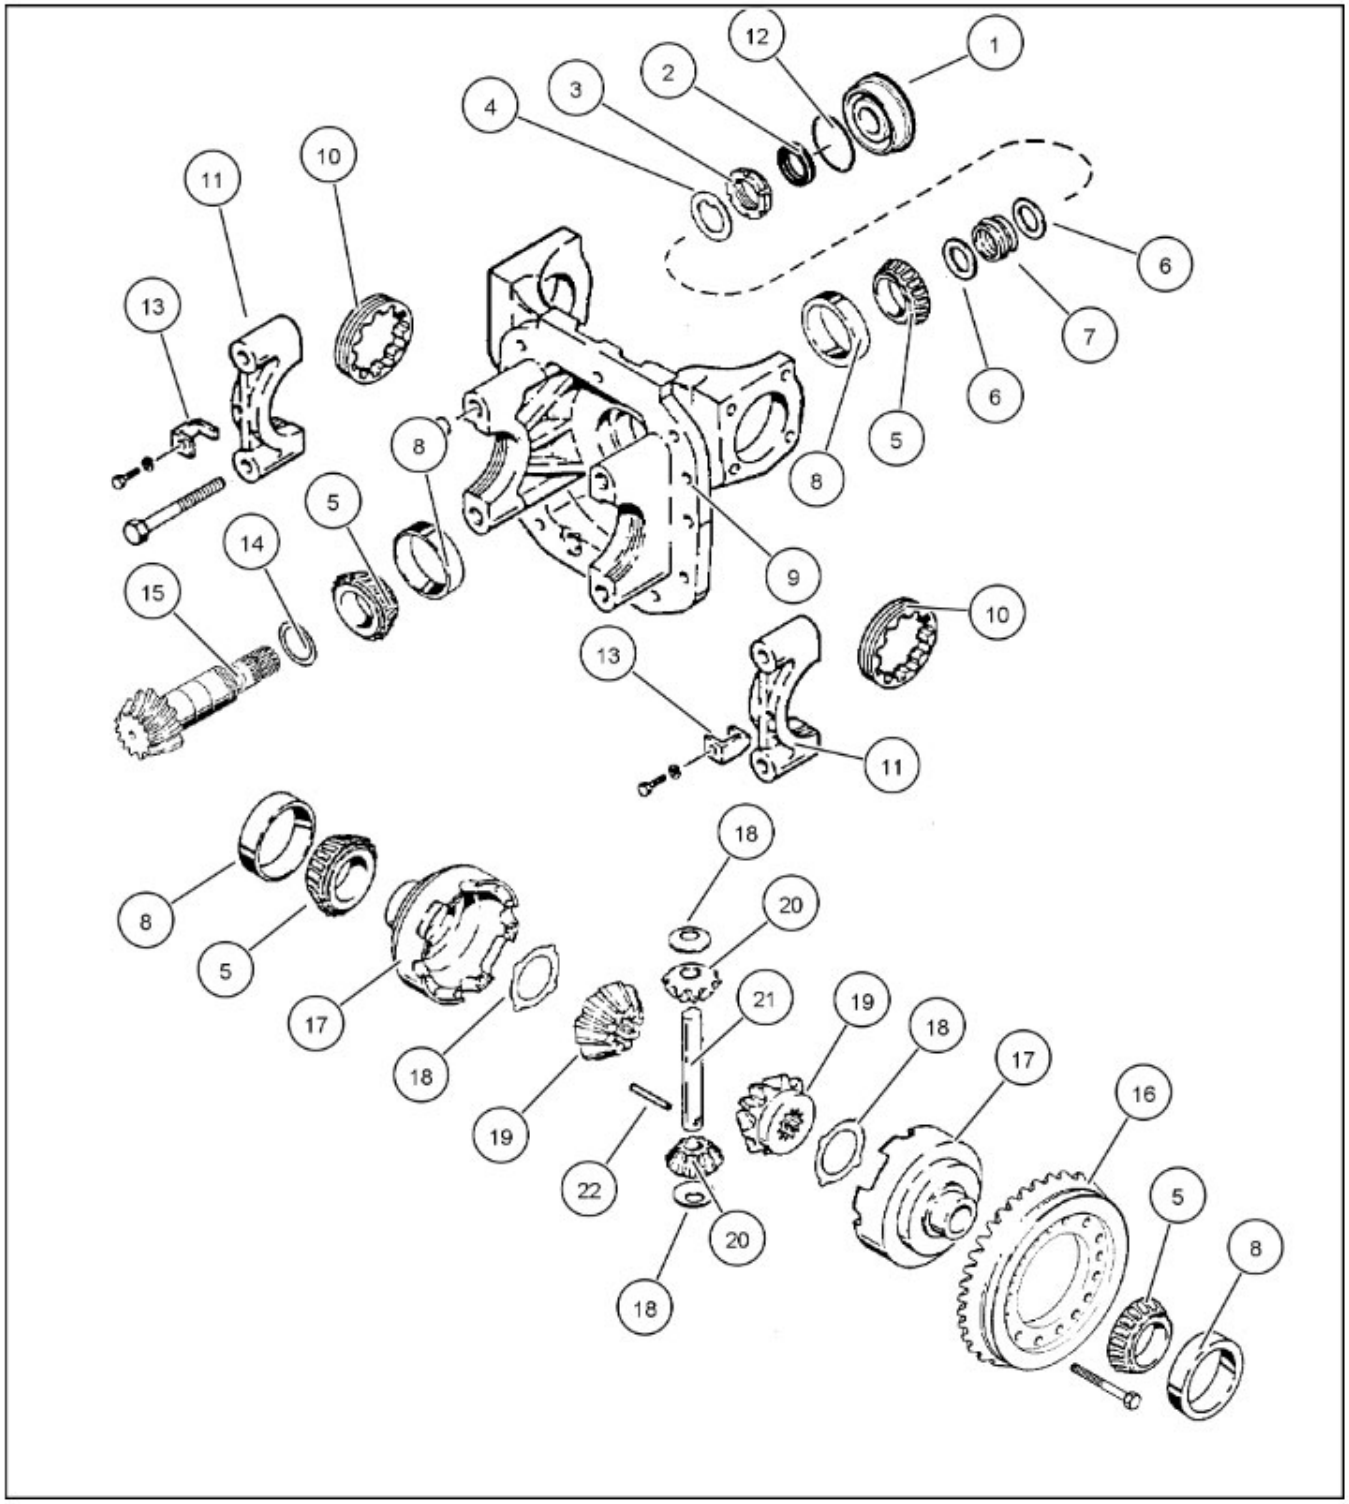

12
1
2
3
4
10
11
6
7
13
6
8
5
8
5
9
14
15
10
13
11
8
5
18
20
17
21
19
18
18
19
22
20
18
17
16
5
8

5. Make sure the bevelled washers are in place, install the upper and lower king pins. Torque the bolts to **120 N·m (88.5 lb ft)**

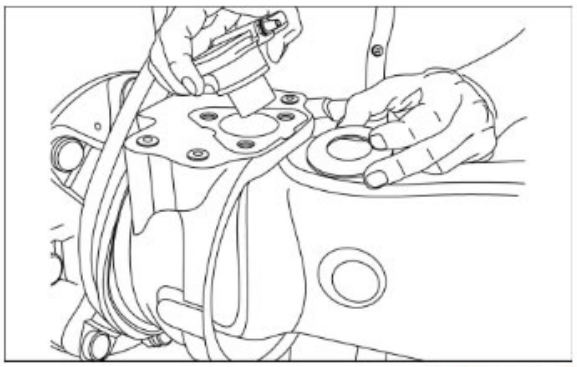


RCPH10TLB002ACL 5

6. Grease the bearing cone and install it onto the swivel housing.

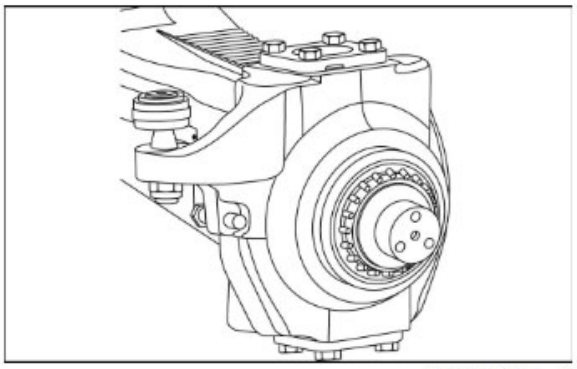


RCPH10TLB607ABL 6

7. Use suitable drivers and install new bearing cups and seal into wheel hub.

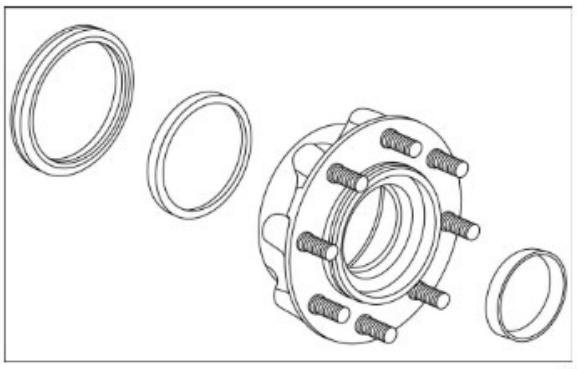

REMOVING THE TORQUE CONVERTER HOUSING AND TORQUE CONVERTER

STEP 1

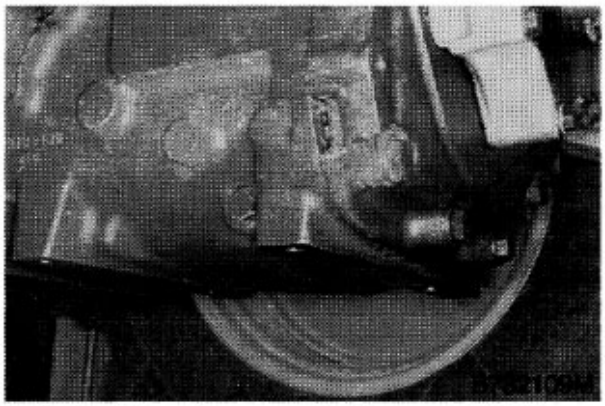


Drain the oil from the transaxle. The transaxle holds approximately 40 U.S. quarts (38 litres). If equipped with a PTO, drain the oil from the torque converter housing.

STEP 2


If the machine has four wheel drive, do steps 3 through 7.

STEP 3

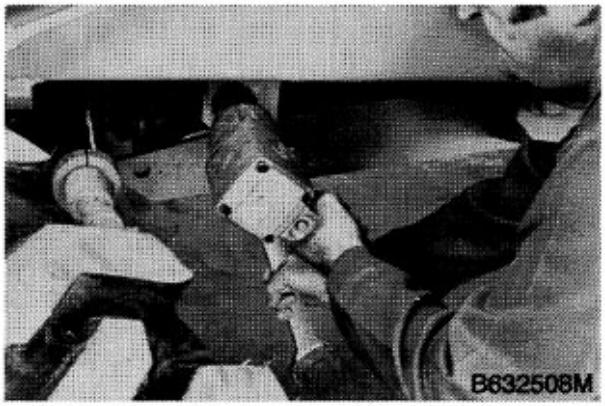


Loosen and remove the self-locking nuts from the bolts that hold the guard. Do not remmove the bolts now.

STEP 4

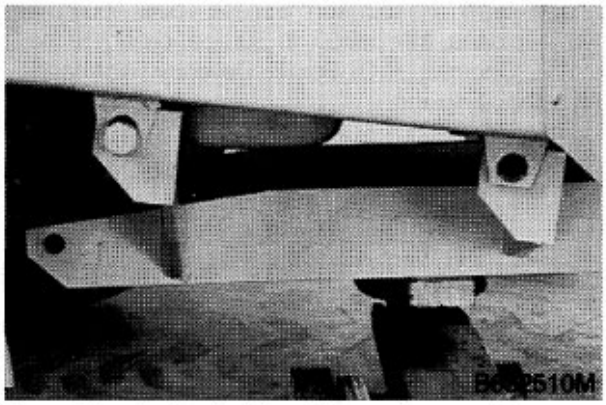

Use a floor jack to hold and lower the guard.


STEP 5

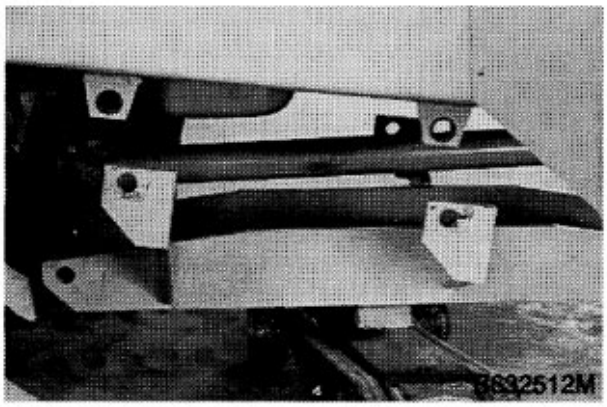


Remove the bolts and carefully lower the guard.

STEP 6


Carefully tilt the guard and remove the guard from under the machine.

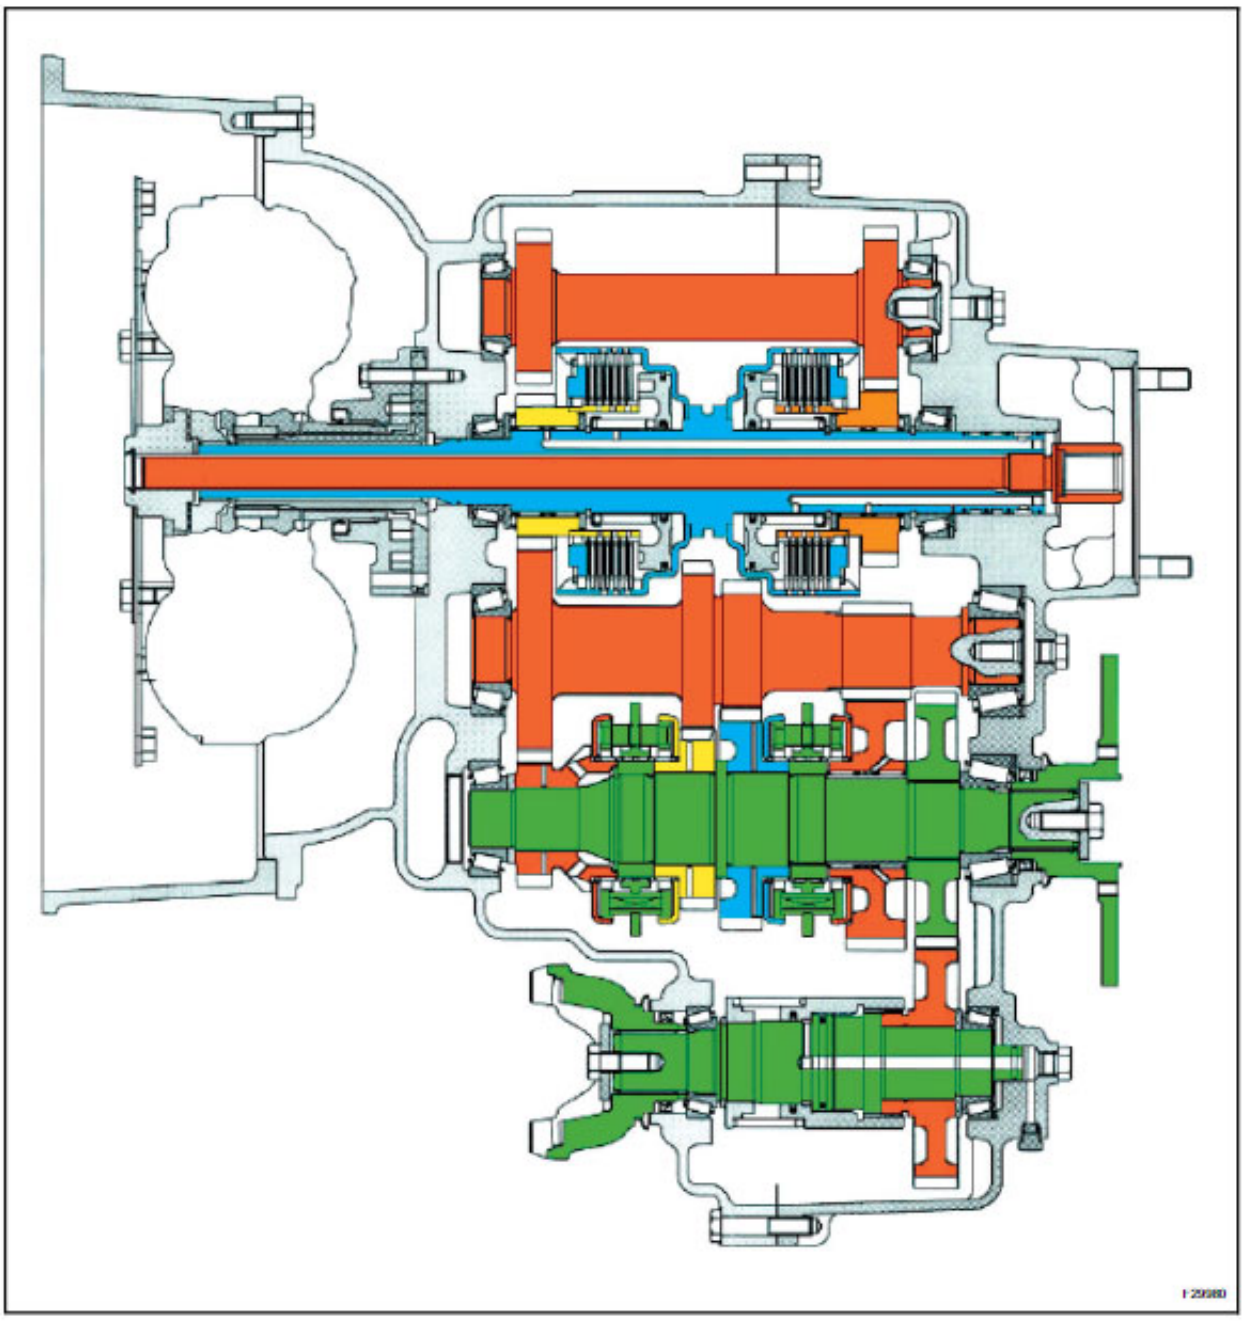


Input
Intermediate
Output

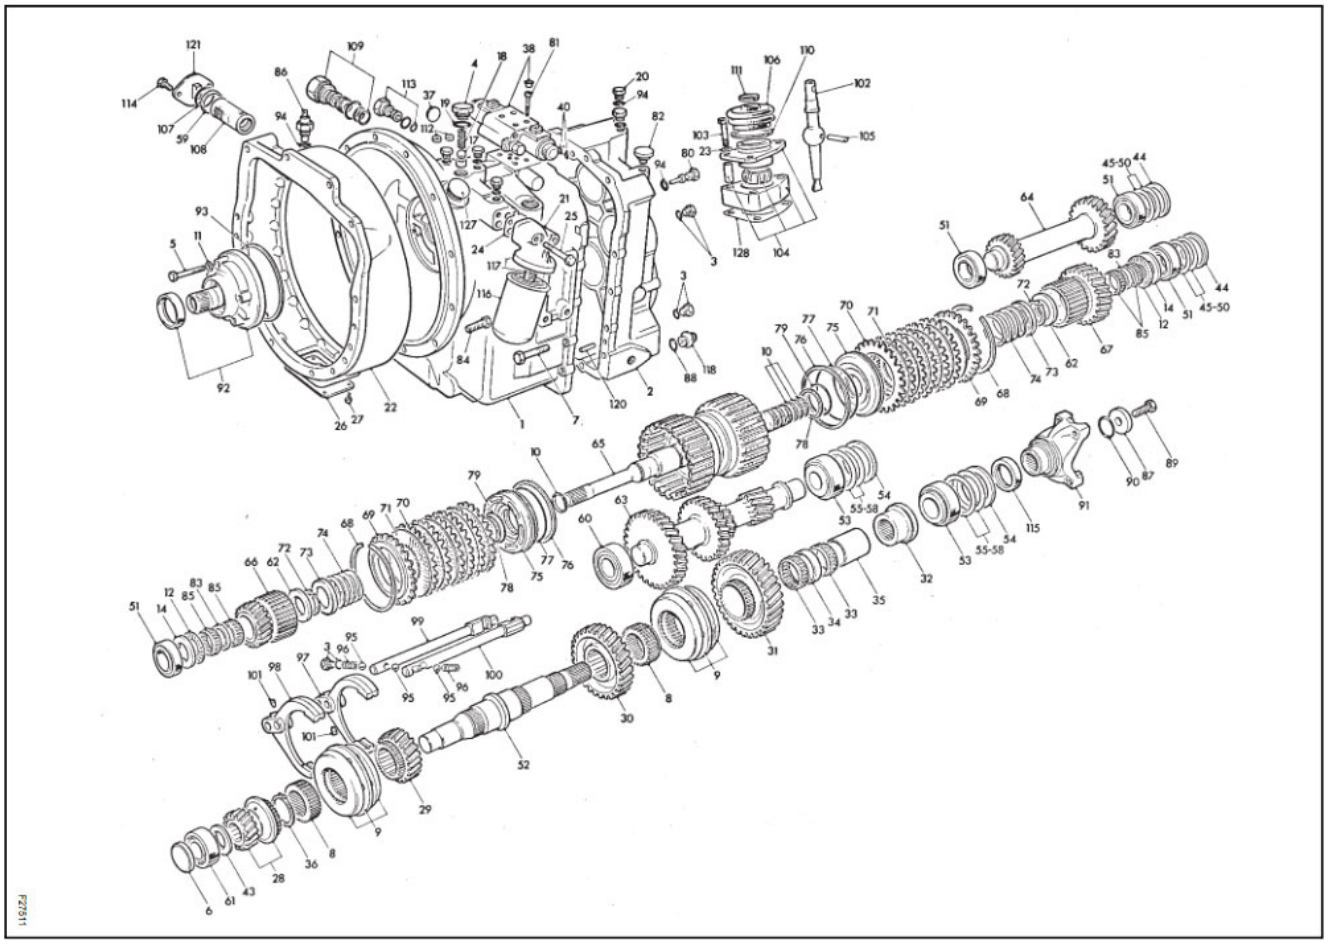

Remove the reverse idler shaft assembly.

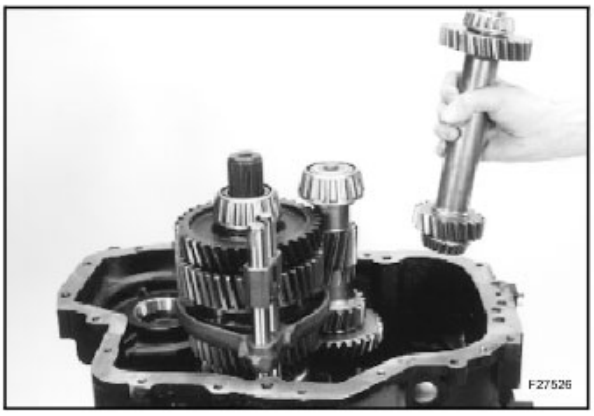

Remove the by-pass plug, the spring and the ball.

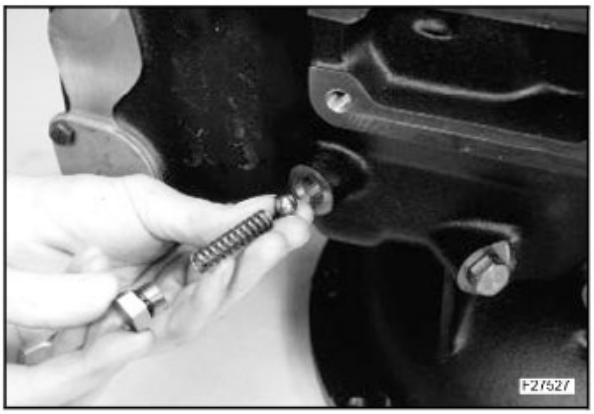


Ensure both synchronizers are in the neutral position then remove the 1st/2nd shift fork screw.



Park the machine on a hard, level surface and apply the parking brake.

STEP 2

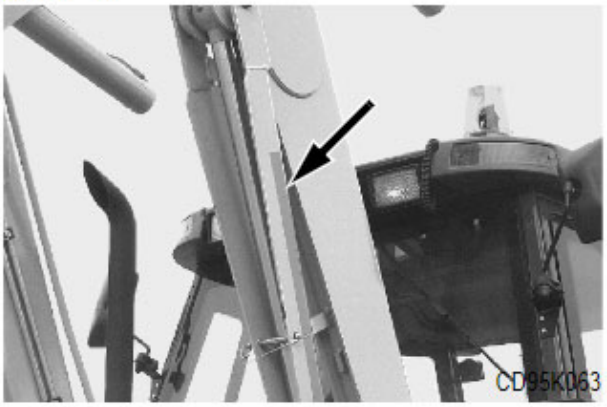


Raise the loader frame, stop the engine and install the support strut.

STEP 3



Release the engine hood and tilt it forwards.

STEP 4

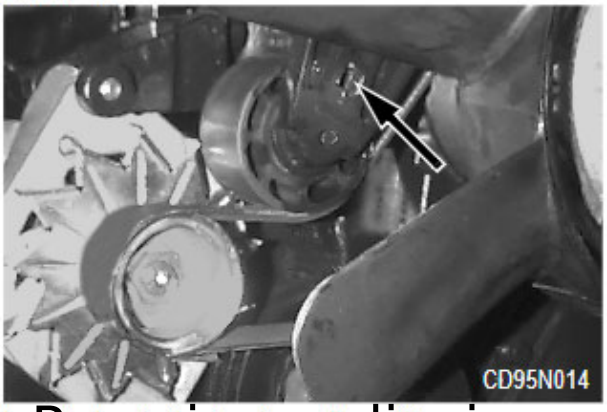


Insert a key in the crankshaft pulley orifice.

Exert just enough pressure on the key to release the tension on the drive belt.

STEP 6

Remove the belt from the water pump pulley and then from the other pulleys.

STEP 7

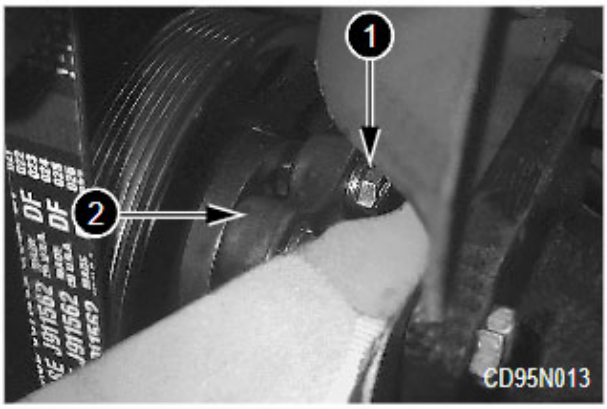


Remove the four screws and washers (1) and push the coupling (2) towards the pump. Remove the belt.

STEP 8

Install a new belt on the water pump pulley and the crankshaft pulley.

STEP 9

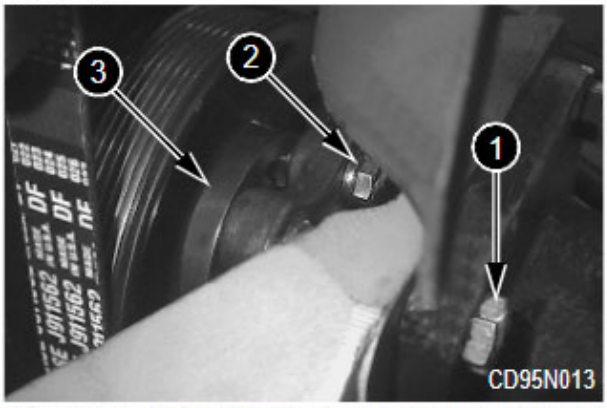

Align the coupling (2) with the crankshaft pulley (3) and install the four screws and washers (1). Tighten the four screws to a torque between 95 and 114 Nm.

Powyższe zdjęcia są przykładowe (zdjęcia z losowych instrukcji napraw do różnych maszyn budowlanych Case, po zakupie klient otrzymuje dokumentacje do wybranego modelu)

Szukasz instrukcji napraw do maszyny której nie ma na naszym sklepie?

Zadzwoń lub napisz do nas tel. 696 915 311 lub instrukcjedoserwisu@gmail.com.

Podaj markę i model maszyny do jakiej instrukcji poszukujesz.