Dane aktualne na dzień: 15-11-2026 03:12

Link do produktu: https://www.specdiag.pl/jcb-3cx-instrukcje-napraw-schematy-polska-wersja-jezykowa-p-842.html




JCB 3CX instrukcje napraw + schematy Polska wersja językowa

Cena	**450,00 zł**

Opis produktu

JCB 3CX - instrukcje napraw + schematy instalacji 1988-2019r.

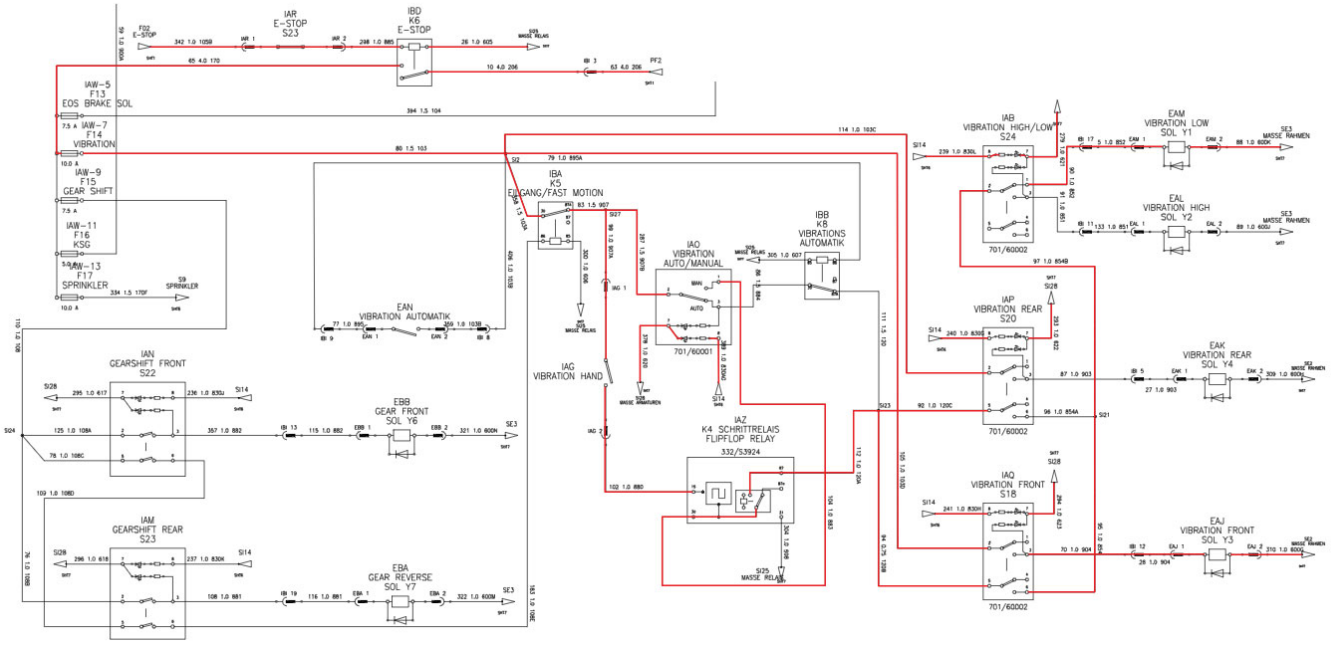


IAR
E-STOP
S23
IBD
K6
E-STOP
IAW-5
F13
EOS BRAKE SOL
IAW-7
F14
VIBRATION
IAW-9
F15
GEAR SHIFT
IAW-11
F16
KSG
IAW-13
F17
SPRINKLER
S9
SPRINKLER
EAN
VIBRATION AUTOMATIK
IBA
K5
EILGANG/FAST MOTION
IAO
VIBRATION
AUTO/MANUAL
701/60001
IBB
K8
VIBRATIONS
AUTOMATIK
IAG
VIBRATION HAND
IAZ
K4 SCHRITTRELAIS
FLIPFLOP RELAY
332/53924
IAN
GEARSHIFT FRONT
S22
EBB
GEAR FRONT
SOL Y6
IAM
GEARSHIFT REAR
S23
EBA
GEAR REVERSE
SOL Y7
IAB
VIBRATION HIGH/LOW
S24
701/60002
EAM
VIBRATION LOW
SOL Y1
EAL
VIBRATION HIGH
SOL Y2
IAP
VIBRATION REAR
S20
701/60002
EAK
VIBRATION REAR
SOL Y4
IAQ
VIBRATION FRONT
S18
701/60002
EAJ
VIBRATION FRONT
SOL Y3

held in suspension will then be drained with the oil.

1 Get access to the engine. Refer to ***Access Panels, Engine Cover***.

2 Place a container of suitable size beneath the sump drain plug **C**.

⚠ CAUTION

Oil will gush from the hole when the drain plug is removed. Hot oil and engine components can burn you. Keep to one side when you remove the plug.


13-3-1-15

3 Drain the engine oil.

a Machine with a sump plug, remove the sump drain plug **C** and its 'O' ring **D**. Let the oil drain out, then clean and refit the drain plug with a new 'O' ring. Torque the drain plug to 40-60Nm (30-44lbf ft).

b Machines with a drain valve, remove the dust cap **K** from the sump drain port. Attach drain tube **L**. With the free end of the tube in an oil container, screw in the drain tube assembly to open the valve.

When all the oil has drained, unscrew the drain tube assembly and fit the dust cap **K**.

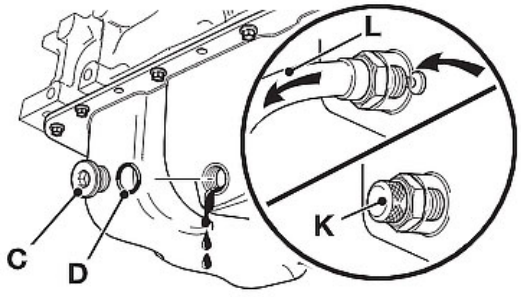

C012110-1

Fig 28.

drain plug to 40-60Nm (30-44lbf ft).

6 Unscrew the filter canister **F**, use a chain wrench if necessary.

7 Clean the seal face of the filter head **G**.


8 Smear the seal **H** on the new filter canister **F** with clean engine oil.

9 Screw the filter on until it just contacts the filter head.

10 Turn the filter at least a further 3/4 of a turn.

11 Through the top filler point, fill the engine with the recommended oil to the MAX mark on the dipstick. Refer to ***Checking the Oil Level***. Wipe off any spilt oil, refit the filler cap and make sure it is secure.

12 Operate the engine until the oil pressure low warning light has extinguished. Check for oil leakage. When the oil has cooled, check the oil level again, and if necessary top up with clean engine oil.

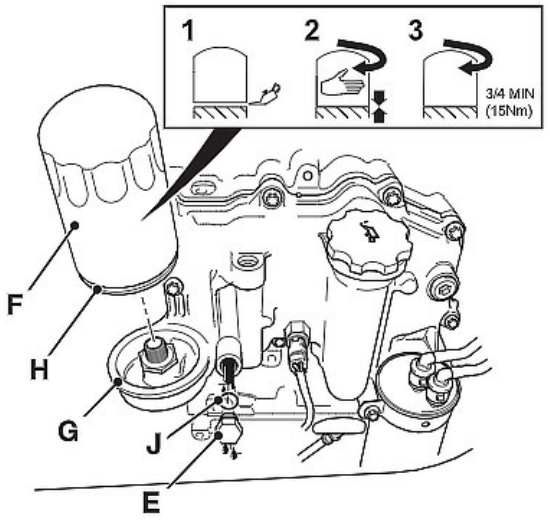

C012110-5

Fig 29.

Replacement

Replacement is the opposite of the removal procedure.

2 Stage Booms (P2)

Removal

1 Position the boom so that the fork carriage A can be safely supported when it is disconnected from the boom assembly.

2 Park the machine and make it safe. Vent the hydraulic pressure. Obey the care and safety procedures. ⇨ *Related Topics (B-5)*

3 Support the fork carriage A.


4 Remove the securing bolt and remove the pivot pin B from the tipping link C.


5 Remove the securing bolt D and remove the pivot pin E.


6 Remove the fork carriage A.

Replacement

Replacement is the opposite of the removal procedure.

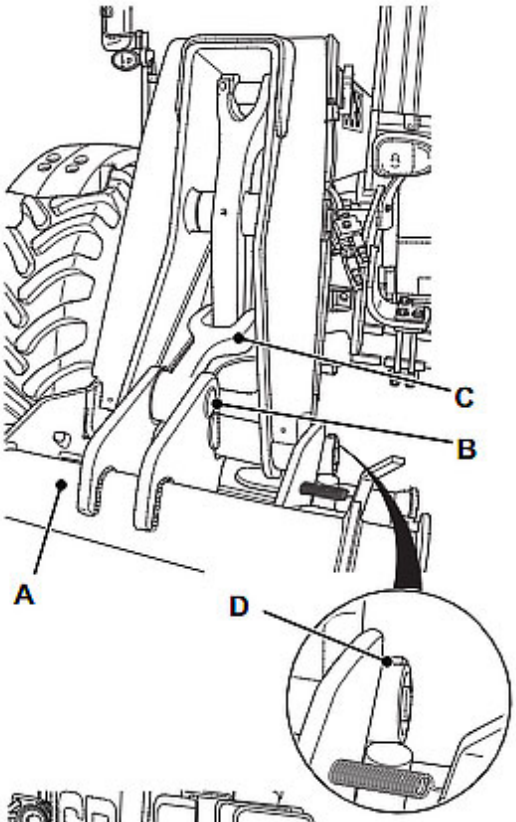

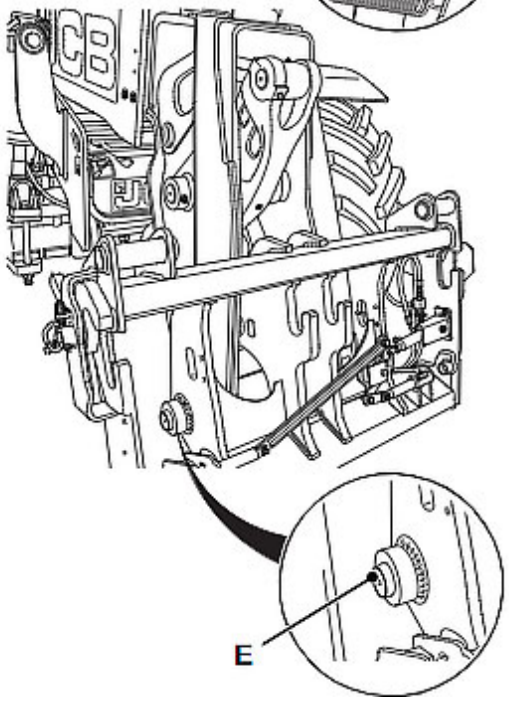

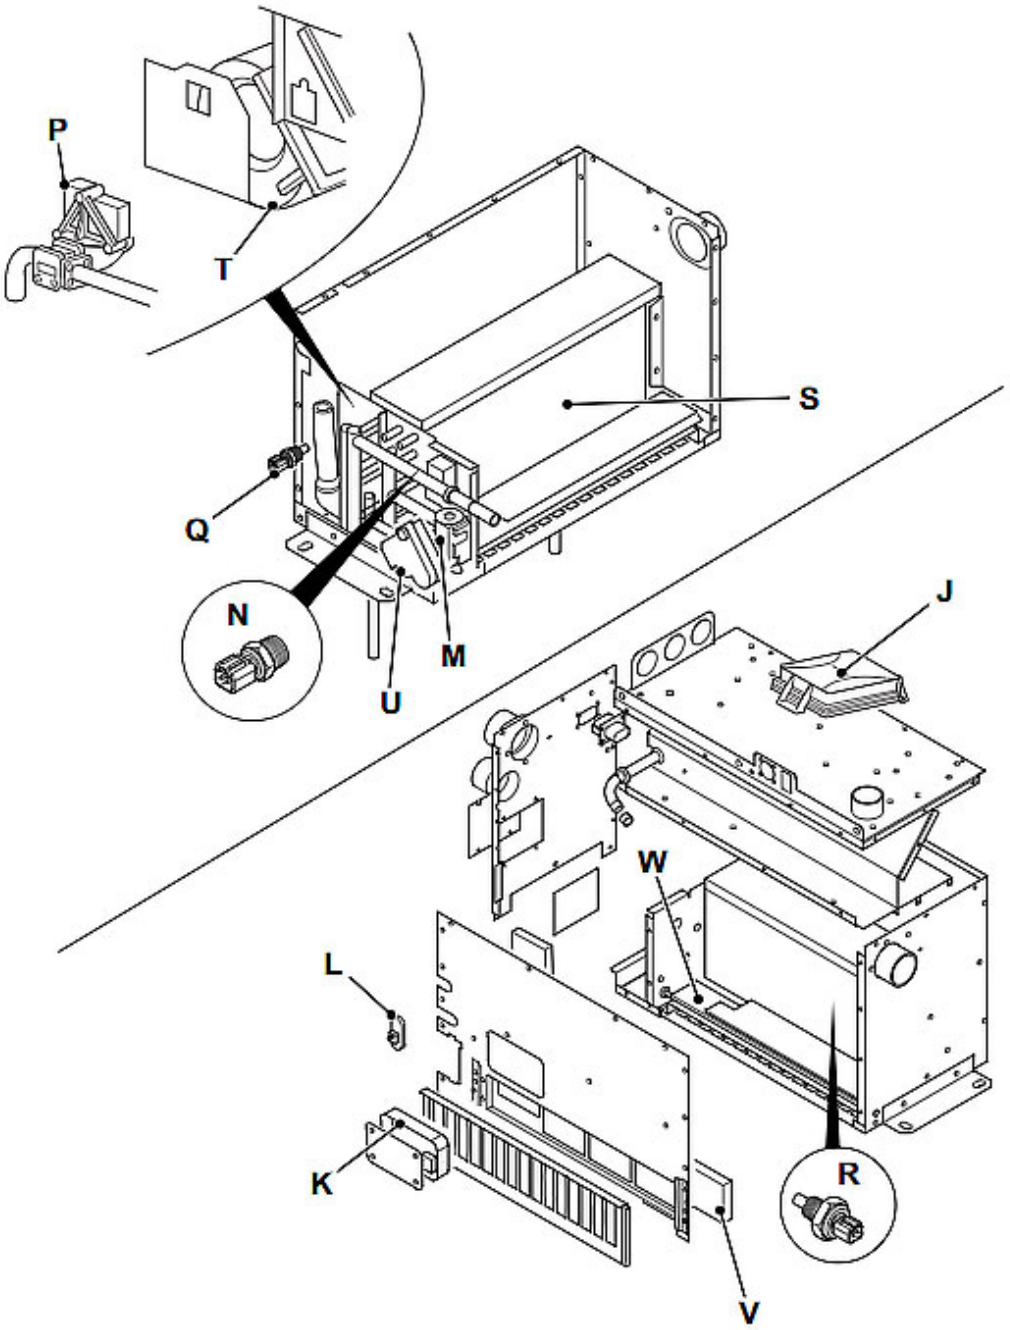

T014090-C1

Fig 2. ATC HVAC unit components

Instrukcje serwisowe do wybranego modelu maszyny marki JCB z lat 1988-2019r.

Format: PDF, język polski.

Kontakt: tel. 696 915 311
Poszukujesz instrukcji napraw i nie możesz znaleźć jej na naszym sklepie? Napisz do nas maila podając w nim markę i model maszyny a także rok produkcji.
dtrpdf@gmail.com