
Dane aktualne na dzień: 15-11-2026 02:43

Link do produktu: https://www.specdiag.pl/komatsu-pw150-instrukcje-napraw-schematy-instalacji-p-837.html

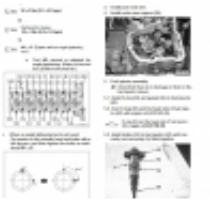


Komatsu PW150 - Instrukcje Napraw + Schematy Instalacji

Cena **350,00 zł**

Opis produktu

Komatsu PW150 - instrukcje napraw - schematy instalacji.
Format PDF
Język angielski.

Circuit diagram related to engine preheater/starting motor/charging system

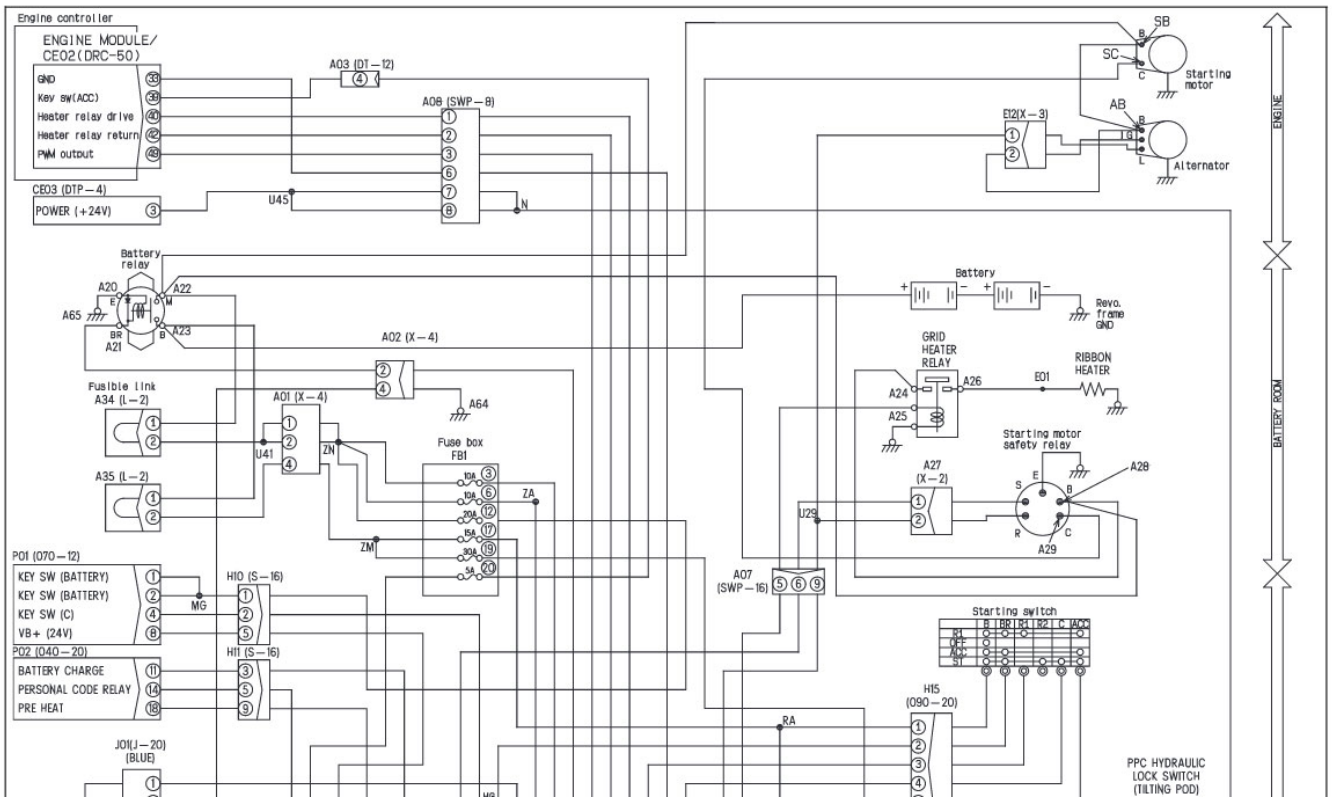

N·m **90 ± 3 Nm {9.2 ± 0.3 kgm}**


2] .

N·m Recheck the torque:
90 ± 3 Nm {9.2 ± 0.3 kgm}


3]

N·m **90° ± 5°** (Tighten with an angle tightening tool.)


a Tool **A6**: wrench is adopted for angle tightening. (Refer to the tool list.) (Refer to the tool list.)

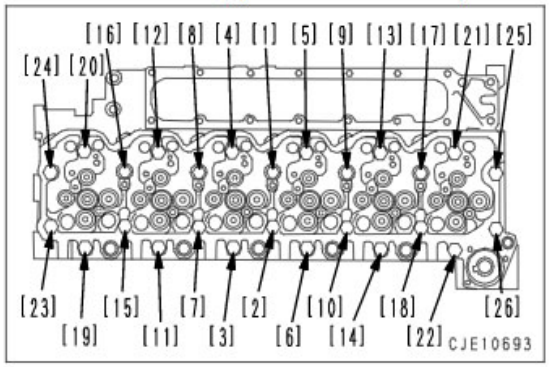

- When an angle tightening tool is not used:
  Put marks on the cylinder head and bolts with a felt-tip pen, and then tighten the bolts an additional **90° ± 5°**.

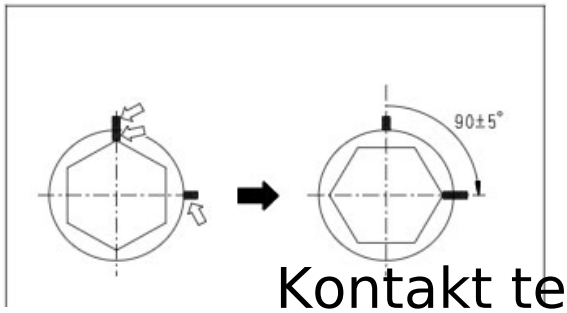

3. Install push rods (57).
4. Install rocker arm support (58).

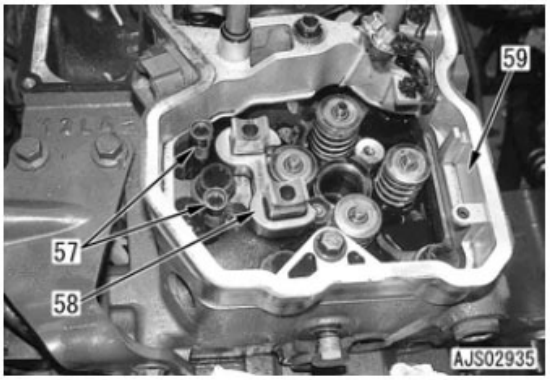


5. Fuel injector assembly
   ✗ Check that there is no damage or dust on the fuel injector sleeve.

5.1. Install O-ring (63) and gasket (64) to fuel injector (62).

5.2. Coat O-ring (63) and the head side of fuel injector (62) with engine oil (EO15W-40).

O-ring (63) and the head side of fuel injector (62): **engine oil (EO15W-40)**

5.3. Install holder (65) to fuel injector (62) with concavity and convexity (A) fitted together.

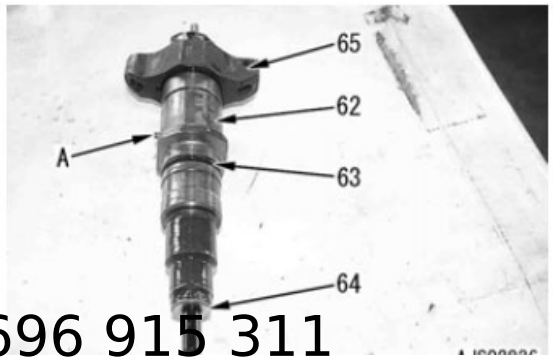

Kontakt tel: 696 915 311

motodiagnostyka2010@gmail.com